


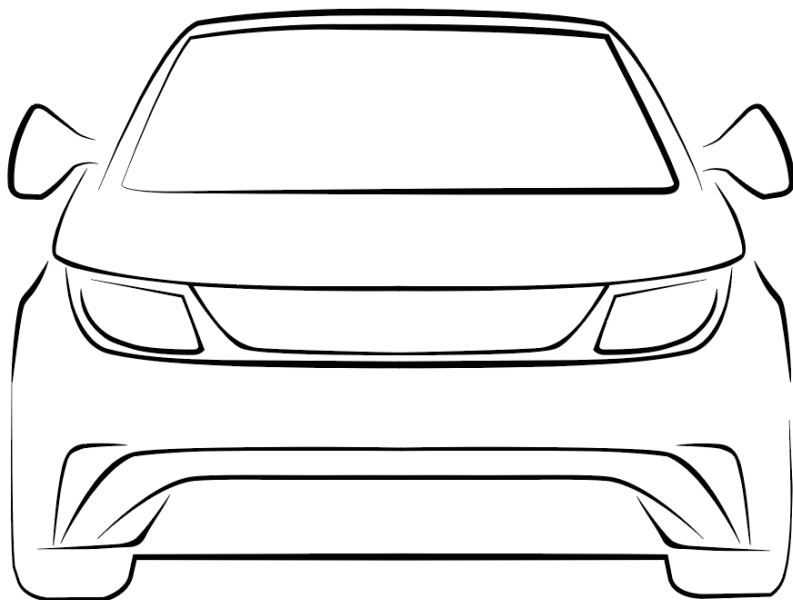

BYD DOLPHIN

OWNER'S MANUAL



Foreword

Thank you for choosing BYD. To better use and maintain the vehicle, please read this manual carefully and keep it for future reference.

Special instructions: BYD Auto Industry Co., Ltd. recommends that you choose genuine spare parts and use, maintain, and repair the vehicle in accordance with this manual. The use of non-genuine spare parts to replace or modify the vehicle will affect the performance of the entire vehicle, especially its safety and durability. Vehicle damage and performance issues caused thereby will not be covered by the warranty. In addition, vehicle modifications may also violate national laws and regulations and local government regulations.

Thank you again for choosing BYD. Your valuable comments and suggestions are welcome. To enjoy better services, please provide your accurate contact information. If there is any change to the information, contact a BYD authorised dealer or service provider in a timely manner to update the information in the system. You are also advised to pay attention to the relevant national laws and regulations and local policies, and register the vehicle as soon as possible; otherwise vehicle registration may fail.

Pay attention to the "WARNING", "CAUTION", and "REMINDER" symbols in this manual, and follow the instructions carefully to avoid injury or damage. These symbols are defined as follows:

WARNING

Items that must be observed to ensure personal safety.

CAUTION

Items that must be observed to avoid damage to the vehicle.

REMINDER

Items that must be observed to facilitate maintenance.



is a safety mark to indicate an operation that should not be performed or an event that should not happen.

The descriptions marked with the asterisk (*) in this manual are specific to some model configurations, and applicable only when the vehicle has these configurations. The picture

used is taken from one of these configurations. If there is any difference from the vehicle you purchased, refer to the actual vehicle.

This manual is expected to help you use the product correctly, and does not provide any description of the configuration and software version of this product. For details about the product configuration and software version, please refer to the contract (if any) related to this product, or consult the dealer who sold the product to you.

Sustainability

A pure electric passenger car, BYD DOLPHIN is the kind of environmentally sustainable product that BYD is dedicated to making. Visit <https://reach.bydeurope.com> for environmentally-related information about the vehicle.

It is everyone's responsibility to protect the environment. Please use this vehicle properly and dispose of any waste and cleaning materials according to local laws and regulations.

Contact Us

If you require assistance or clarification on policies or procedures, please contact the customer service centre.

E-mail: Autoservice.contact@byd.com

Call 00800-10203000 for 24/7 roadside assistance or customer service (9:00-18:00, Monday-Saturday).

Copyright © BYD Auto Industry Co., Ltd. All rights reserved.

No part of this document may be reproduced, copied, stored, translated, or transmitted electronically or in any other form without prior written consent and authorisation of BYD Auto Industry Co., Ltd.

All rights reserved

Illustration Index

Exterior.....	7
Dashboard.....	8
Interior.....	9
Doors.....	10

Safety

Seat Belts.....	12
Seat Belt Overview.....	12
Using Seat Belts.....	12
Airbags.....	15
Airbag Overview.....	15
Airbag Types.....	16
Driver and Front Passenger Airbags.....	16
Front Side Airbags.....	17
Curtain Airbags.....	17
Airbag Triggering Conditions and Precautions.....	18
Child Restraint System.....	21
Child Restraint System.....	21
Anti-theft Alarm System*.....	27
Anti-theft Alarm System*.....	27
Data Collection and Processing.....	28
Data Collection and Processing.....	28

Instrument Cluster

Instrument Cluster.....	34
Instrument Cluster View.....	34
Instrument Cluster Indicators.....	35

Controller Operation

Doors and Keys.....	44
---------------------	----

Keys.....	44
Locking/Unlocking Doors.....	48
Smart Access and Start System.....	52
Child Protection Lock.....	54
Seats.....	54
Seat Precautions.....	54
Adjusting Front Seats.....	55
Folding Rear Seats.....	56
Head Supports.....	56
Steering Wheel.....	58
Steering Wheel Switches.....	58
Adjusting the Steering Wheel.....	60
Wipers.....	61
Wiper Switch.....	61
Replacing Wiper Blades.....	63
Mirrors.....	64
Rearview Mirror.....	64
Side Mirrors.....	65
Switches.....	65
Light Switches.....	65
Driver's Door Switches.....	68
Passengers' Window Switches.....	70
Odometer Switch.....	70
Mode Switches.....	70
Front Passenger Airbag Switch.....	71
Emergency Call (E-Call).....	72
Hazard Warning Light Switch.....	73
Sunshade*.....	73
Interior Light Switches.....	74

Using and Driving

Charging/Discharging.....	78
Charging Instructions.....	78
Charging.....	82

Discharging Instructions.....	89
Charge Port Immobiliser System.....	90
Batteries.....	91
High-Voltage Battery.....	91
Low-Voltage Battery (12 V).....	94
Usage Precautions.....	96
Break-in Period.....	96
Trailer Towing.....	96
Driving Safety Precautions.....	97
Vehicle Use Suggestions.....	97
Carrying Luggage.....	98
Wading into Water.....	99
Fire Prevention.....	100
Starting and Driving.....	101
Starting the Vehicle.....	101
Driving.....	103
Gear Shift Controls.....	104
Electronic Parking Brake (EPB).....	104
Automatic Vehicle Hold (AVH).....	106
Driving Precautions.....	108
Driver Assistance.....	111
Adaptive Cruise Control (ACC).....	111
Intelligent Cruise Control (ICC).....	115
Forward Collision Warning (FCW) & Automatic Emergency Braking (AEB)...	117
Front Cross Traffic Alert (FCTA) and Front Cross Traffic Brake (FCTB).....	120
Traffic Sign Recognition (TSR).....	121
Intelligent Speed Limit Control (ISLC).....	122
Intelligent High Beam Control (IHBC).....	123
Lane Departure Assist (LDA).....	124
Emergency Lane Keeping Assist (ELKA).....	126
Blind Spot Assist (BSA).....	127
Driver Monitoring System (DMS)*	129
Driver Attention Warning*	130

Child Presence Detection (CPD).....	130
Direct Tyre Pressure Monitoring System.....	131
Acoustic Vehicle Alerting System (AVAS).....	133
Around View Monitor (AVM).....	134
Parking Assist System.....	135
Driving Safety Systems.....	138

In-Vehicle Devices

Infotainment System.....	144
Infotainment Touchscreen.....	144
Navigation Bar.....	145
Gestures and Responses.....	145
OTA Updates.....	145
BYD Assistant.....	146
Bluetooth Call.....	146
File Management.....	146
Phone Projection*	147
A/C System.....	152
A/C Buttons.....	152
A/C Operation Interface.....	154
A/C Function Definitions.....	154
Usage Precautions.....	156
Vents.....	157
BYD App.....	157
About BYD App.....	157
Account Registration.....	157
Vehicle Condition and Control.....	157
Individual Centre and Vehicle Management.....	158
Storage.....	158
Door Bins.....	158
Bill Box.....	158

Dashboard Central Storage Compartment.....	158
Glove Box.....	159
Centre Console Storage Compartment.....	159
Cup Holder.....	159
Glasses Case*.....	160
Seatback Pockets.....	160
Other Devices.....	161
Sun Visor.....	161
Grab Handles.....	161
USB Ports.....	161
SD Card Slot*.....	162
12V Auxiliary Power.....	162
Wireless Phone Charger*.....	163
Cargo Cover.....	164
Hook.....	164
Window Breaker.....	165

Maintenance

Maintenance Precautions.....	168
Maintenance Cycle and Items.....	168
Regular Maintenance.....	170
Regular Maintenance.....	170
Corrosion Prevention.....	171
Paint Maintenance Tips.....	171
Exterior Cleaning.....	172
Interior Cleaning.....	173
Self-Maintenance.....	175
Self-Maintenance.....	175
Glass Roof Maintenance*.....	177
Vehicle Storage.....	177
Bonnet.....	178
Coolant System.....	178
Braking System.....	179

Windscreen Washer.....	179
A/C System.....	180
Wiper Blades.....	180
Tyres.....	181
Fuses.....	184

When Faults Occur

When Faults Occur.....	186
Reflective Vest.....	186
If Smart Key Battery Is Exhausted.....	186
Emergency Shutdown System.....	186
Vehicle Fire Rescue.....	187
Collision Rescue.....	187
If the Vehicle Needs Towing.....	188
If a Tyre Goes Flat.....	190

Specifications


Vehicle Data.....	196
Vehicle Data.....	196
Other Information.....	201
Vehicle Identification.....	201
Warning Labels.....	202
Transponder Mounting Position.....	203
Declarations of Conformity.....	204
Declarations of Conformity.....	204
Radio Frequency.....	204

Abbreviations

Abbreviations.....	211
---------------------------	------------


Illustration Index

Exterior

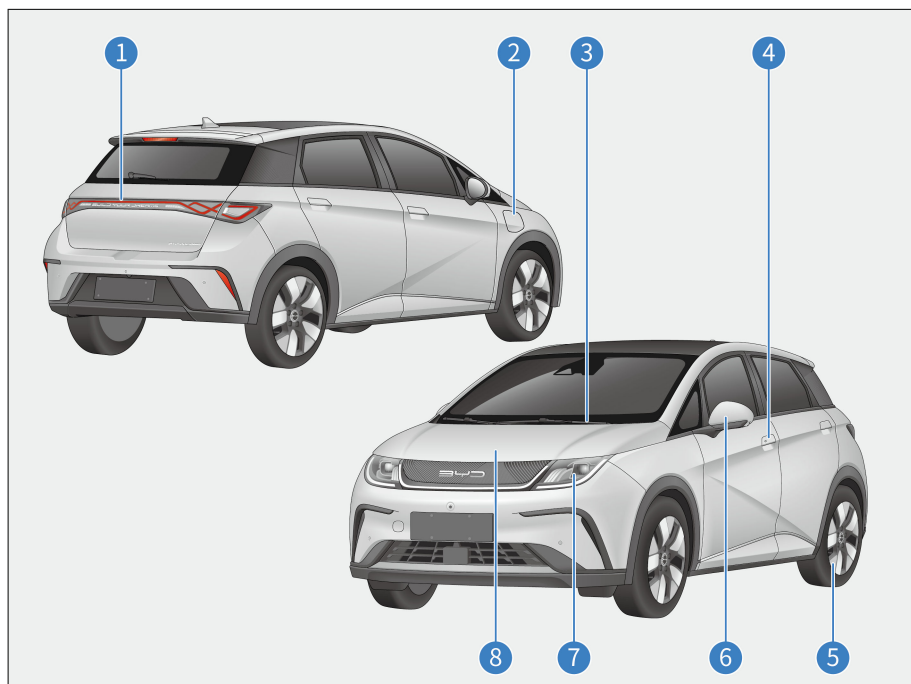


- | | | | |
|---|--|---|-------------------------------|
| 1 | Boot Lid P51 | 5 | Tyres P181 |
| 2 | Charge Port Door P91 | 6 | Power Side Mirror P65 |
| | Using Mode 2 Charging Cable P82 | 7 | Combination Lights P65 |
| | Using AC Charging Piles P84 | 8 | Bonnet P178 |
| | Using DC Charging Piles P85 | | Cooling System P178 |
| 3 | Wiper P61 | | Washer P179 |
| 4 | Doors P49 | | Brake Fluid P179 |

Dashboard

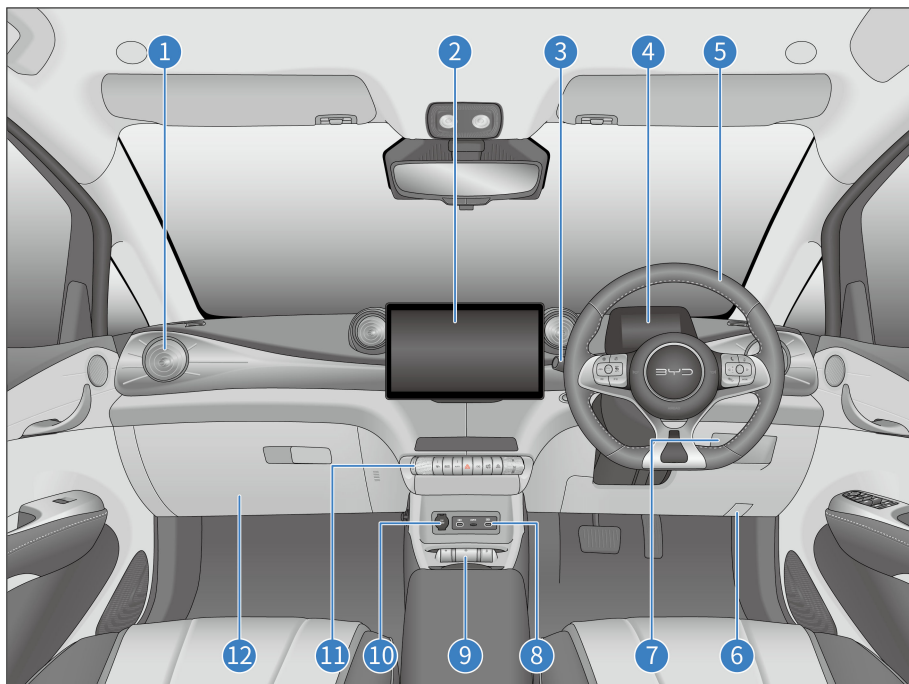


- | | |
|--|---|
| 1 Vents P157 | 9 Electronic Parking Brake (EPB) Switch P104 |
| 2 Infotainment Touchscreen P144 | Automatic Vehicle Hold (AVH) Switch P106 |
| 3 Light Switches P65 | ESC OFF Switch P138 |
| 4 Instrument Cluster P34 | 10 12V Power Outlet P162 |
| 5 Steering Wheel P60 | 11 Mode Switches P70 |
| Steering Wheel Switches P58 | Gear Shift Controls P104 |
| 6 Bonnet Handle P178 | A/C ON/OFF Button P152 |
| 7 Bill Box P158 | 12 Glove Box P159 |
| 8 Charge Port P161 | |

Interior

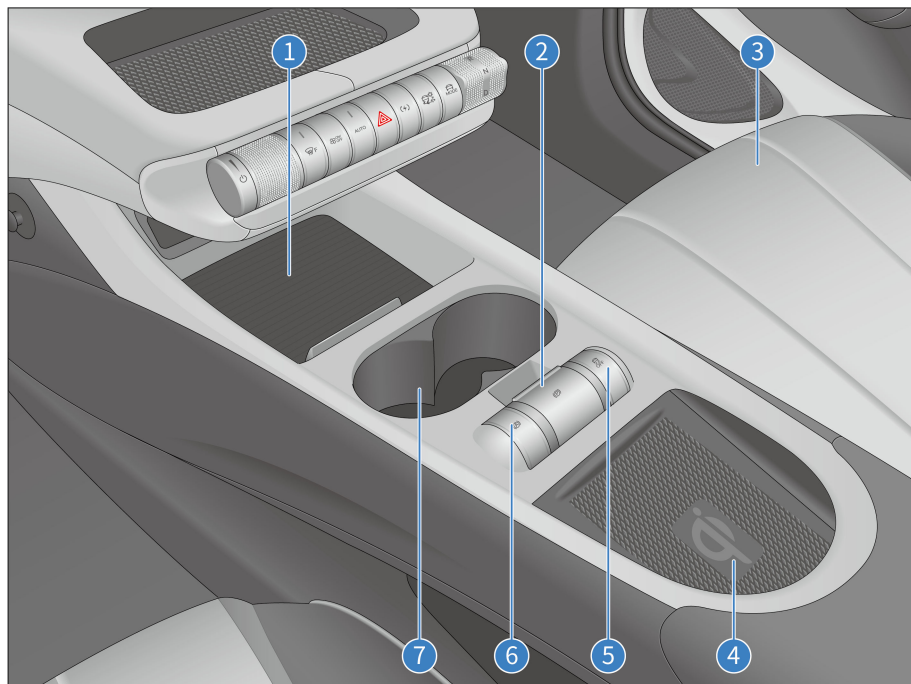

- | | | | |
|---|--|---|---|
| 1 | Centre Console Storage Compartment P159 | 5 | ESC OFF Switch P138 |
| 2 | Electronic Parking Brake (EPB) P104 | 6 | Automatic Vehicle Hold (AVH) Switch P106 |
| 3 | Seats P54 | 7 | Cup Holder P159 |
| 4 | Wireless Phone Charger* P163 | | |

Doors

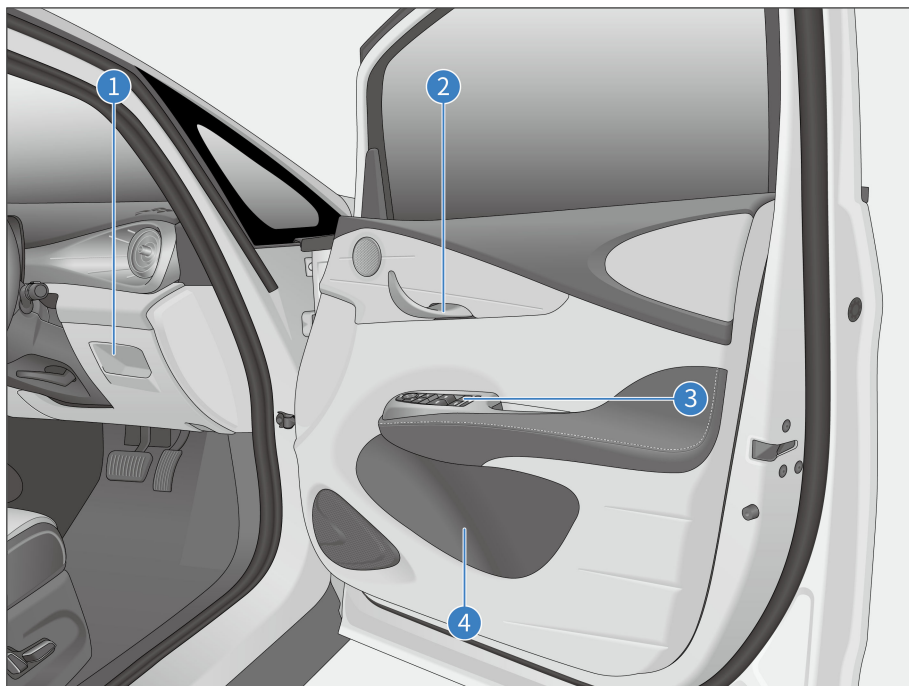

1 Bill Box **P158**

2 Interior Door Handle **P48**

3 Driver's Door Switches **P68**

Window Lock Switch **P69**

Central Locking **P69**

Side Mirror Switches **P65**

4 Door Bins **P158**

01

SAFETY

Seat Belts.....	12
Airbags.....	15
Child Restraint System.....	21
Anti-theft Alarm System*	27
Data Collection and Processing.....	28

Seat Belts

Seat Belt Overview

Studies have shown that proper use of seat belts can significantly reduce casualties in emergency braking, sudden steering or collisions. Read the following information carefully and observe it strictly.

CAUTION

- Before driving, make sure all occupants are properly buckled up to prevent personal injury or even death in emergency braking or in a collision.
 - The seat belts are designed primarily to fit adults and are not intended for children. Make sure to choose a child restraint system appropriate for your child's age and size (see **P23**).
 - If a seat belt is damaged or malfunctions, immediately contact a BYD authorised dealer or service provider for confirmation and handling. Until then, do not use the corresponding seat.
-
- All occupants should always fasten their seat belts while in the vehicle to avoid personal injury or death in case of an accident.
 - Children are encouraged to travel on the rear seats and must be buckled up in appropriate child restraint systems. In case of emergency braking or a collision, unprotected children may be seriously injured and their lives may be endangered. Likewise, do not allow children to ride on someone's lap. This will render the children inadequately protected.

Emergency Locking Retractor Function*


- When the vehicle turns sharply or brakes suddenly, when there is a collision, or when the occupant leans forward too quickly, the seat belt automatically locks to effectively restrain and protect the occupant.
- When the vehicle travels smoothly, seat belts are pulled out and retracted as the occupants move slowly and smoothly, allowing the occupants to move freely.
- If the seat belt locks due to sudden retraction, pull on the seat belt webbing to create retractable slack to pull out the seat belt.

Pretensioner and Force Limiter Function*

When a severe front collision occurs and the triggering conditions of the pretensioner are met, the pretensioner quickly retracts part of the seat belt and locks it to improve the protection of the occupant. The force limiter limits the seat-belt restraint force to the occupant's body to a certain extent so as to avoid injury to the occupant due to an excessive restraint force.

Using Seat Belts


1. Adjust the seat position and seatback angle (see **P55**).
 2. Adjust the position of the three-point seat belt.
- Keep the correct sitting posture and pull out the shoulder belt diagonally across the entire shoulder without contacting the neck or falling from the shoulder. Position the lap belt as low as possible around the hip.

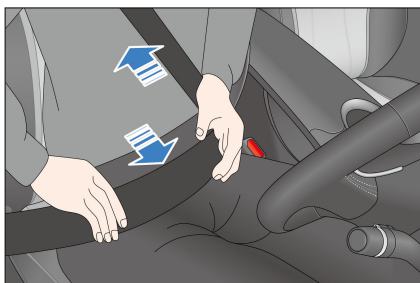

! CAUTION

- The shoulder belt should cross the centre of the shoulder. The seat belt should be far from the neck and not liable to slip from the shoulder; otherwise, it cannot function well in the event of emergency braking or accident and may even cause severe injury.
- The lap belt should be positioned as low as possible across the hip to prevent any injury caused by pressing against the abdomen in case of an accident.
- The seat belt should be fitted tight to the body for better protection.


3. Insert the latch into the buckle until it clicks, and then pull it back to make sure it is firmly locked. Do not fasten the belt with any part of the strap twisted.

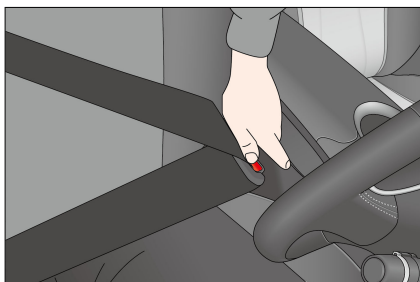

4. Unlock the seat belt.

- Press the red unlock button on the buckle. The latch plate pops out, and

the seat belt automatically retracts. If the seat belt does not retract smoothly and automatically, pull it out and check whether it is twisted.

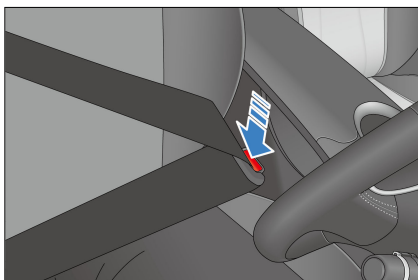

! CAUTION

- One seat belt is for one occupant only. Do not share a seat belt with another occupant, not even with a child.
- Avoid travelling with the seatback leaning too far back. The seat belt protection performs best when the seatback is upright.
- Make sure that no seat belt or its spring bolt/buckle becomes pressed by the door; otherwise the seat belt may be damaged.
- Check the seat belts regularly for cuts, wear, looseness, and other abnormalities. If any problem is found, contact a BYD authorised dealer or service provider for confirmation and handling. Until then, do not use the corresponding seat.
- Do not remove, disassemble or modify the seat belts without permission.
- After an accident, have the seat belts checked at a BYD authorised dealer or service provider. The associated seat belts and pyrotechnic lap



CAUTION

pretensioners* must be replaced if the pretensioner function has been activated.

- In the event of a severe accident, regardless of whether the seat belt has an apparent damage, replace it together with the seat assembly, and thoroughly check the airbag system.
- Pregnant women need to fasten the seat belts properly and position the lapbelt as low as possible around the hips to avoid serious injury caused by the intense lap belt forces against the abdomen in an accident.
- Do not insert foreign objects such as coins and clips into the buckle as they prevent proper connection between the latch and buckle.
- Use an approved model whenever you replace the seat belt.



REMINDER

- For normal functioning of the rear seat belt, ensure that its latch is inserted into the corresponding buckle during use. The driver should remind occupants to wear seat belts properly.
- The driver should ensure that all occupants are wearing seat belts before driving the vehicle.

Seat Belt Reminders

If any occupant has not buckled up after the vehicle is started, visual and audible alarms go off and continue until the corresponding seat belt is properly fastened.

- Seat belt reminder

Any unfastened seat belt will trigger corresponding indicator to light up and flash.

- Display of unfastened seat belt

The indicator for the seat with unfastened seat belt lights up.

- Seat belt reminder for front passenger

If the driver or front passenger has not buckled up after the ignition is switched on, the seat belt reminder indicator and the indicator associated with the corresponding seat light up. If the seat belt remains unfastened while driving, in addition to the reminder indicator, an audible alarm is given to alert the driver and the occupant.

- Seat belt reminder for rear passengers

With the ignition on, if any rear passenger does not buckle up, the seat belt reminder indicator and the indicator associated with the corresponding seat light up. While the vehicle is in motion, when only rear seats are loaded with occupant(s), who have not buckled up, the seat belt reminder indicator is on, and an audible alarm is given to alert the driver and the occupant.

- When the driver, the front passenger, and rear passengers have all buckled up, the seat belt reminder indicator and all indicators displayed for the corresponding seats turn off.



REMINDER

- In the event of abnormality or function failure, contact a BYD authorised dealer or service provider. Do not use the corresponding seat until the functions return to normal.
- When driving, make sure all occupants have their seat belts

 REMINDER

properly fastened to prevent personal injury or even death in emergency braking or in a collision.

Airbags


Airbag Overview

- The airbag system is a part of supplemental restraint system and also a complement to seat belts. When the vehicle is involved in a severe collision meeting the airbag system deployment conditions, relevant airbags deploy rapidly, and along with seat belts, provide additional protection for heads and chests of the occupants, reducing risk of personal injuries or even death.
- Airbags are divided into front and side types, according to the type of collision. The front airbags include a driver airbag and a front passenger airbag, while side airbags include side airbags, curtain airbags, and the far side airbag*.
- As an integral part of the vehicle's passive safety protection system, the airbag system does not replace seat belts and must be used in combination with seat belts to maximise protection.

 REMINDER

- Occupants must sit in a proper position to maximise the protection provided by seat belts and the airbag system.
- Do not disassemble or assemble airbag components.
- If the seatbacks get wet from rain or splashes, the side airbag system may not work properly.
- Do not use seat covers, as they restrict airbag deployment on the corresponding side in an accident.
- Do not place anything between the side airbag and the occupant.
- Do not apply excessive force to the side of seats equipped with side airbags.
- After a collision, even if the airbag did not deploy, and the pretensioner did not lock the seat belt, to ensure the normal operation of the airbag system, contact a BYD authorised dealer or service provider for inspection as soon as possible.
- If the vehicle is exposed to water (wet carpet or vehicle submerged in water) or damaged by water, disconnect the low-voltage battery and do not start the vehicle. Otherwise, the airbags may deploy, resulting in serious injury or death.

Airbag Types

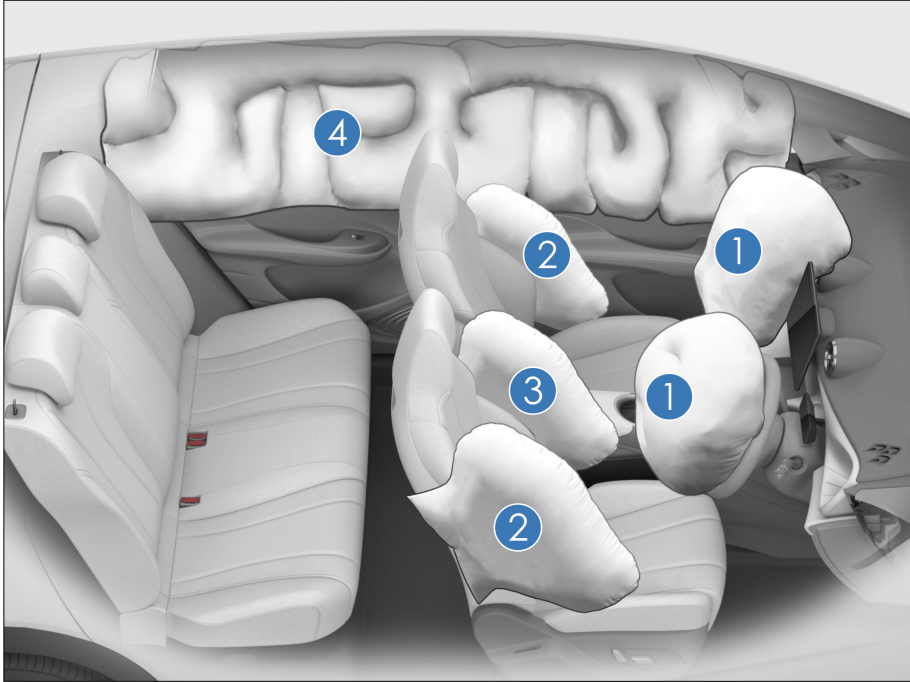

① Driver and front passenger airbags

② Front side airbags

③ Front far side airbag

④ Curtain airbags

Driver and Front Passenger Airbags

The driver airbag is mounted inside the steering wheel and the front passenger airbag is mounted inside the dashboard, both marked with "AIRBAG". The airbags deploy a moderate to severe impact is detected with the ignition on and the triggering conditions are met.

Front airbag deployment

- In moderate to severe frontal crashes, a sensor detects a sharp deceleration

and sends a signal to the ECU to trigger the front airbags immediately.

- When there is a frontal crash, the seat belt secures the occupant's lower body and torso and the airbag cushions and protects the occupant's head and chest.
- When the severity of the impact does not reach the airbag deployment threshold, seat belts provide enough protection while airbags provide minimal additional protection.
- The front airbag deflates immediately after inflation, without affecting the

driver's vision and ability to operate the steering wheel or other controls.

- The airbag deploys within a thousandth of a second.
- A loud noise will be heard when the airbag deploys. It will not cause injury but may cause tinnitus or temporary deafness.
- The airbag deployment may release smoke and dust. Although these substances are non-toxic, passengers with respiratory conditions may experience temporary discomfort. If the discomfort is severe, seek medical attention immediately.
- The front passenger airbag is controlled by the passenger airbag switch. See **P71** for details.

WARNING

- No accessories, such as telephone holders, cups, ashtrays, can be installed on airbag covers or within their impact range. Otherwise, airbag deployment will increase the risk of injury in an accident.

Front Side Airbags

The vehicle is equipped with side airbags for the left and right front seats (installed in the outer edges of the front-row seatbacks and marked with "AIRBAG").

- When a moderate to severe impact is detected with the ignition on and the triggering conditions are met, the side airbag deploys to protect the occupant's chest.
- Generally, only the airbag on the impacted side deploys in the event of a side impact.

- If the impact occurs on the passenger side, the airbag on the passenger side deploys even if there is no passenger in the seat.
- For optimal side airbag protection, occupants must have their seat belts fastened and sit upright against the seatback.

Front far side airbag:

- The vehicle you purchased is equipped with a front far side airbag (installed in the inner edge of the driver's seatback and marked with "AIRBAG").
- When a moderate to severe impact is detected with the ignition on and the triggering conditions are met, the far side airbag deploys to protect the heads and shoulders of the driver and the front passenger.
- If the impact occurs on the front passenger's side, the far side airbag deploys even if there is no passenger in the seat.
- For optimum protection from the driver far side airbag, the occupant must have the seat belt fastened and sit in an upright position.

In a vehicle equipped with seat side airbags:

- Prevent the seatbacks from getting wet. If the seatbacks get wet from rain or splashes, the side airbag system may not work properly.
- Do not cover or replace seatback covers on your own. Unsuitable seatback covers may prevent airbag deployment.

Curtain Airbags

- The vehicle is equipped with left and right curtain airbags, mounted at the junction of the side wall and the ceiling

(marked with "AIRBAG" on the A, B and C pillars).

- When a moderate to severe impact is detected with the ignition on and the triggering conditions are met, the curtain airbag deploys to protect the head of the occupant on the side of collision.

WARNING

- For optimum curtain airbag protection, the occupant must be buckled up and sit in an upright position.

Airbag Triggering Conditions and Precautions

Airbag Triggering Conditions


- Airbag triggering conditions: In the event of a vehicle collision, whether an airbag will be triggered is decided by factors such as the amount of collision energy, accident type, collision angle, obstacles and vehicle speed. The airbag system may be triggered in special collisions.
- The airbag system does not always work in any accident, and generally it will not be triggered in the event of a minor frontal collision, side collision, rear collision or rollover. In this case, the driver and passengers are protected by their properly fastened seat belts.
- Determinants of airbag system triggering: Decision is made by comparing the deceleration curve, generated in the collision and obtained by the ECU, and the set value. If signals, such as the deceleration curve generated and measured in the collision, are lower than the respective

reference values preset in the ECU, the airbag system will not be triggered even if the vehicle may have been seriously deformed in the accident.

- The ECU of the BYD airbag system has been set up with considerations of common misuse and road conditions. However, due to the increasing changes in causes and forms of vehicle collisions, for your safety, please strictly follow this user manual, use the vehicle correctly, and avoid its misuse. Otherwise, there is no guarantee that the airbags will achieve their expected effect.

Cases When Airbags May Be Deployed

- ① The vehicle's nose hits the ground when crossing a deep groove.
- ② The vehicle hits a bump or curbstone.
- ③ The vehicle's nose hits the ground when going down a steep slope.
- ④ One side of the vehicle is hit by another vehicle.

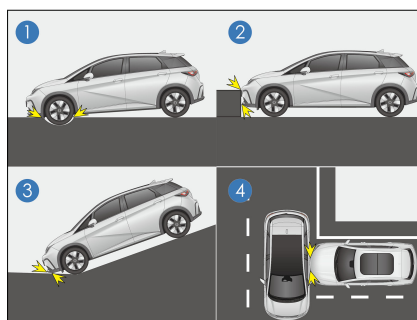


Cases When Airbags May Not Be Deployed

- ① The vehicle hits a concrete column, tree, or other slim objects.
- ② The vehicle goes under a truck or another large vehicle.

③ The tail of the vehicle is hit by another vehicle.

④ The vehicle rolls over.

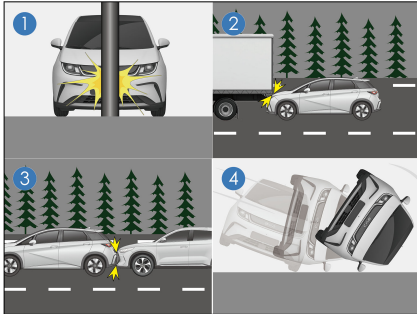


⑤ The vehicle hits a wall or a vehicle at a side other than the front side.

⑥ Parts other than the passenger compartment receive side impact.

⑦ The lateral side of the vehicle is hit diagonally.

⑧ The lateral side of the vehicle hits a columnar object.

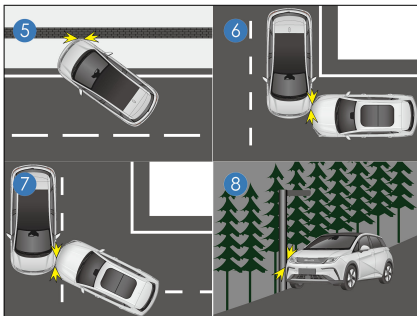

! WARNING

- Airbags are designed for specific models. Any changes to suspension, tyre size, bumpers, chassis and factory-equipped devices may adversely affect the airbag system. Users must not use any parts of the airbag system

! WARNING

on other car models; doing so may lead to failure of the airbag system.

- Drivers should maintain a distance of at least 10 in (25 cm) between their chest and the steering wheel, in order for the system to provide the most effective driver protection.
- When the airbag system deploys, the high temperature gas will be discharged from the airbag vent. Please avoid touching its parts and keep your hand in the correct position when holding the steering wheel, otherwise there is a possibility of burns when the airbag deploys.
- Fasten your seat belt and sit properly while the vehicle is in motion. If the seat belt is not fastened, and the occupant is leaning forward or sitting improperly, airbag deployment can increase the risk of injury.
- Do not paste stickers on, cover or decorate the button area or the centre cap of the steering wheel, the right side surface of the dashboard at and near the location of the airbag, the surface of A, B, and C-pillar trims, or the surface at and near the location of side airbags. Clean these surfaces with a dry or damp cloth, without applying too much pressure.
- A child is not to be seated in the front passenger seat, nor are they to ride sitting on a front passenger's lap, to prevent serious injury or even casualty caused by airbag deployment.

WARNING


- Side airbags and side curtain airbags deploy quickly with high impact forces. Occupants must not lean against the doors of vehicles equipped with these airbags while these vehicles are in motion. Failure to do so could result in serious injury or even death.
- Do not place any other accessories or items within the action range of side curtain airbags, including the windscreen, side door glass, A-pillar trim, ceiling, B-pillar trim, C-pillar trim and auxiliary handles. When the side curtain airbag deploys, the accessories or items will be thrown by the impact force from the side air curtain airbag, or the side curtain airbag may not deploy normally, resulting in serious injury or even death.
- When transferring vehicle ownership, make sure to pass on all of the vehicle's documents and keep the new ownership informed of airbag conditions.
- Do not modify or replace seats or trims of the seats with side airbags. These changes may prevent normal deployment of side airbags, and thereby cause airbag system failure or unintended deployment of side airbags, resulting in serious injury or death.
- Do not disassemble or repair the A-pillar trim, ceiling, B-pillar trim or C-pillar trim, which contain side curtain airbags. These changes can cause failure of the airbag system or accidental deployment of curtain airbags, which may

WARNING


- cause serious injury or even death.
- Do not change any component of the airbag system, including any corresponding label. It is recommended that any operation done to the airbags be performed by a BYD authorised dealer or service provider.
- Airbags can only provide one-time accident protection. Once the airbag is triggered or damaged, the airbag system must be replaced.
- Follow safety regulations and procedures related to the scrapping of parts of the vehicle or its airbag system.
- The airbag system has strong anti-interference and anti-disturbance resistance to electromagnetic fields around it. However, to avoid accidents, do not use the vehicle in an electromagnetic environment that violates national regulations.
- The airbag system of this vehicle is designed with full consideration of domestic common misuses and road conditions. However, in order to avoid accidents, do not have the bottom of the vehicle impacted or drive roughly in harsh road conditions.
- This vehicle's airbag system has been fully verified to match the vehicle's original wiring harness system. Any wiring harness modification or alteration may cause the airbags to deploy mistakenly under normal conditions or fail to deploy in the event of a collision.

It is recommended that you contact a BYD authorised dealer or service provider immediately if any of the following situations occurs.


- Any airbag has deployed.
- The airbag fault warning light  comes on abnormally on the instrument cluster.
- There is a collision with the front of the vehicle (highlighted area shown), but the airbags do not deploy.

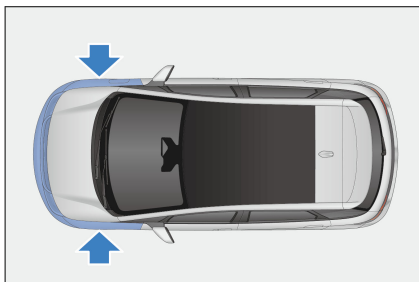

- The airbag cover (highlighted area shown) has been scratched, cracked or otherwise damaged.

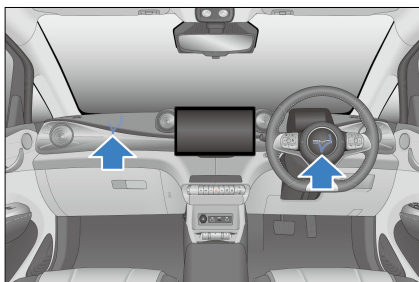

- Airbags need to be removed, disassembled, installed or repaired.
- There is a collision with the vehicle door (highlighted area shown) that is not adequate to cause the airbag to deploy.

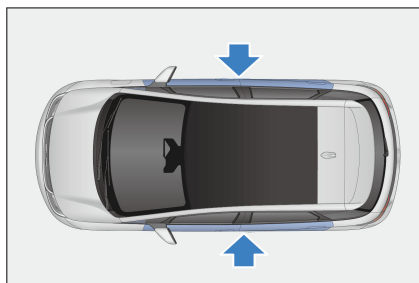

- The surface of the seat with a side airbag is scratched, cracked, or damaged similarly.
- Decorative (liner) parts at A-pillar with built-in curtain airbags, roof beam and C-pillar are scratched, cracked, or damaged similarly.

Child Restraint System

Child Restraint System

Child restraint systems provide good protection to your child in an accident. For the child's safety, please carefully read the instructions provided with the child restraint and in this manual before installing a child restraint.

WARNING

- Never carry a child on your lap in a vehicle journey.
- An appropriate child restraint system must be used for your child.
- Please follow the instructions provided with the child restraint system and in this manual to make sure the child restraint it is properly installed in the vehicle.

WARNING

- After the child restraint is dismounted from the seat, store it safely in your vehicle.
- Failure to follow the instruction provided with the child restraint and in this manual may cause injuries and even death to your child in an accident.

Children must use a suitable child restraint when travelling in the vehicle. Children should sit comfortably and safely. Make sure that the child restraint is positioned, mounted, and used correctly.

Important considerations for selecting a child restraint system

- The child restraint system is the correct type and size for the child.
- The child restraint system is the correct type and size for the seating position.
- The child restraint system must be homologated by ECE R44/R129.

Passenger Airbag Switch

- The switch is located on the passenger side of the dashboard and is accessible when the passenger's door is open.
- See **P71** for details.

WARNING


- Never use a rear-facing child restraint on the front passenger seat if the passenger airbag is activated.

Child Restraint System Anchorages

Front passenger seat

- The front passenger seat is equipped with ISOFIX/i-Size anchorages. The anchorage locations are identified by

a marking (see illustration) located on the seatback, directly above the associated anchorages.

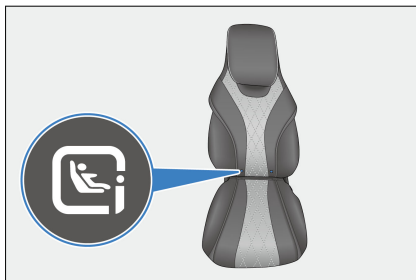

- The front passenger seat is equipped with tether strap anchorages on the back.



WARNING

- Where applicable to use a top tether strap with the child restraint system, ensure the strap is routed through the hole in the head support before attaching and tensioning the strap to the anchorage point at the base of the seat.

Rear outboard seating positions

- The rear outboard seats are equipped with ISOFIX/i-Size anchorages.




- The anchorage locations are identified by a marking (see illustration) located on the seatback, directly above the associated anchorages.



CAUTION

- The anchorages are located in the gap between the seat cushion and the seatback.
- The rear seats are equipped with tether strap anchorages on the back.
- The use of top tether anchorage point with a belted child restraint is allowed in specific markets only.

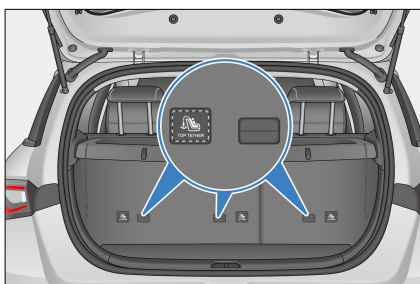

WARNING

- When the child restraint installed on a rear outboard seat is with top tether, remove the cargo cover to have access to the top tether anchorage.
- Never allow a child to climb onto the cargo cover, otherwise, damage to the cargo cover, or even injury/death to the child, can happen.
- Child restraint anchorages are designed to withstand only those loads imposed by correctly fitted child restraints. Under no circumstances are they to be used for adult seat belts, harnesses, or for attaching other items or equipment to the vehicle.

Installing Child Restraint Systems

Always follow the instructions below when using a child restraint on the front passenger seat:

- Never use a rearward-facing child restraint on the front passenger seat if the airbag is activated. The airbag must be activated immediately after the rearward-facing child restraint system is dismantled from the front passenger seat.
- If necessary, adjust the front passenger seat backwards so that there is no contact between the child and vehicle interior.
- If necessary, the front passenger seatback can be adjusted so that it has secure contact with the child restraint system.
- For child restraint systems with the guide fitting of belt attached to the child seat headrest, ensure that the guide fitting is positioned forward or in

line with the seat belt upper anchorage on the vehicle's B-pillar.

- When a forward-facing child restraint system is used on the front passenger seat, ensure that the seat is positioned fully rearward away from the active airbag.
- Ensure that the seat belt passes through the guide fitting without kinking and is not bent over the edge of the guide fitting.


Always follow the instructions below when using a child restraint on a rear seat:

- When the child restraint system is installed on any rear seats, front seats can be adjusted forward to ensure that the child is not in contact with the front seats. Meanwhile, the front seatback angle can also be adjusted to get more space.
- The head support can be adjusted or even removed to ensure that the vehicle seatback can safely support the child restraint system.
- When a child restraint is without seatback, never remove the head support from the vehicle and be sure to adjust it to locking position.
- When the top tether is used on a outboard rear seat, route it at the outside of each head post.

- When the child restraint to be installed on a rear outboard seat has top tether straps, remove the cargo cover to access the top tether anchorage. Store the cover safely in your vehicle.
- For more installation instructions, please read the instructions provided with your child restraint system.

Details on child restraint system installation:

- ① Driver seat
- ② Front passenger seat
- ③ Rear left seat
- ④ Rear centre seat
- ⑤ Rear right seat

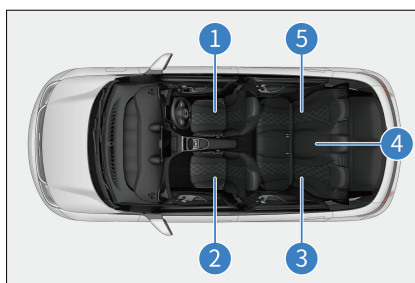

Type	Seating Position					
	2					
	1	Front Passenger Airbag Activated a)	Front Passenger Airbag Deactivate d a)	3 b)	4 b)	5 b)
Seating position	×	Yes	Yes	Yes	Yes	Yes

Type	Seating Position					
	2					
	1	Front Passenger Airbag Activated ^{a)}	Front Passenger Airbag Deactivate ^{d a)}	3 ^{b)}	4 ^{b)}	5 ^{b)}
suitable for universal belt (Yes/No)		Forward-facing only				
i-Size seating position (Yes/No)	×	Yes Forward-facing only	Yes	Yes	No	Yes
Seating position suitable for lateral fixture (L1/L2/No)	×	No	No	No	No	No
Largest suitable rearward-facing fixture (R1/R2X/R2/R3/No)	×	No	R1/R2X/R2/R3	R1/R2X/R2/R3	No	R1/R2X/R2/R3
Largest suitable forward-facing fixture (F2X/F2/F3/No)	×	F2X/F2/F3	F2X/F2/F3	F2X/F2/F3	No	F2X/F2/F3
Largest suitable booster fixture	×	B2/B3	B2/B3	B2/B3	B2/B3	B2/B3

Seating Position					
Type	2				
	1	Front Passenger Airbag Activated ^{a)}	Front Passenger Airbag Deactivate ^{d a)}	3 ^{b)}	4 ^{b)} 5 ^{b)}

(B2/B3/No)

^{a)} If needed, adjust the seat position and seatback angle.

^{b)} If needed, the headrest can be adjusted or even removed. The front seats can be adjusted to ensure the child is not in contact with them.

×: seat position not suitable for installing a child restraint of this weight group

Grouping of child stature according to ECE R129 standard

• Recommended child restraint systems:

Child Stature	Manufacturer	Child Restraint System	Comment
16-33 in (40-83 cm)	Maxi-Cosi	Pebble 360	Belted
30-41 in (76-105 cm)	Britax Römer	Trifix 2 i-Size	ISOFIX and belted
39-59 in (100-150 cm)	Britax Römer	Kidfix i-Size ^{a)}	ISOFIX and belted

^{a)}: Be sure to attach the seat belt through SecureGuard and XP-PAD.

Grouping of child weight according to ECE R44 standard

Child Weight	Manufacturer	Child Restraint System	Comment
49-79 lb (22-36 kg)	Graco	Booster Basic	Belted

Recommended child restraint systems for these groups are shown in the illustration:

③ 39-59 in (100-150 cm)

④ 49-79 lb (22-36 kg)

① 16-33 in (40-83 cm)

② 30-41 in (76-105 cm)



Anti-theft Alarm System*

Anti-theft Alarm System*

Arming the system

1. Switch the ignition off.
2. All occupants get off the vehicle.
3. Lock all doors. This makes the anti-theft indicator steady on. The anti-theft alarm system will arm automatically after eight seconds, and the anti-theft indicator will then begin to flash.
4. You can leave the vehicle after confirming that the indicator begins to flash. Since unlocking the door from inside the vehicle will activate the system, never let anyone stay in the vehicle with the system enabled.

Triggering the alarm

- The system, when armed, will raise an alarm* with flashing turn signals in any of the following situations:
 - Any door, boot, or bonnet is opened without using the keyless access function of the smart key.
 - Use the mechanical key to unlock the vehicle.

Disarming the system

- Anti-theft alarm can be stopped by:
 - Unlocking the door with a valid smart key.
 - Use of an NFC to unlock the vehicle.
 - Use of the microswitch to unlock the vehicle.
 - Use of a valid smart key to remotely unlock the boot.
 - Starting the vehicle remotely with a valid smart key.
 - Pressing the START/STOP button inside the vehicle while carrying a valid smart key.

WARNING

- Do not modify the anti-theft alarm system by means of alteration or addition. Otherwise, the system may fail.

Anti-theft Indicator*

When the alarm is armed, the anti-theft indicator is solid on for eight seconds.



PIN to Drive*

- To set a PIN to drive, shift into Park, then go to the infotainment touchscreen →  → **Locks** and follow the on-screen instructions.

- When enabled, this feature requires entering the correct PIN on the infotainment touchscreen before vehicle gear can be shifted. If the vehicle anti-theft alarm system is armed because the PIN attempt limit is reached, follow on-screen instructions to disarm the system.
- When you forget the PIN, tap **forget password** and follow the instructions to change it.
- To disable the PIN, tap the settings then input the PIN.



CAUTION

- Be sure to shift into Park before setting the PIN.
- PIN to drive works for unlocking with the smart key or the microswitch (smart key nearby), but not for such operations using the NFC key card* or from the BYD App.
- If you cannot input the PIN after powering on the vehicle due to infotainment touchscreen malfunction or black screen, contact a BYD authorised dealer or service provider.

Data Collection and Processing

Data Collection and Processing

- This section provides you with some important information on how personal data is collected and processed when you use a BYD vehicle.
- This vehicle is equipped with an event data recorder (EDR)* system.

EDR mainly records data in the event of a crash or near-crash (for example, airbag deployment or hitting on a roadside obstacle) to help comprehend vehicle system operation, such as:

- Vehicle velocity
- Tyre pressure condition
- ACC status
- Whether the seat belt is fastened
- The vehicle records EDR data only when there is a crash or when a near-crash event reaches a certain extent. The EDR does not record any data during the normal driving of the vehicle.
- The data recorded by the EDR system provides an understanding of the state of the vehicle's safety-related systems when an accident occurs, so that relevant parties can analyze the accident.
- The EDR data needs to be accessed and read by special equipment. BYD discloses your personal data to third parties only if this is legally permissible or you have consented to it. In addition to the vehicle manufacturer, third-party agencies with professional equipment (such as government agencies) can also read the EDR data if they have access to the vehicle EDR and equipment (for example, they can read the data of SRS control unit to clarify the accident).

Vehicle Data Processing

- Data is collected when the vehicle is used, such as data collected or transmitted by vehicle sensors or control units, which is necessary for the safe functioning of your vehicle.

- In some cases, the data is used to support driving (driver assistance systems) or to enable a specific comfort or infotainment function.
- Personal data that is collected and processed mainly include in-vehicle data, remote-services-related data, and other data, as further specified below.

In-vehicle data

Operation data

- When the vehicle is used, various vehicle status data (e.g., speed, battery level, and braking system) or environment (e.g., distance sensors and temperature) data is collected and processed.
- This data is not usually stored, but there are control units, sensors or other components installed in the vehicle that record such data, for example, to record maintenance requirements, error messages, or other information.
- The in-vehicle data will only be stored in the equipment in the vehicle but can be read out via the legally required OBD ("On Board Diagnostics") interface, for example, by BYD authorised dealer or service provider or other third parties.
- In case this access takes place during vehicle maintenance, the information can also be transmitted to BYD engineers for quality assurance, product defect reports, or customer claim verification.

Remote-services-related data

Remote supporting services

- These include remote supporting services such as remote diagnosis and over-the-air (OTA) updates and upgrades for security and

safety purposes (subject to owner's approval).

- These services serve the following purposes: service provision (remote support/diagnostics), product development, and security/public safety.
- Depending on the country and setup, various vehicle information can be transmitted to BYD's data centre in corresponding market for the above purposes, including vehicle location information, vehicle status, such as energy consumption, vehicle speed, gear position, power mode, ESC status, steering system status, battery status, powertrain status, and overall vehicle performance status.

Other

Infotainment system

- Depending on vehicle configuration, data can be added to the infotainment system by the users themselves, such as media data for playing video on the infotainment system, address data for use in the navigation system, or data for use in online services.
- Depending on vehicle configuration, individual settings on the vehicle can also be entered.
- Data stored in the vehicle can be deleted at any time.
- BYD in-vehicle third party application collects data by themselves (from the use of third-party content, in particular as part of an online service).

Integration of mobile devices

- Depending on vehicle configurations, mobile devices can be connected and controlled through the vehicle's infotainment system.
- It may be necessary that the device's screen or audio is displayed/played

through the infotainment system or transmitted to it.

- Additional data like positioning or vehicle information can be transmitted through applications for use in certain navigation systems, communication, or other third-party services.
- The specific type of data processing depends on the respective function and is controlled by the user or third parties such as the provider of the devices or corresponding services.

Internet access and connected services

- Depending on vehicle configurations, the Internet can be accessed for certain functions or BYD services through the vehicle's infotainment system network devices.
- BYD is not liable for any such services provided by any other party.
- In such cases, please obtain information about the use of data from the provider of the respective online service.

Camera image recording

- Your vehicle is equipped with a number of cameras/sensors.
- The reason for this is that some vehicle functionalities require the vehicle's path to be detected and assessed which is done by cameras that detect objects in the vehicle's surroundings (e.g., obstacles).
- The images are transmitted to the respective control module for further analytics required to operate the systems.
- Some images are just processed on a volatile basis (RAM), others may be stored, depending on vehicle equipment.

- For more camera details, see section "Panoramic View System" in this manual.

Permanent Vehicle Transfer to Third Parties and Offline Mode

- In case of a permanent vehicle transfer, that is, when you sell or transfer the vehicle to a new owner for permanent use, please note that any personalisation/user settings made via the infotainment system (such as the address list and the navigation system) can be accessed by the new owner.



REMINDER

- To protect your privacy, it is recommended to factory reset the vehicle before it is scrapped for disposal or transferred.
- You can also restrict your vehicle's communication with the BYD data server and the processing of vehicle-related and personal data by setting the vehicle to offline mode.
 - On the infotainment touchscreen, tap  to turn Wi-Fi off.
 - Or alternatively, go to  → **System** → **Link** → **WLAN** → **OFF**.

Disclosure of Personal Data to Authorities

- BYD will not disclose your personal data to third parties unless this is legally permissible or you have consented to it.
- However, subject to applicable laws, government agencies may be authorised to read out data from vehicles (for example, data can be read from the airbag control unit to clarify an accident).

- If required by law, BYD may also be obliged to disclose data upon request to governmental authorities in your country, such as in the investigation of a criminal offence.

Your Data Protection Rights

- BYD has staunch respect for its customer's privacy, and strictly complies with all data protection laws, in particular the General Data Protection Regulation (GDPR) and applicable local laws.
- According to these laws, owners have specific rights when their personal data is processed:
 - Data subjects have the right of information and access, to rectification, erasure of personal data ("right to be forgotten") and the right to object to the processing of personal data or to restrict it (or to withdraw consent given earlier, as well as the right to data portability).
- These rights may be limited in some cases. For example, if we can show that we have a legal obligation to process your data, or if providing the information to you would disclose personal data about another person, or if we are legally prevented from disclosing that information.
- In some cases, this may mean that we can retain the data even if you withdraw your consent.
- For more information on data processing, data protection, and any rights you may have, please visit the latest version of the Privacy Policy available at the infotainment system (by going to  → **System** → **General** → **Agreement and Statement**).


02

INSTRUMENT CLUSTER

Instrument Cluster.....34

Instrument Cluster

Instrument Cluster View

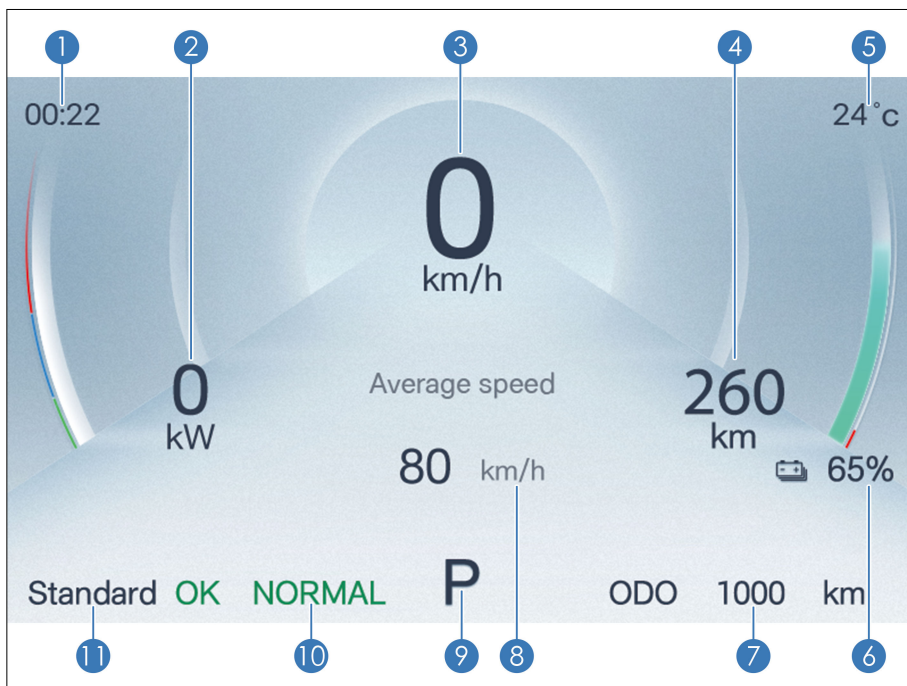

- | | | | |
|---|-------------------------|----|----------------------|
| 1 | Time | 7 | Total mileage |
| 2 | Power meter | 8 | Average speed |
| 3 | Speedometer | 9 | Gear status |
| 4 | Remaining driving range | 10 | Driving Mode |
| 5 | Outside temperature | 11 | Regenerative braking |
| 6 | State of charge (SOC) | | |

Instrument cluster view in simple mode



CAUTION

- When the instrument cluster experiences occasional



CAUTION

communication delays, it may automatically switch to simple mode for safe driving. In

! CAUTION

this mode, essential driving information remains displayed and vehicle operation is not affected. The system returns to normal mode automatically once communication recovers. If it does not, try the following steps to switch back to normal mode:

1. Press and hold the scroll button on auxiliary dashboard to restart the instrument cluster information display system.
 2. While safety is ensured, restart the vehicle.
- If the instrument cluster remains in simple mode after

! CAUTION

those actions have been taken, promptly contact a BYD authorised dealer or service provider for inspection.

- The image of the instrument cluster view is for reference only and is subject to actual factory configuration.

Instrument Cluster Indicators

	High beam indicator		Position light indicator
	Turn signal indicator		Normal mode
	OK indicator		ACC status indicator*
	AVH indicator (solid grey when AVH is in standby mode)		Driving power limit warning light
	Main alarm indicator		Smart key warning light
	ABS fault warning light		ESC OFF warning light
	ESC fault warning light		Tyre pressure fault warning light

	Driver attention warning light*		CPD indicator/warning light*
	Rear fog light indicator		AVAS fault warning light
	Steering system fault warning light		Seat belt reminder indicator
	Motor coolant overheating warning light		High-voltage battery charging connection indicator
	Low-voltage power system fault warning light		High-voltage battery overheating warning light
	High-voltage battery fault warning light		Powertrain fault warning light
	EPB indicator		Airbag fault warning light
	Parking brake system fault warning light		

Indicator/Warning Light Description

Smart key warning light

- If the key is not in the vehicle when you press the START/STOP button, this warning light comes on for a few seconds, a beep sounds, and the message "No key detected, please confirm if the key is in the vehicle" is displayed on the instrument cluster.
- If you press the START/STOP button while an electronic smart key matching the model is in the vehicle, this warning light does not light up. The vehicle can now be powered on.

- If the warning light flashes after you press the START/STOP button, it indicates low battery of the key.
- If the key is not in the vehicle, the instrument cluster prompts "No key detected, please confirm if the key is in the vehicle".

ABS fault warning light

- This warning light comes on when the ignition is on. If the anti-lock braking system (ABS) is working properly, the light goes out in a few seconds. Thereafter, if the system fails, the light lights up again until the fault is cleared.
- When the ABS fault warning light is on (with the parking brake system

fault warning light off), the braking system continues to operate whereas ABS does not.

- When the ABS fault warning light is on (with the parking brake system fault warning light off), since ABS does not operate, the wheels will be locked in case of emergency braking or braking on a slippery road.
- If any of the following cases occurs, it means there is a fault in components monitored by the warning light system. In that case, contact a BYD authorised dealer or service provider for vehicle inspection as soon as possible.
 - This warning light does not come on or is steady on when the ignition is on.
 - This warning light turns on during driving.



REMINDER

- If this warning light lights up briefly during operation, it does not indicate a problem.
- If both warning lights for ABS and the parking brake system turn on, immediately park the vehicle in a safe place and contact a BYD authorised dealer or service provider. If brakes are applied now, the ABS will not work and the vehicle will become extremely unstable.



Tyre pressure fault warning light

- This warning light comes on when the ignition is on. It turns off in a few seconds if the tyre pressure monitoring system is working properly. If the system fails, this warning light turns on again.
- When the tyre pressure fault warning light comes on or flashes, the message "Please check TPMS" is displayed on the instrument cluster, and the tyre pressure is displayed as "---", it indicates that the tyre pressure system is faulty.
- When the tyre pressure value displays "No Signal", it indicates that the tyre pressure signal at this location may be interfered or the tyre pressure monitoring module is damaged.
- When the tyre pressure fault warning light is solid on and one or more values turn yellow on the tyre pressure screen on the instrument cluster, the corresponding tyre is in under-pressure condition. When the temperature value of one or more tyres turns yellow, it indicates that the tyre temperature is too high.

In the event of any of the situations above, it is recommended to contact a BYD authorised dealer or service provider for inspection as soon as possible.



ESC fault warning light

- This warning light turns on when the vehicle is started and goes out in a few seconds if electronic stability control (ESC) functions properly. When ESC malfunctions, it comes on again until the fault is cleared.
- If this light flashes temporarily while the vehicle is in motion, it indicates the ESC system is working.
- However, if this light stays on with warning lights for the ABS and the

parking break system off, while ABS and the braking system continue to operate normally, the ESC system fails. This means the vehicle will be extremely unstable at sharp turns or when you are steering away from obstacles ahead.

- If any of the following cases occurs, it means there is a fault in components monitored by the warning light system. In that case, contact a BYD authorised dealer or service provider for vehicle inspection as soon as possible.
- This warning light remains off (self-check not performed) after the vehicle is started.
- This warning light is steady on while driving.

REMINDER

- If this warning light lights up briefly during operation, it does not indicate a problem.
- If the ESC warning light remains on while the warning lights for the ABS and the braking system are on, immediately stop the vehicle in a safe place and contact a BYD authorised dealer or service provider. This is because braking at this time can render the vehicle extremely unstable, and the anti-lock braking system does not work at all.



ESC OFF warning light

- When the ESC OFF switch is pressed, this warning light should remain steady on and the ESC system will not operate. When the ESC OFF switch is pressed again, this warning light should turn off and the ESC system returns to normal.

REMINDER

- If the ESC OFF warning light is on, stay alert and maintain a slow driving speed in sharp turns and when avoiding obstacles. Braking at this time can render the vehicle unstable, given the malfunction of ESC system.



Driving power limit warning light

- When the level of the high-voltage battery is low and the motor power is limited, this warning light will light up, and it is recommended to contact a BYD authorised dealer or service provider immediately.



Main alarm indicator

- If this indicator goes on, check the fault prompt or warning on the instrument cluster.



CPD indicator*:

- CPD indicator*: If child presence detection (CPD) is turned off, the indicator is solid on and the OFF reminder lasts for five seconds. Tap **ON** or **Delay** to turn off this indicator and enable CPD.
- CPD warning light*: If the CPD fault reminder lasts for five seconds and the indicator is solid on, it indicates that the CPD system fails. It is recommended to bring the vehicle to a BYD authorised dealer or service provider for inspection.



driver attention warning light*

- Driver attention warning system evaluates the driver's degree of fatigue based on the vehicle operations or status and alerts accordingly to improve driving safety.



Seat belt reminder indicator

- With the ignition switched on, if any passenger on the front seats or rear seats has not buckled up, the seat belt reminder indicator lights up. It remains on until the seat belt is fastened.



Airbag fault warning light

- With the ignition switched on, this warning light turns on and then goes off in a few seconds if the airbag system is working properly. This warning light system is used to monitor the airbag ECU, collision sensors, inflation devices, warning lights, connections, and power supply.
- If any of the following cases occurs, it means there is a fault in components monitored by the warning light system. In that case, contact a BYD authorised dealer or service provider for vehicle inspection as soon as possible.
 - When the ignition is switched on, this warning light remains off or is solid on after the ignition is switched on.
 - This warning light turns on during driving.



Parking brake system fault warning light

- When the brake fluid level is low and the braking system is faulty, this warning light lights up. If any of the following conditions occurs, immediately park the vehicle in a safe place. It is recommended to contact

a BYD authorised dealer or service provider.

- This warning light comes on when the ignition is switched on and the brake fluid level is low.



WARNING

- Low brake fluid level impairs driving safety. Do not continue driving.
- This warning light is solid on although after the vehicle is started, the brake fluid level and EPB system operation are normal (EPB engaged and released normally, and no message "Please check EPB system" displayed).
- Fault warning lights for parking brake and ABS come on simultaneously.



REMINDER

- If this warning light lights up briefly during operation, it does not indicate a problem.



Steering system fault warning light

- When the steering system is faulty, this warning light is steady on. It is recommended to bring the vehicle to a BYD authorised dealer or service provider for inspection.



REMINDER

- The steering system features an electric motor to reduce the force required to turn the steering wheel.
- When turning the steering wheel, a hum may be heard from the

REMINDER

running motor. This does not indicate that the motor is faulty.

- Do not turn the steering wheel to its limit position for more than five seconds, otherwise the activation of temperature protection will result in heavy steering or damage the steering system.
- If you have turned the steering wheel frequently with the vehicle staying put for a long time, the steering wheel may become difficult to turn even if the warning light does not turn on. This is not a fault.
- This is because the power assist effect is reduced to prevent steering system overheating. Lower the steering frequency or power off the vehicle. The system will recover within 10 minutes.

WARNING

- If the steering system fault warning light turns on, immediately park the vehicle in a safe place and contact a BYD authorised dealer or service provider.



Low-voltage power system fault warning light

- If this warning light turns on while the vehicle is in motion, it indicates that there is a problem with the low-voltage power system. Turn off devices such as the A/C, fan, and radio, and pull over the vehicle immediately if it is safe to do so. It is recommended to contact a BYD authorised dealer or service provider for rescue as soon as possible.

- Charging and discharging stop when this warning light turns on.
- When this warning light lights up and remain steady on while driving, the vehicle speed will be limited.
- This light is used to warn about the operating state of the DC module and the low-voltage battery module when the vehicle is not being charged or discharging.



Powertrain fault warning light

- If the powertrain fails, this warning light turns on.
- If any of the following cases occurs, it means there is a fault in components monitored by the warning light system. In that case, contact a BYD authorised dealer or service provider for vehicle inspection as soon as possible.
- This warning light is steady on when the ignition is switched on.
- This warning light turns on during driving.



CAUTION

- Try not to drive the vehicle when the warning light is on. Contact a BYD authorised dealer or service provider to check the problem as soon as possible.



High-voltage battery overheating warning light

- If this warning light is on, it indicates that the high-voltage battery temperature is too high and the vehicle must be stopped to cool down. When the warning light flashes, it is recommended to immediately stop the vehicle safely and leave the vehicle as soon as possible.

- The high-voltage battery may overheat under the following operating conditions:
 - Driving up a slope for a long time in hot weather
 - Long period of stop-and-go traffic condition, frequent rapid acceleration, frequent hard braking, or vehicle running for a long time without pause.



High-voltage battery fault warning light

- This warning light comes on when the ignition has just been switched on. If the high-voltage battery system is working properly, this warning light will turn off in a few seconds. If this light lights up again thereafter, it indicates a system failure. It is recommended to contact a BYD authorised dealer or service provider for inspection as soon as possible.
- If any of the following cases occurs, it means that there are faults in

the components monitored by the warning light system. In such case, it is recommended to contact a BYD authorised dealer or service provider for vehicle inspection as soon as possible.

- This warning light is steady on when the ignition is on.
- This warning light is steady on or occasionally turns on while driving.



Coolant overheating warning light

- If this indicator is solid on, it indicates that the motor coolant temperature is too high. Park the vehicle in a safe area until this indicator goes out.

Other Instrument Cluster Fault Prompts

The instrument cluster may display the following fault prompts. Handle them as recommended.

Indicator	Message	Response
	Please check the OBC system	The on-board charging system is faulty. Check the charging connection, and reconnect the charging equipment. If the fault persists, contact a BYD authorised dealer or service provider.
	Vehicle network error, please pull over safely and contact BYD service	The vehicle may be disconnected from the data network. Park the vehicle immediately at a safe place, and contact a BYD authorised dealer or service provider.
	Check headlight system	The headlight is faulty. In this case, contact a BYD authorised dealer or service provider.
	AEB system is limited	The forward collision warning (FCW) and the automatic emergency braking (AEB) systems are faulty. In this case, park the vehicle and contact a BYD authorised dealer or service provider.

Indicator	Message	Response
	BSD is limited	The blind spot assist system is faulty. Park the vehicle, and contact a BYD authorised dealer or service provider.
	LDWS is limited	The lane departure assist system is faulty. In this case, park the vehicle, and contact a BYD authorised dealer or service provider.
	Intelligent-camera is not available due to poor condition*	The intelligent camera is unusable. Check whether the visual field of the camera on the front windscreen is blocked by foreign objects or is foggy. If not, contact a BYD authorised dealer or service provider.
	Please check the gear*	The shifter controller is faulty. Park the vehicle immediately, and contact a BYD authorised dealer or service provider.

03

CONTROLLER OPERATION

Doors and Keys.....	44
Seats.....	54
Steering Wheel.....	58
Wipers.....	61
Mirrors.....	64
Switches.....	65

Doors and Keys


Keys

The vehicle is equipped with keys, including the smart key, mechanical key (installed in the smart key), Bluetooth key*, NFC digital key*, and NFC key card, to enable functions such as unlocking/locking doors and starting the vehicle.

Smart Key

Press a front door microswitch, while carrying the smart key, to unlock or lock all doors, or press smart key buttons to lock/unlock doors, open the boot, or start the vehicle remotely.

- ① Indicator
- ② Lock button
- ③ Unlock button
- ④ Boot release button
- ⑤ Start/Stop button
- ⑥ Mechanical key

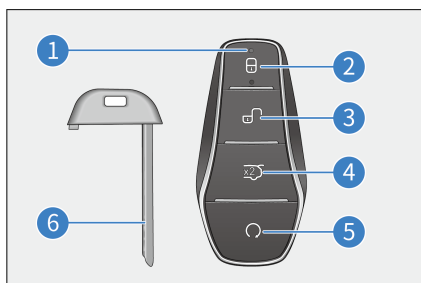

Key reminder feature

- If the key is placed in the vehicle or in the boot with the vehicle locked, when you close the boot, the vehicle automatically unlocks and turn signals flash twice.

WARNING

  Button battery safety alert:

- The button (coin) battery in the smart key is hazardous and both new and used batteries are to be kept away from children at all times.
- If swallowed or placed inside any part of the body, a lithium button battery can cause severe or fatal injuries in two hours or less.
- Medical attention should be sought immediately if it is suspected the button battery has been swallowed or placed inside any part of the body.

CAUTION

- The smart key is an electronic component. Observe the following instructions to prevent damage to the key:
 - Do not expose the smart key to high temperatures, such as on the dashboard.
 - Do not disassemble the smart key.
 - Do not let the smart key hit other objects or fall down.
 - Do not immerse the key in water or clean it in the ultrasonic scrubber.
 - Do not place smart keys with devices that emit electromagnetic waves, such as the mobile phone.
 - Do not attach to the smart key any objects (such as a



CAUTION

metal seal) capable of cutting off electromagnetic wave signals.

- You can register a spare key for the same vehicle. In this case, contact a BYD authorised dealer or service provider immediately.
- If the electronic smart key cannot operate the door within the normal distance, or the key indicator light is dim or off:
 - Check for nearby radio stations or airport radio transmitters that interfere with the normal operation of smart keys.
 - The smart key battery may be exhausted. Check the battery inside the electronic smart key. It is recommended to contact a BYD authorised dealer or service provider for battery change.
- If the smart key is lost, contact a BYD authorised dealer or service provider as soon as possible to prevent theft or accidents.
- Do not change the transmission frequency arbitrarily, increase the transmission power (including additional transmission frequency amplifier), or arbitrarily connect the external detection antenna or switch other transmitting detection antennas.
- The use of the smart key must not cause harmful interference to legal radio communication services. Once interference is found, stop using the key immediately and take measures to eliminate the interference before continuing to use.
- The use of micropower radio equipment must be free from interference of all radio



CAUTION

services or from radiation of industrial, scientific, and medical equipment.


- Do not use it near aircraft or airports.
- People implanted with pacemakers or defibrillators should stay away from the detection antennas of intelligent entry and start systems, as electromagnetic waves can affect the normal use of such devices.
- In addition to people implanted with pacemakers or defibrillators, those who use other electronic medical devices should also consult the manufacturer on the use of such devices under the influence of electromagnetic waves. Electromagnetic waves may bring unknown consequences to the use of such medical devices.
- When leaving the vehicle, always carry your key and lock the vehicle. Never leave anyone (especially children) alone in the vehicle.

Mechanical Key

Use the mechanical key (inside the smart key) to lock or unlock the driver's door. Insert the mechanical key back into the smart key when it is not in use.

Taking out the mechanical key

- Press the "PUSH" button on the smart key ②, and take out the mechanical key in the direction indicated by ①.

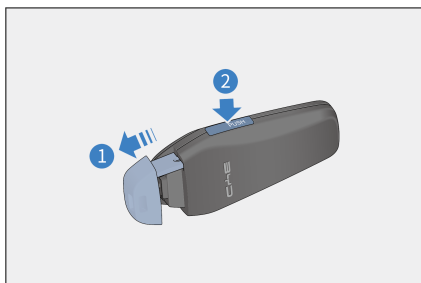

- Press the "PUSH" button and insert the mechanical key back into the smart key when it is not in use.

Bluetooth Digital Key*

- This key allows you to lock, unlock or perform other commands on the vehicle via a short-range phone Bluetooth connection.
- Download from the app store the latest version of the BYD app, which integrates the BYD Bluetooth digital key functionality.
- With some activation steps, you can control the vehicle via Bluetooth if it is supported.
- Turn on the Bluetooth on your phone, approach the vehicle, then open the BYD App for automatic connection or connect manually to make the Bluetooth digital key effective.
- The specific functions supported by the key are subject to the vehicle configuration. The key can be used without network connections. After establishing a Bluetooth connection, you can command the vehicle from the app.
- According to applicable regulations, in some countries or regions the vehicle can be started only when it detects that the Bluetooth digital key is within two meters nearby to ensure security of the vehicle and properties inside.

CAUTION

- Before activating the Bluetooth digital key, ensure that the vehicle network is well connected. If the activation fails, try to move the vehicle to a place with good network and activate the key again in the application.
- After being unlocked with a Bluetooth digital key, the vehicle will relock in a short time if there is no further operation.
- When the Bluetooth connection or operation fails for many times, you can turn the Bluetooth off and then on, or restart the application.
- Limited by the environment conditions and phone performance, the effective distance of the key is reduced in densely populated vehicle areas.
- In rare cases, certain phone models do not support this feature.

NFC Digital Key*

- The NFC digital key is a digital key solution provided by BYD. You can register smartphones or wearable devices as vehicle keys to unlock, lock, and start the vehicle.
- Before activating the NFC digital key, ensure that:
 - You have registered BYD Cloud Service for the vehicle.
 - Your vehicle supports NFC digital key.
 - Your smartphone or wearable device supports BYD NFC digital key (contact a BYD authorised dealer or service provider for device compatibility).

Activating the NFC digital key on smartphones

Before activating, start the vehicle and shift into Park with a valid smart key. You can activate the NFC digital key in any of the three ways:

- Via the BYD app:
 - Download and log into the BYD app. Navigate to **Digital Key** and follow the instructions to activate the key.
- Via the email link:
 - Log into the email account reserved during vehicle purchase on the phone, and then activate the key following the instructions in the activation email from bydapp@byd.auto.
- Via the infotainment touchscreen:
 - On the infotainment touchscreen, tap  → **Vehicle** → **Locks** → **Locks** → **Digital Key** and follow the instructions to activate the key.

Activating the NFC digital key on wearable devices

Supported wearable devices include Apple Watch (consult a BYD authorised dealer or service provider for other supported devices), and there are two ways of activation:

- Synchronise the key from iPhone to Apple Watch:
 - After successful key activation on iPhone, the device prompts to add the NFC digital key to a paired Apple Watch which is nearby and unlocked. Follow the prompts to complete activation.
- Via the Watch app:
 - If the iPhone NFC key is active but not synced to Apple Watch, open the Watch app on iPhone, select **Wallet**, find the key, and tap **Add** to activate the key following the instructions.

Using the NFC digital key

Ensure the NFC function is enabled on your device before using the NFC digital key. Here is how to use:

- To unlock/lock the vehicle, position the NFC antenna area of the smartphone or wearable device near the NFC sign on the driver side mirror. Consult the manufacturer for the NFC antenna area of your device.
- To authorise vehicle start, place the smartphone or wearable device at the NFC sign inside the vehicle.



CAUTION

- With permission, start the vehicle as soon as possible. or you need to place the device at the NFC sign again to reauthorise.

Removing the NFC digital key


You can remove the NFC digital key in any of the three ways:

- Via the BYD app:
 - Open the BYD app and navigate to the digital key management screen, select the key to remove, and enter the password to remove it.
- Via the infotainment touchscreen:
 - With a valid smart key inside the vehicle, go to the infotainment touchscreen →  → **Locks** → **Locks** → **Digital Key**. Tap the key to be removed and operate as prompted.
- Via the Wallet app:
 - Open the Wallet app on the phone, select the digital key, and remove it following the instructions.

NFC Key Card*

With ignition off, tap the Near Field Communication (NFC) key card against

the mark on the driver's side mirror to lock or unlock all doors.

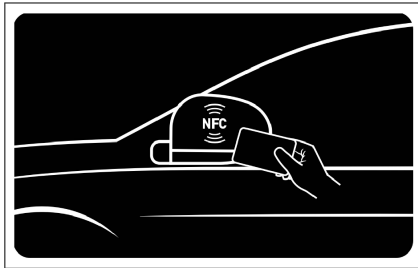

CAUTION

- NFC key card is an electronic product. The following instructions must be observed to prevent function failure of or damage to the card:
 - Do not place the NFC card in the charging area when the wireless charger is on.
 - Do not attach any object (such as a metal seal or metal phone case) that may cut off electromagnetic waves, when using the NFC card.
 - Do not place the NFC card in a position exposed to high temperature, such as on the dashboard.
 - Do not bend the card with force.
 - Do not place the card with other hard objects.
- NFC key cards use near-field communication technology, requiring a detection distance of less than 0.78 in. (2 cm). Hold your NFC card close to the side mirror for 1-2 seconds.
- The NFC smart card is a key configured for the vehicle based on the near field communication method. In order to ensure vehicle

CAUTION


safety, handle it with care. If it is lost, going to BYD authorised dealer or service provider for blocking of the lost card and re-configuration is recommended.

Locking/Unlocking Doors

Locking/Unlocking with Mechanical Key

Lift the outer handle of driver's door upward, insert the key into the lock hole, and turn it.

- Unlocking: Turn the key clockwise.
 - After unlocking with the mechanical key, pull it out, and pull the outer handle to open the door.

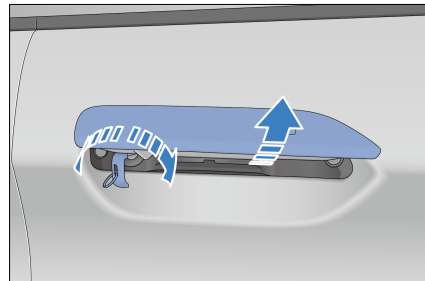


- Locking: Turn the key counterclockwise.
 - Close the driver's door, make sure that it is flush with or lower than the rear right door, press the door, and turn the key counterclockwise to lock.

Opening with Interior Door Handle

- When the vehicle is unlocked, pull the handle once to open the door from inside the vehicle.

- When the vehicle is locked, pull the handle twice to open the door from inside the vehicle.

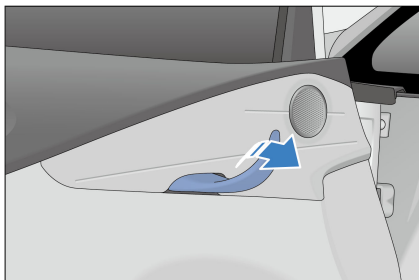

WARNING

- Do not allow children to play with the door handle, so as to avoid the door opening while driving.
- If there are children in the vehicle, make sure to enable the child protection lock function.

CAUTION

- Using mechanical connections, the interior door handles remain can open the doors even when the vehicle is powered off.
- As this vehicle is equipped with child protection locks, the rear doors can only be opened with the interior handle when the child protection locks are disabled.

Locking/Unlocking/Finding the Vehicle with Smart Key

- The wireless remote control is used to unlock or lock all doors at a close distance, and complete additional functions.
- In the active area, press the associated button on the registered smart key to lock or unlock all doors.

Locking

- When all the doors and the bonnet are closed, press the lock button to lock all the doors. The turn signals flash once. Check whether all doors are securely locked.
- If any door is not closed, the turn signals do not flash, and the alarm sound once.
- If the ignition has not been switched off, the turn signals do not flash, and the alarm sounds once.



Unlocking

- Press the unlock button to unlock all the doors at the same time. The turn signals flash twice.
- When you unlock all the doors with the smart key, even if no door is opened, the interior lights stay on for 15 seconds and then go out.
- If the anti-theft alarm system is armed, open any door within 30 seconds after unlocking with the smart key, or all doors will relock automatically.
- Even if you press and hold the lock or unlock button, locking or unlocking will not be repeated. You need to release the button and press it again.

Unlocking the boot with smart key

- Double-press the boot release button on the smart key. The turn signals then flash twice.



Finding the vehicle

- With the anti-theft alarm system armed, pressing the lock button sounds a long beep and makes turn signals flash 15 times. Use this function to locate the vehicle when it cannot be found.
- When the vehicle is in vehicle search mode, press the lock button again to start the next vehicle search mode.

Raising/Lowering Windows with Smart Key

- When the ignition is off:
 - Press and hold the lock button on the smart key to raise the four windows.
 - Press and hold the unlock button on the smart key to lower the four windows.
- To enable or disable this feature, go to the infotainment touchscreen → ⚙️ → **Locks** → **Windows**.


CAUTION

- When using the remote control function to raise windows, pay attention to the safety of occupants in the vehicle, and use this function only after making sure the windows are clear from pinching anyone.

Locking/Unlocking with Microswitch

Locking

- With the ignition off and doors closed but not locked, press the microswitch on the front door handle while carrying the smart key. All doors lock at the same time, and the turn signals flash once.
- If the ignition has not been switched off, the turn signals do not flash, and the alarm sounds once.

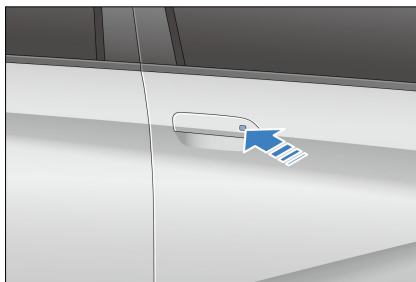

- If any door, the bonnet, or the boot lid is not closed, pressing the microswitch still locks the closed doors, but the alarm only sounds once, and the turn signals do not flash.

Unlocking

- When doors are locked, press the microswitch on the front door handle while carrying the smart key. All doors unlock and turn signals flash twice.
- If the anti-theft alarm system is armed, open a door within 30 seconds after the unlocking, or all doors will relock automatically.
- Pressing the microswitch does not work if:
 - This is performed while a door is being opened or closed.
 - The key is in the vehicle.

Raising/Lowering windows

- Press and hold the microswitch on the driver door handle to unlock the vehicle and open windows or lock the vehicle and close windows.
- This feature can be turned on or off in the infotainment touchscreen → ⚙️ → **Locks → Windows**.

! REMINDER

- If the smart key is too close to an exterior door handle or window, it may not be possible to activate the entry function.

Unlocking the Boot with Microswitch

- With the vehicle locked, press the rear microswitch while carrying a valid key to unlock the boot.
- With the vehicle unlocked, press the rear microswitch to open the boot.

Locking/Unlocking with NFC Key*

- Hold the NFC card close to the NFC sign on the side mirror on the driver's side.

Locking doors:

- With the ignition switched off and all doors closed but not locked, place the NFC key card close to the NFC mark on the side mirror on the driver's side to simultaneously lock all the doors. The turn signals flash once.

Unlocking doors:


- With the anti-theft alarm system armed, place the NFC key card close to the NFC mark on the side mirror on the driver's side to simultaneously unlock all the doors. The turn signals flash twice.
- If the alarm is armed, open a door within 30 seconds after unlocking with

the NFC key card, or all doors will relock automatically.


- Putting the NFC key card close to the NFC mark on the side mirror on the driver's side does not work if:
 - This is performed while the door is opened or closed.
 - The ignition is not switched off.

Emergency Boot Releasing from the Inside

1. Remove the access cover of the boot lid lock from the lid trim panel.

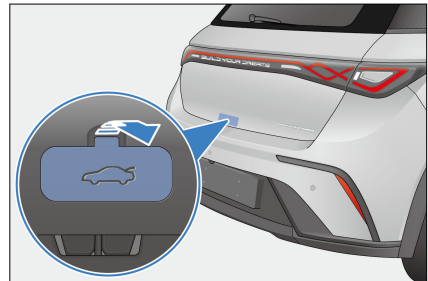

2. Pull the lever to unlock the boot lid.

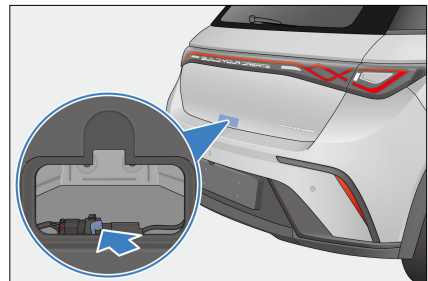

! CAUTION

- When the vehicle is powered off, the boot can be unlocked from the inside in case of emergency.
- Never try to deliberately activate the anti-pinch function.

Locking/Unlocking with Central Locking

Locking or unlocking the vehicle with the central locking

See **P69**.

Locking or unlocking doors automatically

- All doors lock automatically at vehicle speeds above 5 mph (8 km/h).
- Press the START/STOP button to switch the ignition off. Then, all doors unlock automatically.

Locking/unlocking all doors concurrently

- With the anti-theft alarm system disarmed, the backlight of the central lock button turns on if the vehicle is locked and off if the vehicle is unlocked.
- Pressing the central lock button locks all doors so that any attempt to open any door from the outside fails. At this time, pull the interior handle to unlock a door and pull a second time to open it.

REMINDER

- All doors unlock automatically when the vehicle suffers a strong impact, depending on the impact intensity and accident type.

Emergency Vehicle Locking with Mechanical Key

- When the central locking fails, use the key to turn the emergency locking knobs of the passenger's doors to lock these doors (turn the left door knob clockwise; turn the right door knob counterclockwise), then close the doors. Finally, lock the driver's door by the mechanical key. In this

case, all vehicle doors are locked and impossible to open using their outer handles.



- To unlock the doors, unlock the driver's door with the mechanical key first, then enter the vehicle, and pull the inner handles of other doors. To open these, pull their outer handles or pull their inner handles again.

REMINDER

- Prevent excessive force from distorting or breaking the key during the operation.

Smart Access and Start System

Access


Use the smart key to unlock or lock vehicle doors. See **P49** or **P50**.

Start-up

With the smart key inside, press the brake pedal and the START/STOP button to start the vehicle. (See **P101**.)

Antenna positions

- ① Interior antenna
- ② Exterior antenna

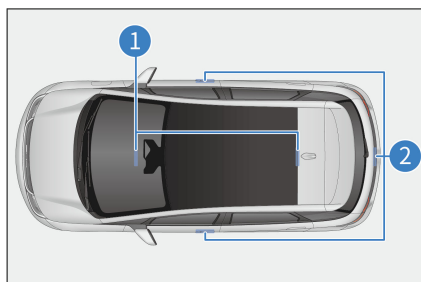


Active area

The smart access and start functions take effect only when the registered smart key is within the active area.

① Active area of the access function: about 1 meter from the front door handle and the exterior boot switch.

② Active area of the start function: inside the cabin.

If another smart key is near this vehicle's smart key, unlocking may take longer than usual, which is normal.

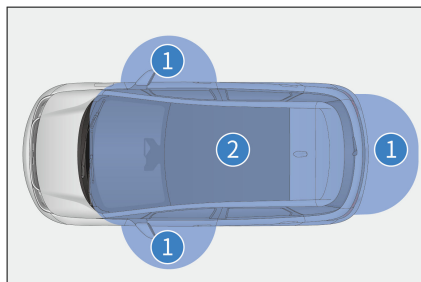

! REMINDER

In the following situation, smart access and start system may not work normally:

- There is a strong electromagnetic field nearby, such as TV towers, power stations, and broadcasting stations.

! REMINDER

- The smart key is being carried along with a communication device, such as a two-way radio or mobile phone.
- The smart key is in contact with or covered by a metal object.
- The door handle is operated too quickly.
- The smart key is too close to the handle.
- Another wireless remote control function is being used nearby.
- When the smart key battery runs out.
- The smart key is close to high-voltage equipment or equipment that produces noise.
- The smart key is being carried along with another smart key or radio-wave-emitting device.
- Even within the active area, the smart key may not work properly in certain locations, for example, on the dashboard, in the glove box or on the floor.
- If the smart access system is not working properly and it is impossible to enter the vehicle, the mechanical key can be used to lock/unlock the driver's door, or the wireless remote control function can be used to lock/unlock all doors.
- Pressing the Start/Stop button may not enable the start function due to:
 - Smart key failure. If the smart key warning light comes on and a message ("Low key battery, please replace the battery soon") is displayed on the instrument cluster,

the battery of the key may be exhausted.

- If the smart access and start system cannot work properly due to system failures, bring all smart keys to a BYD authorised dealer or service provider for repair.

Saving battery power

- The smart key communicates with the vehicle even when the vehicle is not running. Therefore, do not leave the smart key in the vehicle or within 6.6 ft (2 meters) from the vehicle.
- Receiving strong electromagnetic waves for a long time drains the battery of the smart key quickly. The smart key must be kept at least one meter away from electrical equipment that generates a magnetic field, such as the following devices:
 - TVs
 - PCs
 - Wireless telephone chargers
 - Electroliners
 - Fluorescent table lamps

Child Protection Lock

Child protection locks, installed on the sides of the both rear doors, are designed to prevent children sitting in the rear seats from opening the rear doors.

- ① Unlocking
- ② Locking

The door cannot be opened from inside the vehicle while the latch is locked. To open this door, use the exterior door handle.



CAUTION

- Before driving, especially when there are children in the car, make sure that doors are closed and the child protection lock is enabled.
- Proper use of seat belts and activation of child protection lock helps prevent the driver and passengers from being thrown out of the vehicle in an accident, and also prevents a door from being opened accidentally.

Seats

Seat Precautions

- Adjust the driver's seat so that the pedals, steering wheel, and dashboard controls are within the driver's easy control.
- The most effective safeguard while driving is to keep the seatback upright, always resting well on the seatback, and adjusting the seat belt to the right position.
- Secure your luggage appropriately to prevent it from skidding or moving. Luggage in the vehicle should not be higher than seatbacks.

! WARNING

- Sitting on a folded seatback, in the boot, or on cargo is prohibited. Improper seating position or improperly fastened seat belts can result in personal injury in case of emergency braking or a collision.
- Do not place any items under the seats. The driver may lose control of the vehicle because items placed there affect the seat locking mechanism or accidentally push up the seat position adjustment lever, causing the seat to move suddenly.
- When adjusting the seat, do not place your hand under the seat or near its operating parts, to prevent being crushed.
- After adjusting the seatback, lean back to confirm the seatback has been locked. Seatbacks that are not fully locked can cause personal injuries in an accident or emergency braking.
- Do not put the seatback down while driving or riding in the vehicle. This makes the shoulder strap of the seat belt not properly attached to the body. As a result, you and your passengers could hit the strap in an accident, causing serious injury to the neck or other parts; or you and your passenger may slip out of the waist belt, resulting in other serious injuries.
- Do not adjust the driver's seat while the vehicle is in motion, as unpredictable seat movement can cause the loss of vehicle control at this time.
- Do not drive the vehicle until occupants are seated properly.

! REMINDER


- Adjust the seat position before fastening seat belts.
- While adjusting a seat, do not let it hit against any passenger or the luggage.

Adjusting Front Seats

Power front seat adjustment include seat position adjustment, cushion height adjustment*, and seatback angle adjustment. Choose the following adjustments according to the actual configuration of your vehicle.

Seat position adjustment switch

- Move this switch back or forth to slide the seat backward or forward.
- Move the rear end of the switch up or down to adjust the height of the seat cushion.

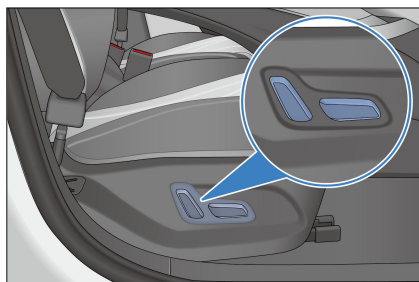

Seatback angle adjustment switch

- Tilt the switch backward or forward to recline seatback.

! REMINDER

- Releasing the switch stops the seat in this position. Do not place anything under the seat as

REMINDER

this may prevent the seat from operating.

- Do not move the front seats too far forward to avoid contact with the roof or sun visor.

Ventilated/Heated Front Seats*

- On the infotainment touchscreen, find the ventilated/heated seats screen by tapping  or going to  → **Vehicle** → **Seats**.
- You can also find the setting buttons in the drop-down menu on infotainment system homepage.
- This feature is always disabled when the vehicle is just powered on.

Heating adjustment*

- Tap the buttons to control the seat heater.
 - Buttons 1 and 2 set the heating level.
 - Button OFF stops heating.

Ventilation adjustment*


- Tap the buttons to control the seat ventilator.
 - Buttons 1 and 2 set the ventilation level.
 - Button OFF stops ventilation.

Mutually-exclusive ventilated and heated seats

- When ventilated seat is active, turning on the heater stops it.
- When heated seat is active, turning on the ventilator stops it.

Folding Rear Seats

Pull the strap on the rear seat to fold the bench.

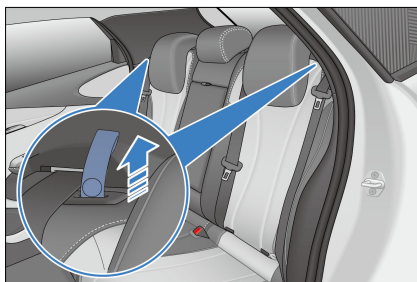

REMINDER

- Please fold or unfold the rear seats at a moderate speed. Avoid quickly lowering or pulling up seatbacks to prevent damage to or malfunction of rear seats and the seat belts.
- When unfolding a rear seat, do not push the seatback hard; otherwise, the seatback will be pre-stressed and impossible to unlock.
- When unfolding a seatback, check that the buckle position is proper to expose the reserved opening on the seat.
- Do not turn over the seat when the seat belt latch is inserted into the buckle.


Head Supports

Lifting the head support

Lift the head support in the direction of the head post until it is in the appropriate position, and then release it until a locking sound is heard.

Lowering the head support

Press the head support adjustment button, lower the head support to a proper position, and then release the button.

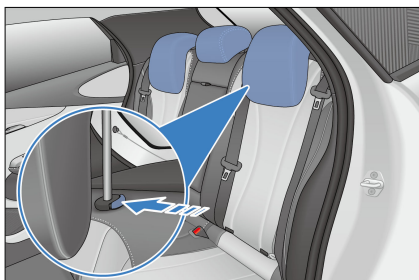

Removing the head support

Press and hold the head support adjustment button, remove the head support, and release the button.

Installing the head support


Insert the head support post into the bushing with the grooves facing forward. Press the head support adjustment button, push down the head support to a proper position, and then release the button.

! REMINDER

- Head supports protect vehicle occupants from head and neck injuries. Adjust the head support so that its centre aligns with the back of your head for maximum protection. Adjust the head support to the proper position based on your actual height.
- When adjusting head support height, align the occupant's ear tip line with the centre line of the head support.
- After adjusting the head support, ensure that it is locked into position.
- Do not drive the vehicle without head supports.
- Do not attach any object to the head support post.

Steering Wheel

Steering Wheel Switches

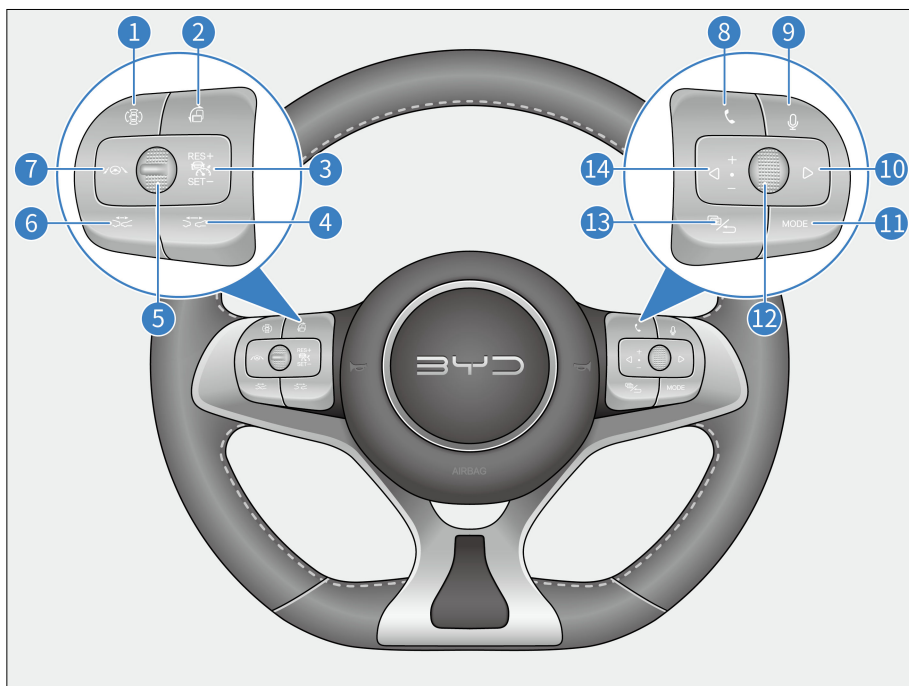

- 1 Around view monitor
- 2 Screen mode
- 3 Cruise control switch or +/Reset or -/Set
- 4 Distance +
- 5 Rocker switch
- 6 Distance -
- 7 Intelligent cruise control (ICC)

- 8 Call
- 9 Speech recognition
- 10 Right
- 11 Mode
- 12 Scroll button
- 13 Instrument cluster/Back
- 14 Left

The audio control switch is operational when the ignition is switched on.

Left-hand buttons

Around view monitor

- Enables or disables AVM.

Screen mode

- Switches between the landscape and portrait mode of the infotainment touchscreen.

+ / Reset

- Activates the adaptive cruise control (ACC) system and uses the previous system settings.

Cruise

- Turns the ACC system on or off.

- / Set

- Sets to cruise at the current speed.

Distance +

- Increases the time-based following distance by one level each time when it is pressed with ACC active. A total of four levels are available.

Distance -

- Increases the time-based following distance by one level each time when it is pressed with ACC active. A total of four levels are available.

Intelligent cruise control (ICC)

- Enables or disables ICC.



REMINDER

- For instructions on using cruise control, see **P111** and **P115**.

Right-hand buttons

Scroll button

- Adjusting infotainment system volume when the instrument cluster is not in menu mode:
 - Roll the button upward to increase the volume. The button is non-operational when the volume reaches the highest.
 - Roll the button downward to decrease the volume. The button is

non-operational when the volume reaches the lowest.

- Press down the button to mute.
- When the instrument cluster is in menu mode:
 - Roll the button upward to select the upper level-2 or level-3 menu items.
 - Roll the button downward to select the lower level-2 or level-3 menu items.
 - Press down the button to go to the next-level menu or confirm the current setting.



CAUTION

- The infotainment system is muted once the instrument cluster is set to the menu mode. To adjust infotainment system volume, exit the instrument cluster menu mode first.

Left/Right button

- When the infotainment system is in radio mode:
 - Press the ◀ button to select previous radio station.
 - Press the ▶ button to select next radio station.
- When the infotainment system is in USB/Bluetooth music/third-party music app/other modes:
 - Press the ◀ button to play the previous track (track number - 1).
 - Press the ◀ button to select a record upward on the Bluetooth call record or phonebook screen.
 - Press the ▶ button to play the next track (track number +1).

- Press the  button to select a record downward on the Bluetooth call record or phonebook screen.
- When the instrument cluster is in menu mode:
 - Press the  button to switch to level-1 menu and its submenus on the left.
 - Press the  button to switch to level-1 menu and its submenus on the right.

Call

- Makes or receives a call (and mutes the infotainment system).
- When a Bluetooth-unrelated screen is currently displayed, press this button to switch to the phone selection screen if Bluetooth is disconnected, or to the dial screen if Bluetooth is connected.
- After entering a phone number on the Dial screen or selecting a record on the Call Log or Contacts screen, press this button to dial the number.
- When Bluetooth is connected, but no phone number is entered on the Dial screen, press this button to switch to the Call Log screen. Press this button again to call the first dialed number on the call history.

Speech recognition

- Press this button for the infotainment touchscreen to switch to the speech recognition screen.
- Press this button again to re-enter a voice command.

Instrument cluster/Back

- When the instrument cluster is not in the menu mode, press this button to view the instrument cluster menu.
- When the instrument cluster is in menu mode, press this button to return to

the upper-level screen, or to exit the menu if there is no upper-level screen.

- When on the Bluetooth call screen, press this button to end the call.

Mode

- Switches between media apps, peripherals, and pre-installed third-party audio/video apps.

Horn

- Press the horn button area to honk the horn, and release to stop honking.



CAUTION

- Avoid pressing honking for too long, as the horn may be damaged.




REMINDER

- Observe the traffic laws and use the horn properly.

Adjusting the Steering Wheel

To adjust the steering wheel position, hold it and operate as follows:

- Push down the steering wheel adjustment handle, adjust the steering wheel to the desired position, and then return the handle to its original position.

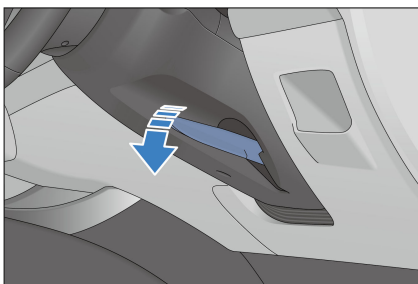

! WARNING

- Never adjust the steering wheel while driving, as this is under risk of impaired vehicle control, which can lead to accidents.
- After adjusting the steering wheel, move it up and down to back and forth to verify that it is securely locked.

Steering Assist Mode Settings

- The level of steering assistance can be adjusted to individual preferences.
- To set the steering assist mode, go to infotainment touchscreen → → **Vehicle** → **Driving Control** → **Steering and Breaking** → **Steering Assist Mode**, and select **Comfort** or **Sport**.

! REMINDER

- Setting the steering mode to sport mode is suggested if the steering wheel feels light when the vehicle is running at a high speed.
- Steering assist mode setting fails with ELKA active or when the steering wheel is turned too quickly or applied with too much hand torque.

Steering Wheel Heating*


Enable steering wheel heating by any of the following methods:

1. Enable or disable steering wheel heating in the infotainment touchscreen → → **Ventilation/Heating**.
2. Go to the drop-down shortcut menu, and tap the steering wheel heating icon. Then the setting page is displayed.
3. Voice control: activates voice control to enable or disable steering wheel heating.


Wipers

Wiper Switch

- The paddle is used to control the windscreen wipers and washer. It has five modes:
 - : Fast
 - : Slow
 - : Intermittent
 - : Off
 - : Point-wiping

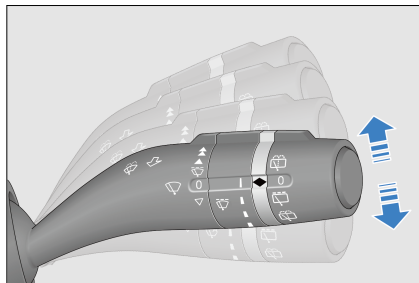


- Push up or pull down the paddle to select a mode.
- In slow and fast modes, the wiper operates continuously.
- Pulling down the paddle from the 0 position activates the point-wiping mode ▽. The wipers wipe at a low speed until you release the paddle.
- The INT knob determines the frequency at which the intermittent mode wiper.

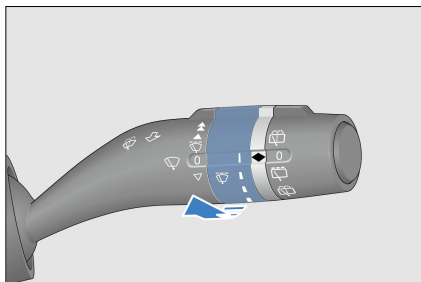


Front windscreen washer

- To clean the front windscreen, pull the wiper paddle backward (towards the steering wheel) so that the washer sprays washing fluid while the wipers operate.
- If the paddle is pulled for less than one second, the wipers wipe once after the current action; otherwise, the wipers wipe twice.

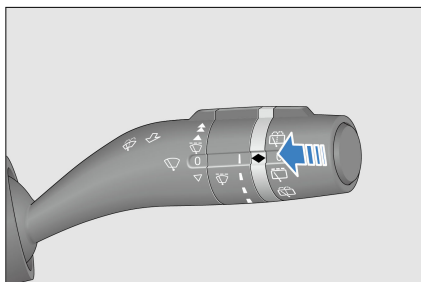


Rear windscreen wiper and washer*

- Set the wiper switch to 0 to activate the rear windscreen wiper; set it to 0 to stop the wiper.
- Set the wiper switch to 0 to activate the rear windscreen wiper and washer simultaneously.

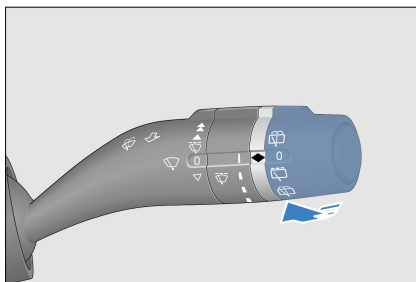

- Set the wiper switch to 0 and release it. The wiper operates twice after washing fluid is sprayed.

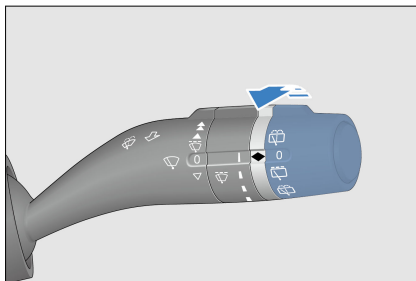

CAUTION

- Depending on vehicle configurations, the exact wiper features may vary.
- To avoid damage or injury caused by unintended wiper activation, turn off the automatic wiper function when washing the vehicle, during sandstorms, in dry weather, or when there is ice or snow on the windscreen.

CAUTION

- The automatic wiper is an auxiliary function. Manually control the wipers when necessary based on actual road conditions to ensure driving safety.

REMINDER

- Check and clean the wiper blades at regular intervals.
- Do not start the wipers while rain is starting, as the windscreen cannot be cleaned and rainwater mixed with sand and dust may instantly blur your view, affecting driving safety.
- Use cleaning agent for glass. The use of water, or another type of detergent, may damage the washer motor.
- If the boot is open or not fully closed, the wiper switch will fail to control the rear wiper until the lid is closed.

Replacing Wiper Blades

Check front and rear wiper blades for cracks or partial hardening at least every six months or 10,000 km. If they are noted, replace wiper blades. Otherwise, the windscreen will streak or will be left unclean after wiping.

Front wipers

1. Pull up the wiper arm at the driver's side, and then pull up the other at the passenger's side.
2. Press the wiper lock button.




3. Hold the wiper blade and pull it out along the indicated direction.
4. When installing a new wiper blade, follow the reverse procedure.



Rear wiper

1. Pull up the wiper arm.
2. Move the rear wiper blade to the position as shown.
3. Press the lock button, push the blade in the direction of the arrow until it fully separates from the hook, and twist it to take it out.
4. When installing a new wiper blade, follow the reverse procedure.

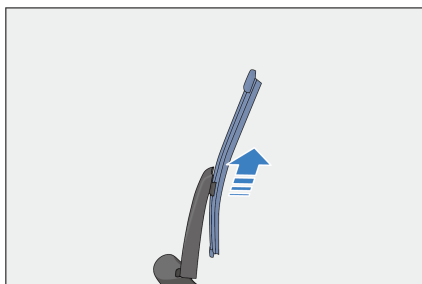

CAUTION

- Lower the wiper blades slowly and avoid direct impact onto the windscreen.
- Do not bend the wiper blade or obstruct the blade when the wiper is in operation.


Mirrors

Rearview Mirror

Manual Anti-glare Function


The interior rearview mirror can be adjusted to two positions, suitable for day and nighttime respectively. The nighttime position reduces glare from vehicles to the rear.

- Daytime driving - turn the control lever to position ①, in which the image in the interior rearview mirror is the clearest.
- Nighttime driving - turn the control lever to position ②, which reduces the disturbance from headlight beams from vehicles to the rear at night. Be aware that this glare reduction also reduces the clarity of the rear view.

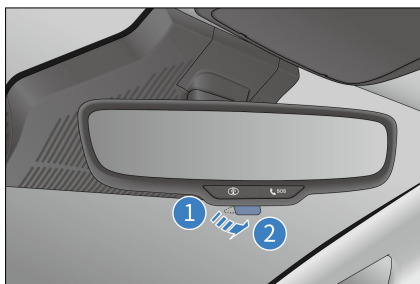

Adjusting the Rearview Mirror Manually

Move the interior rearview mirror up or down, left or right to a suitable position.

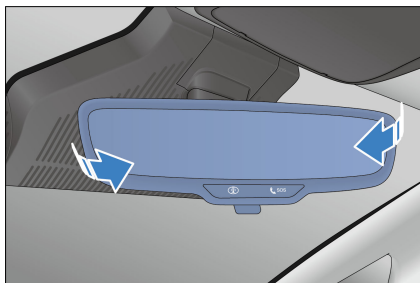

WARNING


- Adjusting the rearview mirror before driving. Do not adjust the rearview mirror while the vehicle is in motion, as it may distract the driver's attention, causing personal injury or death from accidents.
- Do not hang heavy objects from the interior rearview mirror, or shake or drag it with force.
- When manually adjusting the interior rearview mirror, do not forcibly adjust the stuck mirror to avoid the mirror falling off.

Side Mirrors

Side Mirror Adjustment

Use the associated switches to adjust the side mirrors to see the sides of the vehicle using.

- Selection switches: used to select the side mirror to be adjusted.
 -  : Left side mirror button
 -  : Right side mirror button
- Side mirror adjustment buttons  : Select the side mirror to be adjusted, and press this button to adjust the side mirror lens to a right position.

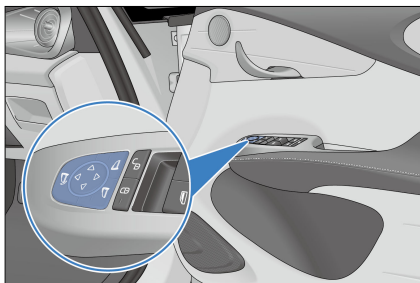

Folding Side Mirrors

Folding side mirrors manually

- Push the outer edge of a side mirror to rotate it around the folding axis to the locked position.

Folding side mirrors with power

- Fold switch  : folds or unfolds both side mirrors.
- Both side mirrors fold automatically when the anti-theft alarm system is armed, and extend automatically when disarmed.

- To enable or disable side mirror auto fold, go to infotainment touchscreen →

 → **Vehicle** → **Comfort Driving**.

WARNING

- Adjust the side mirrors before driving. Do not adjust the side mirrors while driving. This may distract your attention, causing accidents.


REMINDER

- Do not operate the controller or scrape the surfaces of frozen side mirrors. Use de-icer spray to remove the ice.

Switches


Light Switches

Set the light switch to **0** to turn off all lights except for daytime running lights.

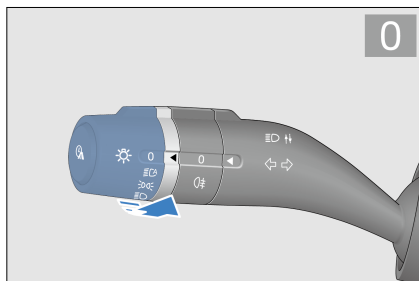


Auto lights

Set the light switch to . The body control module captures the brightness data from the light intensity sensor to automatically turn the position lights and low beam on or off.

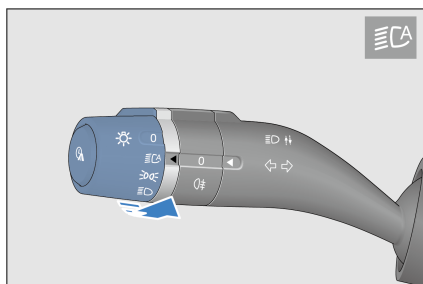


Position lights

Set the light switch to  to turn on the front and rear position lights and the license plate light.

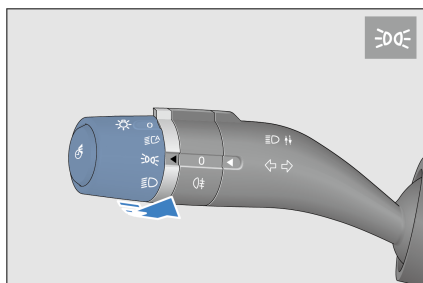


Low beam

Set the light switch to  to turn on the low beam.

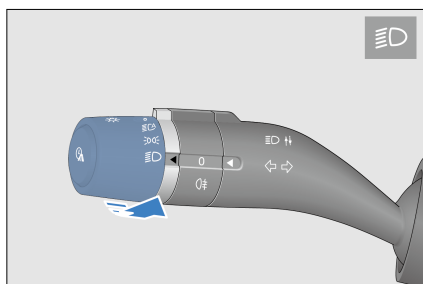


Rear fog lights

Set the light switch to  and rotate the fog light dial to  to turn on rear fog lights.

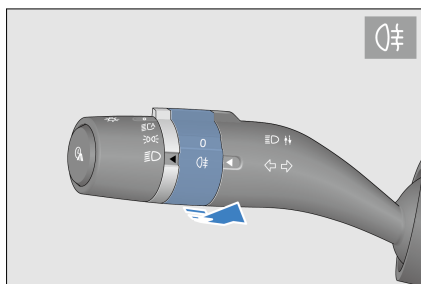


High beam

Set the light switch to  and push the light switch paddle down (away from the steering wheel) to turn on the high beam. Push down again to turn it off.

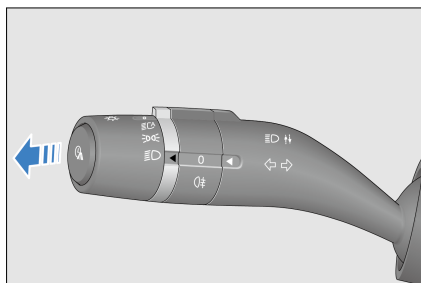


Overtaking light

Pull up the paddle (toward the steering wheel) to turn on the overtaking light. Release the paddle to reset the light switch, turning off the overtaking light.

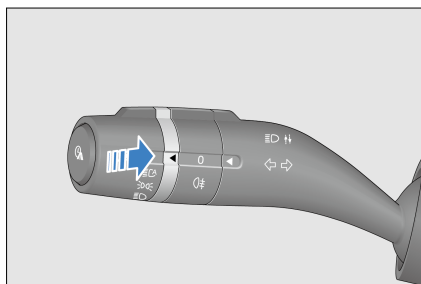

Turn signals

- Push up the paddle to signal right turn. The right turn signal and its indicator on the instrument cluster flash.
- Pull down the paddle to signal left turn. The left turn signal and its indicator on the instrument cluster flash.

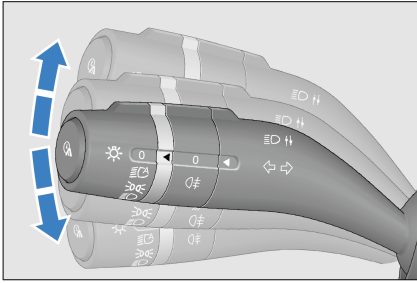

- Once turned on, turn signals continue flashing even after the paddle is released. They will turn off after the turn is complete. Depending on the driver's driving habits, the turn signals may not reset until after a full turn of the steering wheel.

Auto light off


- To activate this feature, set the light switch to or and switch off the vehicle power.
- With the feature is active,
 - the headlights and position lights turn off in 10 seconds if the driver's door is closed.
 - the headlights and position lights turn off in 10 minutes if the driver's door is open.
- After the lights turn off automatically, if the light status changes, these lights come on in the new status. If the conditions to activate the auto light off feature are still met, the function is activated again.
- Disabling the auto light off feature: When the vehicle is powered on, the auto light off feature is disabled, and the light switch can be operated normally.
- If the auto light off feature has turned off the lights and the anti-theft alarm system has been armed, disarming the alarm system makes the lights come on again automatically. If the driver's door remains closed, the lights go off after 10 seconds. But if any door is opened, the duration extends to 10 minutes.

Lighting delay

- Off delay:
 - With the combination switch set to , , or , when you power off and lock the vehicle, the corresponding light stays on for 10 seconds, or the duration set in the infotainment system, to illuminate your exit.
- Entry lighting:
 - With the combination switch set to , , or , when you approach and unlock the vehicle, the corresponding light turns on and remain solid for 10 seconds, or the duration set in the infotainment system, to illuminate your entry.
- The duration of off delay and entry lighting is adjustable in infotainment touchscreen → → **Light** → **Courtesy Light**.

Adjusting Headlight Height

When the low beam is on, on the infotainment touchscreen, tap → **Light** → **Exterior Light** → **Headlight Height** to adjust the vertical height of the headlights beam.

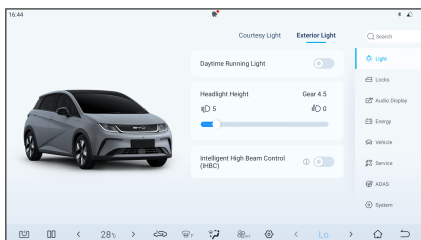


Loading Conditions	Recommended Lighting Level
One person in the driver seat	0-2
The driver, plus one passenger in the front seat	0-2
All the seats occupied	0-2
All the seats occupied, plus an evenly distributed load (calculated based on the technically permissible maximum laden) in the boot	1-3
Driver, plus an evenly distributed load (calculated based on the technically permissible maximum laden) in the boot	1-3

- Vehicle loading conditions may differ. Adjust accordingly.

Driver's Door Switches

Power Window Switches*

- When the ignition is on, the window switches can be used to roll up or down windows.
 - Press a window switch to roll the window down.
 - Pull up a window switch to roll the window up.

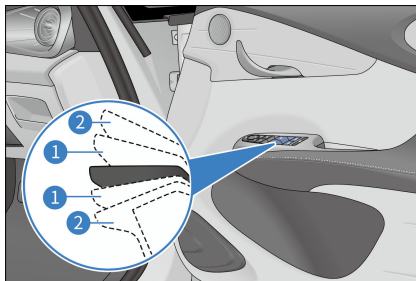

Manual operation

- Press or pull a window switch to position ① and hold to lower or raise the associated window. Release the switch to stop the window where you want it.

Automatic up/down function

- Press or pull a window switch to position ② and release to automatically lower or raise the associated window. During the process, operate the switch in any direction to stop the window midway.

Anti-pinch function*

If someone or an object is caught by the window when it is rolling up, the window stops and rolls down a certain distance automatically.

When automatic up or anti-pinch function fails

- Follow the steps below to restore the feature.
- Pull up the window switch to raise the window glass to the top position and hold it there for about two seconds, and then press to lower the window glass to the bottom and hold it there for about two seconds. The automatic up and anti-pinch functions can be recovered.

Delay function

- After the vehicle is powered off, if the front doors are not open, the four window switches has a 10-minute roll-up/down delay period. During this period, the windows can still be rolled up and down. If either of the front doors is opened during this period, the delay function is cancelled, and the switches can no longer be used to operate the windows.

WARNING

- Never try to deliberately activate the anti-pinch function by jamming any part of your body into the window.
- Please follow the precautions below to prevent serious injury or death from window closing:
 - Before operating the power windows, ensure that all passengers do not have any body parts that can be caught in the window.

WARNING

- Do not allow a child to operate the power windows.


CAUTION

- The anti-pinch function may not work if an object is jammed into the window when it is almost completely closed.
- Contacting a BYD authorised dealer or service provider for maintenance is recommended if the windows' automatic closing function or anti-pinch function is not working normally.

Window Lock Switch

Press the window lock switch. The red window lock indicator goes on. Only the switches on the driver's side can be used to open/close four windows; the window switches on the rear row are deactivated.

Press the switch a second time. The red window lock indicator goes out, and the window switches on the rear row work normally.

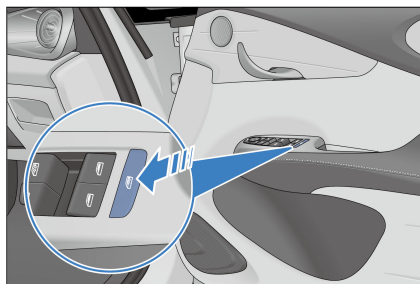

Central Locking


The driver's door is equipped with power door switches. to lock or unlock all doors.

Locking

Press the central lock button. All doors are locked and the red lock indicator lights up.


Unlocking

Press the central unlock button. All doors are unlocked and the red lock indicator turns off.

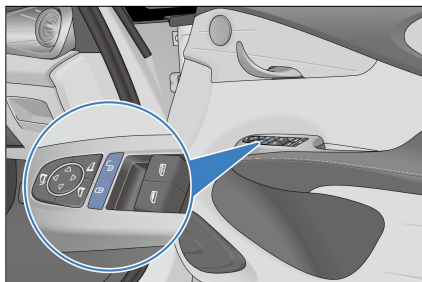

Passengers' Window Switches


These switches can be used to roll the associated window up or down, regardless of the ignition status (during the delay function timing period).

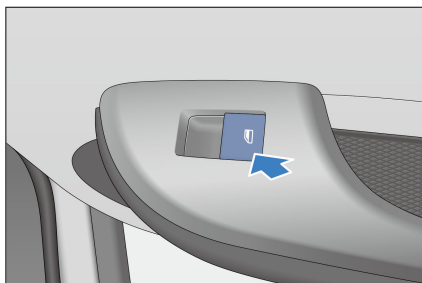

Odometer Switch

Press the odometer switch to switch between "Total Mileage" - "Mileage 1" - "Mileage 2" - "Total Mileage". The switching status is displayed accordingly on the instrument cluster.


Press and hold "Mileage 1" and "Mileage 2" to clear the mileage information.

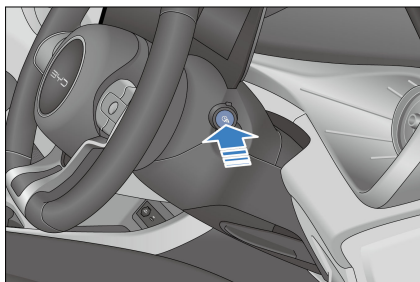

Mode Switches

MODE switch

Scroll the switch up or down to switch between NORMAL, ECO, and SPORT modes.

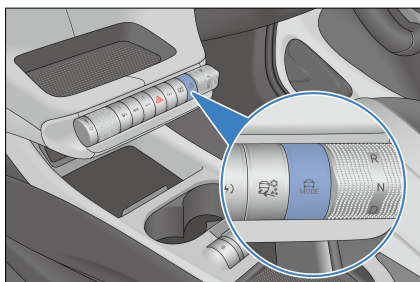


- ECO mode (ECO): moderate vehicle power, comfortable driving and riding experience, and better economy.
- Normal mode (NORMAL): standard settings mode, the default driving condition.
- Sport mode (SPORT): The vehicle shows good power performance, but its acceleration performance is reduced at low SOC, or too high or low temperatures.

Snow mode switch

- Scroll the switch up/ down to activate/ deactivate the snow mode.

- This mode is recommended on fairly strong surfaces covered in slippery materials such as grass, snow, ice, or gravel.

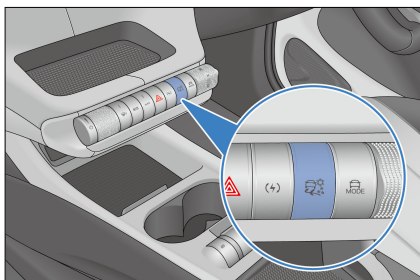


- In snow mode, traction and control features are optimised, but it is recommended to press the accelerator pedal slowly and control the speed.

CAUTION

- Because ESC activation limits the engine torque, momentarily deactivating ESC may help if the vehicle is stuck in deep snow. The ESC system must be restarted after conditions are back to normal, see **P138**.


Regenerative braking switch

Scroll the button up or down to switch between standard and high regenerative braking modes.

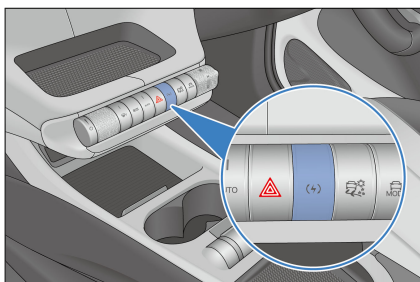

Front Passenger Airbag Switch

- The front passenger airbag can be deactivated if the car is equipped with a passenger airbag switch.
- The switch is located on the passenger side of the dashboard and is accessible when the passenger's door is open.

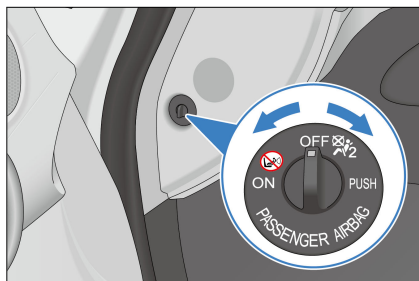

- The front passenger airbag indicator is located on the ceiling.
- Check that the switch is in the required position.
- Enable or disable the front passenger airbag according to the use of the front passenger seat:
 - When the switch is ON, the front passenger airbag is activated. The front passenger airbag indicator "PASSENGER AIRBAG" is solid on, "ON" and  come on, and "OFF" and  are off. The front passenger airbag deploys in the event of a moderate to severe collision that meets the necessary deployment conditions.
 - When the switch is OFF, the front passenger airbag is deactivated. The passenger airbag indicator "PASSENGER AIRBAG" is solid on, "ON" and  are off, and "OFF" and  are off.



come on. The front passenger airbag do not deploys in the event of a moderate to severe collision that meets the necessary deployment conditions.

WARNING


- Never use a rear-facing child restraint on the front passenger seat with an activated passenger airbag. Failure to do so can result in serious personal injury or death.
- When the front passenger seat is occupied with an adult, the passenger airbag switch must be turned to "ON" to always keep the front passenger airbag active.
- If the front passenger airbag remains active when the passenger airbag switch is off, immediately contact a BYD authorised dealer or service provider.

CAUTION

- To prevent damage to the airbag system, only operate the passenger airbag switch when the ignition is switched off.
- It is the driver's responsibility to confirm that the passenger airbag switch is in the correct position for the person sitting in the front passenger seat.

Emergency Call (E-Call)

- ① E-Call status indicator
- ② SOS button

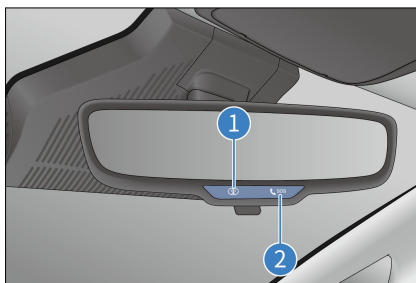

- E-Call refers to emergency call. Pressing and holding the SOS button for 1 second $\leq t \leq 10$ seconds triggers the E-Call system manually, and pressing and holding the button for 10-20 seconds does not.
- To cancel an emergency call made by mistake, press the SOS button a second time within five seconds.
- The E-Call system activates automatically in the event of airbag deployment or the detection of a severe collision.
- When triggered, the system automatically makes an emergency call and communicates standard information to a public safety answering point.

CAUTION


- The SOS button will be considered to be short-circuited (button stuck) if you press and hold the SOS button for over 20 seconds. In that case, the E-Call cannot be triggered manually.
- The dialed emergency call cannot be cancelled manually. The E-Call system will begin 60-minute callback time after the call is hung up by the public safety answering point or is not answered when it has been dialed 10 consecutive times.

Status	LED indicator	Beeping
Ignition off or E-Call system failure	Off	\
Power-on self-check mode	Flashing fast - 2 Hz	\
Ignition on and self-check passed	Solid on if self-check is passed	\
E-Call connecting	Flashing - 1 Hz	A beep
E-Call connected	Flashing - 1 Hz	A beep
E-Call ended	Solid on	Two beeps after E-Call ends
Callback time (60 minutes by default)	Flashing extremely slowly - 0.2 Hz	\

Hazard Warning Light Switch

Scroll the wheel  up and down once.

All the turn signals and their indicators start to flash. Scroll  up or down once again to stop the flashing.

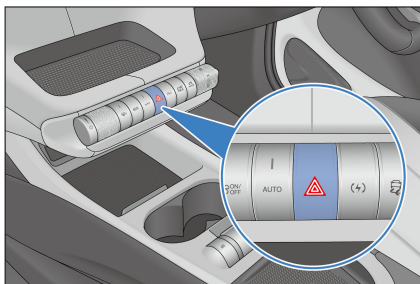


Sunshade*

Opening the sunshade

- Press and hold the sunshade open button ① to open the sunshade manually. Release the button midway to stop the sunshade.

- Release the sunshade open button ① immediately after touching it. The sunshade opens automatically. For the sunshade to stop at its current position, touch the ① or ② button midway.

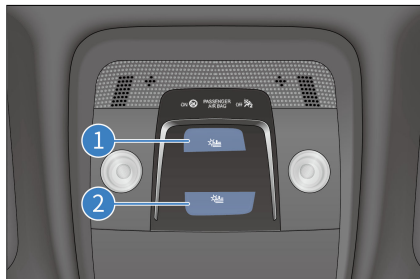

Closing the sunshade

- Press and hold the sunshade close button ② to close the sunshade manually. Release the button midway to stop the sunshade at its current position.
- If the sunshade has been initialised, releasing the sunshade close button ② immediately after touching it closes the sunshade automatically. For the sunshade to stop at its current position, touch the ① or button ② midway.

WARNING

- Keep clear of the sunshade when it is opening or closing, or severe injury may occur.
- When opening or closing the sunroof sunshade, avoid forceful contact with its curtain, to prevent damage.

Initialisation

when the sunshade operating system fails, in order to maintain the anti-pinch function, it may not be able to be opened or closed by pressing the button. In this case, initialize the settings as follows:

- Press and hold the sunshade close button so that the sunshade moves to the end and release your hand after hearing a sound of sunshade motor stalling.

CAUTION

- If Initialization does not work, contact a BYD authorised dealer or service provider.


Interior Light Switches

- Touch the interior lights to turn on or off the corresponding lights.


Front interior lights (Configuration 1)




Front interior lights (Configuration 2)

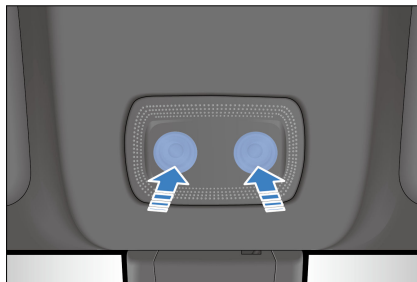

Rear interior lights*

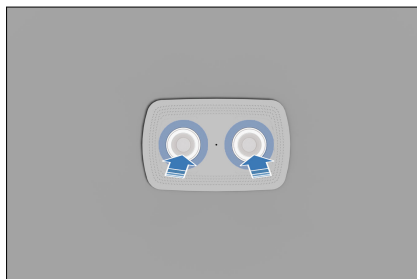

Rear side interior lights*

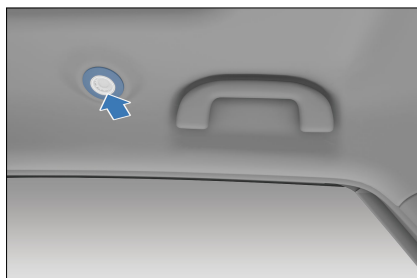

REMINDER

- In any ignition status, while DOOR option is selected and any door is open, interior lighting switches between high and low brightness with touches on the light switch.
- With the ignition off and DOOR option selected, interior lights will go off after the door have



REMINDER

remained open for a period of time.

04

USING AND DRIVING

Charging/Discharging.....	78
Batteries.....	91
Usage Precautions.....	96
Starting and Driving.....	101
Driver Assistance.....	111

Charging/ Discharging

Charging Instructions

Charging Safety Warnings

- The charging connector uses high-voltage current. Minors are prohibited to charge the vehicle or touch the charging equipment. Keep them and animals away from the vehicle during charging.
- Charge the vehicle in a safe environment, and avoid charging in thunderstorms, or areas with hazardous liquids, fire or heat sources, or flammable or explosive items.
 - Protect the charging equipment against water contact on rainy days.
- To reduce the risk of electric shock and personal injury, never operate the equipment with wet hands or touch the exposed metal of the charge port or charge base.
- Charging may affect medical electronic devices and even cause serious personal injury or death. If you use any medical electronic device (such as implantable pacemaker or implantable cardiovascular defibrillator), confirm before charging with the device manufacturer whether normal operation of the device will be affected.

Warnings for charging equipment

- Use charging equipment compliant with local standards.
 - To avoid charging failure or fire, do not modify, disassemble, or repair the charging equipment and related ports. Contact a BYD authorised

dealer or service provider if there is a fault.

- Do not use unqualified charging equipment that does not meet safety standards or has potential safety hazards.
- Ensure that power supply equipment, charging connector, charge port, and charging connection device are free of defects, such as cable wear, rusted ports, cracked casings, or foreign objects in the ports.
- Charging equipment grounding instructions:
 - The equipment must be properly grounded. In the event of failure of or damage to the equipment, the grounding cable provides a minimum impedance to circuit discharge, reducing the risk of electric shock.
 - The equipment comes with a ground cable connecting its ground point with that of the power plug, which must match a properly installed and well-grounded power supply outlet.
- When charging, do not place the equipment in the boot, under the front of the vehicle, or near the tyres, and prevent it from falling and being rolled over by the vehicle and trampled on.

Pre-charging warnings

- Ensure that there is no water or foreign materials in the charge ports of the vehicle, power supply equipment, and charging equipment, nor loose connections or damage caused by metal terminal rust or corrosion. In the event of any of these situations, do not charge.

Warnings during charging

- To prevent serious personal injury, pay attention to the following precautions during charging:


- Do not touch the metal connection of the charge port, charging connector, or plug.
- Do not charge or touch the vehicle in a thunderstorm. Lightning strikes may cause damage to the charging equipment or personal injuries.
- If anything abnormal is found in the vehicle or charging equipment during charging, such as peculiar smell or smoke, stop immediately and contact a BYD authorised dealer or service provider.
- Do not carry out maintenance work during charging.

Post-charging warnings

- After charging, do not disconnect the charging equipment with wet hands or while standing on any wet surface.
- Always unplug the charging and discharging equipment and close the charge port door before driving.

Compatibility of vehicle and charging infrastructure

- Compatibility signs are located on the vehicle's charging socket, the local charging infrastructure (charging stations and sockets), and on the charging cable.

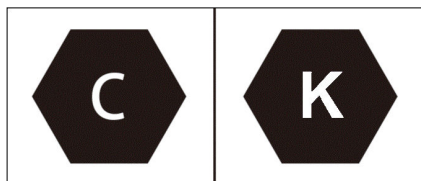

- The signs refer to standardised charging systems in accordance with DIN EN 62196.

Charging Precautions

- Although AC and DC charging can be carried out in any power mode,

it is safer to power off the vehicle before charging. The vehicle cannot be powered on during charging.

- If power supply resumes after short-time outage of the external power grid, BYD charging equipment will restart charging automatically and no re-connection of the charging equipment is required.
- If you need to stop charging before the battery is fully charged, try to set early stop for the charger first instead of directly unplugging the charger.
- When the vehicle is not used for an extended period, it is recommended to charge it once a month at least.
- If the battery has not been fully charged for a long time, the instrument cluster may prompt a message showing "Please charge the vehicle to full capacity to allow the battery to balance automatically." It is recommended to fully charge the vehicle as soon as possible to ensure the lifespan of the battery.

Precautions for charging equipment

- To prevent damage to the charging equipment and the vehicle:
 - Before starting the vehicle, check that the charging equipment is disconnected. When the charging connector is loosely inserted, you may still be able to drive off. This will damage the charging equipment and the vehicle.
- Do not close the charge port door when the port cap is open.
- To prevent failure of the charge port door, do not open and close it repeatedly. The recommended time interval for opening and closing the port door is at least one second.
- If the charge port door and charging connector are frozen due to weather

or other reasons, do not forcibly open the charge port door or pull out the charging connector.

- To prevent damage to the vehicle and the charge port, do not shake the charging connector during charging.
- Do not force the charging connector in or out while the charge port is locked.
- Take caution when using the equipment.
 - The charging cable has a limited reach. Do not pull or twist the charging cable with force.
 - Prevent any mechanical impact, such as fall and collide, on the charging/ discharging equipment. Take caution when moving the equipment.
 - Do not store or use the charging equipment at a temperature above 122°F (50°C).
 - Do not place the charging equipment near heaters or other heat sources.
- It is not recommended to use any additional wire or adapter/connector. If an additional adapter is required, consult a BYD authorised dealer or service provider for the suitable cable diameter and the adapter/ connector specifications must meet local requirements.

Before charging

- Do not force the charge port door open when it is locked.
- Make sure that the charging connector and the charge port are free of foreign objects, and that the protective cap of the charging connector terminal does not get loose or deformed.
- With the charge port unlocked, open the port, hold the charging connector, align the connector with the charge

port and push it in, making sure that they are properly connected.

During charging

- It is recommended that no one stay in the vehicle during charging.
- The A/C can be used as normal while the vehicle is being charged. However, the charging power may be reduced.
- It is better to park the vehicle in a ventilated area.
- It is normal that when the battery temperature control system is working during charging, the charging power displayed on the instrument cluster may fluctuate temporarily.
- Battery cooling may start, and the compressor, fan and other components work when necessary. It is normal that there will be some noise under the bonnet.
- Before charging is complete, battery equalisation is activated for longer battery life and thus the charging time may be longer.
- The charging cable must not be placed in a spiral during charging, as this will affect heat dissipation.
- Too high or too low battery temperatures compromise vehicle charging performance. When the weather is cold, it is better to charge the vehicle in a heated space indoors, whereas when it is warmer, charging in a cool, ventilated place is recommended.
- In the case of low-temperature charging, the temperature control system can improve the low-temperature charging capacity of the battery, but the charging time is prolonged and the heating power consumption is increased. These are normal phenomenons.

- For faster low-temperature DC charging, charging from low SOC is recommended because, due to the low battery temperature, the charging current is small for vehicles with high SOC in low-temperature environments.
- Turning A/C on during low-temperature charging affects the performance of the battery temperature control system and charging.
- When heating or cooling is enabled during charging, it is normal that both charging time and power consumption increase slightly.
- The estimated time until full charge is displayed on the instrument cluster and may vary slightly across temperatures, SOC, and charging facilities.
- Do not force the charging connector out while the charge port is locked, otherwise the charge port may be damaged.
- After unplugging the charging connector, be sure to close the charge port's cap, otherwise water or foreign materials could affect normal use of the port.
- To stop DC charging, turn off the charger before disconnecting the charging connector. In mode 2 charging, remove the charging connector and then the power plug.

Recommendations for improving the driving experience:

- When the State of Charge (SOC) bar on the instrument cluster turns red, the high-voltage battery is about to be exhausted. Please charge it immediately, otherwise the service life of the high-voltage battery will be reduced.
- It is recommended to charge the vehicle immediately after using it, for better charging performance.

After charging

- Stop charging first and make sure the charge port is unlocked.
- Hold the charging connector with one hand and remove the connector by pressing and holding its button*.
- After charging, unlock it first and then pull out the charging connector.

General Charging Troubleshooting

Fault	Possible Cause	Solution
Charger is connected, charge starts, but battery will not charge.	The high-voltage battery has been fully charged.	When the high-voltage battery is fully charged, the charging stops automatically.
	High-voltage battery temperature is too high or too low	Keep the vehicle in an environment with appropriate temperature and charge it when the temperature becomes normal.
	Low-voltage battery over-discharges.	Replace the low-voltage battery.

Fault	Possible Cause	Solution
	Charging equipment fails.	If it is verified that the charging equipment's power indicator is working properly, or that there are no other unusual indications, change the charging equipment or contact the charging equipment supplier.
	Vehicle display fails.	Verify that there is a charging system fault message on the instrument cluster, then stop the charging. It is recommended to contact a BYD authorised dealer or service provider.
Charging stops midway.	AC grid outage	Charging will automatically restart when the power grid is restored.
	Charging cable is not connected properly.	Verify that the charging connection cable is not loosely connected.
	Charging connection switch is pressed.	If the charging connection switch is pressed, the charging will stop. The charging connection should be connected again to start charging.
	High-voltage battery temperature is too high.	Charging stops automatically if the high-voltage battery overheating warning light comes on on the instrument cluster. Charge the vehicle when the battery temperature returns to a normal level.
	Vehicle or charging pile fails.	If there is any fault prompt for the charging pile or the vehicle, it is recommended to contact a BYD authorised dealer or service provider.

Charging

- Check before charging:
 - Ensure that power supply equipment, charging connector, charge port, and charging connection device are free of defects, such as cable wear, rusted ports, cracked casings, or foreign objects in the ports.
 - Make sure the metal terminals of power plug, socket, charging connector, or port are not loose or damaged by rust, corrosion, or ablation.
- Make sure the charging connector, port, power plug, or socket is not visibly stained or damp. In any of the event, wipe them with a dry and clean cloth to ensure the connection is dry and clean.
- In any of these cases, do not charge. Otherwise, personal injuries may occur due to short circuit or electric shock.
- Protect the charging equipment against water contact on rainy days.

Using Mode 2 Charging Cable*

Before mode 2 charging

- To prevent serious personal injury, read and observe the charging safety warnings in **P78**.
- To prevent damage to the charging equipment and the vehicle, read and observe the charging precautions in **P79**.

Equipment

- The Mode 2 Charging Cable* includes a power plug complying with local standards, a charging connector, a control box, and a charging cable. The plug should be connected to a standard household power socket, and the charging connector to the vehicle's charge port.
- Use household sockets that meet the local standards to prevent line damage or tripping due to high-power charging, which can affect the normal use of other devices.
- Connect the vehicle to an outlet that meets local standards to charge the vehicle.
- Charging time: Refer to the charging time message on the instrument cluster.



REMINDER

- It is recommended to contact a BYD authorised dealer or service provider or local electrician to select an appropriate power supply according to requirements of the charging equipment.
- When using Mode 2 Charging cable*, activate the immobiliser system of the charge port.

Charging


1. Open the charge port door.

- With doors unlocked and the vehicle preferably powered off, press the charge port door to open it.



2. Open the charge port cap.

- Open the charge port cap, and make sure that no obstacles exist between the head of the charging connector and the end of the charging socket.

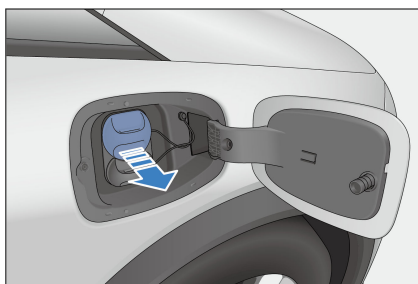

3. Connect the power supply terminal.

- Plug the Mode 2 Charging Cable* into a household socket.

4. Connect to the vehicle port.

- Plug the charging connector correctly into the port.
- The charging connection indicator  then lights up on the instrument cluster.
- In the charging process, charging parameters and the charging sign are displayed on the instrument cluster.

- You can now schedule charging on the infotainment touchscreen. See **P** for details.

! REMINDER

- Scheduled charging cannot be used when the battery is too low.

Stopping charging

1. End charging.
 - The charging automatically ends when the vehicle is fully charged.
 - To end the charging early, proceed to the next step.
2. Disconnect the connection.
 - Press the unlock button on the smart key or press the door handle microswitch while carrying the smart key and then pull out the charging connector.


! REMINDER

- To unlock the vehicle, press the unlock button on the smart key (when charging the vehicle with ignition off) or press the microswitch on the door handle (when the key is nearby).
- Unlock the vehicle to deactivate the charge port immobiliser before pulling out the charging connector. The connector has to be pulled out within 30 seconds, or the port will re-lock.
- You can activate or deactivate the immobiliser on the infotainment touchscreen, see **P90** for details.
- If the charging connector cannot be removed after unlocking, try a few more unlocking attempts. If that does not work, try emergency unlocking (see **P91**).

! REMINDER

- If you cannot pull the charging connector out directly when the charge port's immobiliser system is deactivated, try to unlock the vehicle and pull it again.

3. Disconnect the power plug.
4. Close the charge port cap and the port door.

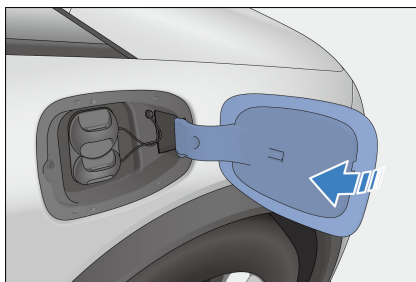

5. Store the charging equipment properly.

Using AC Charging Piles

Before AC charging

- To prevent serious personal injury, read and observe the charging safety warnings in **P78**.
- To prevent damage to the charging equipment and the vehicle, read and observe the charging precautions in **P79**.

Equipment

- AC charging box*
 - It consists of a charging box, a charging connector, and a connecting cable. For information on circuit breaker and emergency stop switch, see the charging box user manual.
 - Use a standard-compliant household charging box. For how to use the

charging equipment, refer to its user manual and follow the operating steps.

- AC charging pile
 - Charge the vehicle with an AC charging pile in a public place.
- Charging time: Refer to the charging time message on the instrument cluster.

Charging

1. Unlock the vehicle, then open the charge port door and cap.
 - Open the port door and the AC charge port cap as the steps for mode 2 charging*.
2. Connect to the vehicle port.
 - Plug the charging connector into the port and make sure it is tight.
3. Charging settings:
 - For AC charging pile/box subject to authentication, swipe the card or scan the QR code. See the user manual for charging pile/box for details.
4. The charging connection indicator  lights up on the instrument cluster.



REMINDER

- In the charging process, the instrument cluster displays relevant charging parameters and the charging sign.

Stopping charging

1. End charging.
 - Charging ends automatically when early stop time is due or charging is complete.
2. Disconnect the connection.

- Disconnect as per the instructions for mode 2 charging.

3. Close the AC charge port door (see instructions for mode 2 charging).

4. Store the equipment properly.

- If an AC charging pile/box is used, place the charging connector in its designated location.

Using DC Charging Piles*

Before using a DC charging pile

- To prevent serious personal injury, read and observe the charging safety warnings in **P78**.
- To prevent damage to the charging equipment and the vehicle, read and observe the charging precautions in **P79**.


Equipment

- Charge the vehicle using a public DC charging pile at a charging station.
- Equipment specifications: Check the instructions of the charging piles.
- Charging time: Refer to the charging time message on the instrument cluster.

Charging

DC charging is achieved by connecting the vehicle to a DC charger via its connector.

1. Open the charge port door.
 - Unlock the vehicle, then open the charge port door and cap.

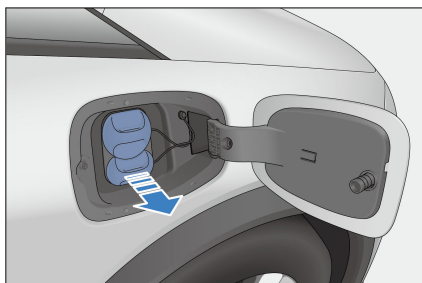

2. Connect to the vehicle port.

- Plug the charging connector into the port and lock it.
- ## 3. Operate the charging equipment as instructed to start charging.
- ## 4. The charging connection indicator lights up on the instrument cluster.



REMINDER

- In the charging process, the instrument cluster displays relevant charging parameters and the charging sign.

Stopping charging

1. End charging.
 - Charging ends automatically when early stop time is due or charging is complete.
2. Disconnect the connection.
 - Unplug the charging connector.
 - Press the unlock button twice within three seconds or press the microswitch on the door handle to stop charging.
3. Close the charge port cap and the port door.
4. Organise the equipment.
 - When charging is complete, organise the charging equipment and store the charging connector in its designated position.



CAUTION

- If the charging connector cannot be removed after unlocking, try a few more unlocking attempts. If that does not work, try emergency unlocking. For the operating procedure, see "Emergency Unlocking of the Charge Port" in "Charge Port Anti-theft Lock".
- To unlock the charge port after DC charging, press the unlock button twice within three seconds for the operation to be successful.
- See the charging instructions for specific charging precautions.



REMINDER

- Do not close the charge port door when the port cap is fully open.

Intelligent Charging

- This model is provided with the intelligent charging function. It is not necessary to disconnect the low-voltage battery's negative terminal when the vehicle is to be parked for a long period.
- When the left body control module detects that the low-voltage battery is too low, the low-voltage battery may be charged by the high-voltage battery.



REMINDER

- When the vehicle is stored for a long time, the intelligent charging function may be activated, which is normal and not a vehicle failure.
- Power for intelligent charging comes from the high-voltage battery pack, so it is normal that

! REMINDER

an SOC decrease is noticed when the vehicle is powered on.

- To avoid high-voltage battery over-discharging due to intelligent charging, when the vehicle is at low SOC, intelligent charging is not available. Avoid parking at low SOC for a long time, and charge the vehicle in time.

Smart Charging

- Smart charging encompasses scheduled charging and scheduled departure*. Scheduled charging allows you to customise the daily start time of the charging session. Scheduled departure enables you to set a desired departure time, before which the vehicle is fully charged, and if needed, the cabin temperature is optimised and the battery is preheated.
- You can access the setting screen either through the infotainment touchscreen or voice control:
 - On the infotainment touchscreen, tap the Smart Charging app icon, or
 - Tap  → **Energy** → **Charge/Discharge** to go to the Smart Charging screen.
 - Say "Hi BYD, start smart charging/scheduled charging/scheduled departure", "Hi BYD, I want to make smart charging/scheduled charging/scheduled departure", or "Hi BYD, please help me start smart charging/scheduled charging/scheduled departure".
- To exit the setting screen:
 - Tap  or .

- Say "Hi BYD, end smart charging/scheduled charging/scheduled departure" or "Hi BYD, exit smart charging/scheduled charging/scheduled departure".

! REMINDER

- Scheduled charging and scheduled departure cannot be activated simultaneously.

Scheduled Charging

- ① Switch to scheduled departure
- ② Settings
- ③ Scheduled charging switch
- ④ Scheduled charging time
- ⑤ Repeat cycle



- The factory default setting is to charge the vehicle immediately. That is, scheduled charging is disabled.
- To schedule a charging, toggle the scheduled charging ON ③, set the charging start time ④ and repeat cycle ⑤, then save the settings.
- After the schedule is set up successfully, if you connect the charging connector or press the power button to power off the vehicle during the charge waiting period, you will be reminded through the infotainment touchscreen that scheduled charging has been set. Switch to instant charging if needed.

- You can tap the scheduled charging setting icon ② to turn off the charging connector connected alert and power-off alert in the Scheduled Charging Alert.
- Tap ③ to switch to scheduled departure.

⚠ CAUTION

- The scheduled charging function is developed for BYD's slow AC charging equipment only. Disable this feature when using non-BYD-certified slow AC charging equipment. Otherwise, scheduled or immediate charging may fail due to no response from the equipment, resulting in low SOC or even low voltage of the high-voltage battery.

! REMINDER

- The vehicle's power consumption increases while waiting for the scheduled charging. It is normal for long waiting to result in a reduction of the vehicle's SOC and driving range.
- The charge now option on the reminder screen is valid for the current schedule only. To cancel all schedules, toggle scheduled charging off on the corresponding screen.
- In the event of low battery, the vehicle is charged to the minimum level before scheduled charging begins. In this process, the infotainment system still gives reminder messages for power-off and charging connector connection, and a related message is displayed at the lower part of the instrument cluster.

! REMINDER

- The schedule setting is invalid for DC charging*. Charging begins immediately after a DC charging connector is connected.

Scheduled departure*

- ① Switch to scheduled charging
- ② Scheduled departure switch
- ③ Scheduled departure time
- ④ Repeat cycle
- ⑤ Concessionary tariff hours



- To schedule a charging for departure, toggle the switch ① on, set the intended departure time ②, choose from single-use, daily, or customised repeat cycle options at ③, fill out the concessionary tariff hours ④, and save the settings.
- The system optimises charging by utilizing off-peak hours, ensuring it completes charging when the power price is lower. If the remaining charging time is longer than the remaining travel duration or the concessionary tariff hours, the vehicle initiates immediate charging to maximise the amount of energy it can acquire.
- The preheating function ensures the battery performs well in low-temperature conditions, ready for optimal performance.

- The intelligent cabin temperature control pre-cools or warms the cabin, ahead of the scheduled departure, ensuring a cozy environment.
- Tap ⑤ to switch to scheduled charging.



CAUTION

- When the SOC reaches a critically low level, the vehicle is charged to a minimum level before scheduled charging begins.
- Ensuring full charge, if not complete after the concessionary tariff hours, the vehicle continues charging until it is fully charged.
- When the vehicle is powered on, low-temperature battery preheating and cabin temperature control are deactivated, but the scheduled charging during concessionary tariff hours are still in effect.
- If the current time exceeds the scheduled departure time, both battery preheating and cabin temperature control are deactivated.
- Battery preheating and cabin temperature control incur a temporary battery usage.
- Battery preheating and cabin temperature control are only available when the SOC is above 40%.
- The vehicle's power consumption increases while waiting for the scheduled charging. It is normal for long waiting to result in a reduction of the vehicle's power and driving range.

Discharging Instructions

This vehicle is equipped with vehicle-to-load (V2L) feature.

Before Discharging:

- Discharging safety warnings are given in **P78**. Carefully read and observe these warnings to prevent serious personal injury.
- Discharging precautions are given in **P79**. Carefully read and observe these precautions to prevent damage to the charging equipment and the vehicle.



WARNING

- Do not touch any metal terminal of the discharging socket or the vehicle charge port during discharging.
- Stop discharging immediately if there are any abnormalities such as peculiar smell and smoke.
- Store the product in a cool and dry place when it is not in use.
- When discharging, do not place the equipment in the boot, under the front of the vehicle, or near the tyres to prevent it from falling and being rolled over by the vehicle and trampled on.
- Never use the equipment when the discharging connector or power strip is disconnected or broken, or when there is any sign of surface damage.



CAUTION

- For precautions concerning use of the discharge connection equipment*, refer to the charging equipment precautions in Charging Precautions.

CAUTION

- Before discharging, confirm the vehicle SOC and estimate the remaining driving range.
- Before V2L discharging, ensure that the load has been turned off.

REMINDER

- V2L discharging is recommended only when SOC is high.
- V2L discharging is restricted when the vehicle SOC is low.

External Discharging

Starting Discharging

- Before discharging, disarm the anti-theft alarm system.
- Unlock the charge port door switch, then open the port door and cap.
- Check before discharging:
 - Ensure that the battery capacity of the vehicle to be discharged is not below 15%.
 - Ensure the V2L connection device casing is not cracked, and its plug is free from rust or obstructions.
 - Ensure that there is no water or foreign material inside the charge port and that metal terminals are not damaged and free from rust or corrosion.
 - Do not discharge if abnormalities as described in the second or third condition are found; otherwise, short circuit or electric shock so caused could lead to personal injury.
- Connect the discharge connection device:

- Connect the V2L discharge device to the charge port. The power strip indicator lights up when the strip is powered and ready for use.
- Discharging starts:
 - After the connection is made, discharging begins and respective information is displayed on the instrument cluster.

Stopping discharging


- Stop discharging:
 - Disconnect the load.
- Disconnect the discharge connection device:
 - Unplug the discharging device.
 - Close the charge port cap and the port door (see instructions for Mode 2 charging).
- Organising the equipment:
 - Store the equipment properly when discharging is complete.

Charge Port Immobiliser System

In order to prevent the charging connector from being stolen, the charge port of this vehicle is immobilised during charging and discharging. The immobiliser is disabled by default. To activate it, go to the infotainment touchscreen →  → **Energy** → **Charge/Discharge** → **Charging Port Immobiliser System** and then tap **Enable**.

- When the immobiliser is enabled, unlock the vehicle and unplug the charging connector during charging in the following ways:
 - Press the unlock button on the smart key to unlock.

- Press the microswitch on the front door handle to lock or unlock the doors while carrying the smart key.

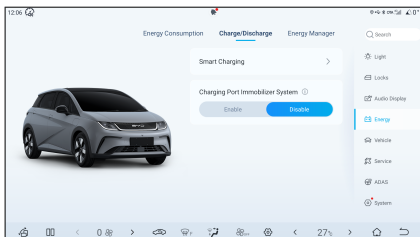

- Press the central unlock button under the driver's window to unlock.




CAUTION

- Unplug the charging connector in 30 seconds after unlocking or it will be locked again.
- When deactivated, the charge port immobiliser releases once charging is ended. If it is activated, you need to unlock the vehicle first.

Emergency Unlocking of the Charge Port

- When charging connector cannot be unplugged due to failure of the anti-theft lock, unlock the charge port manually.
- Open the bonnet. A lock latch can be found inside. Pull the latch to unlock the charging connector.

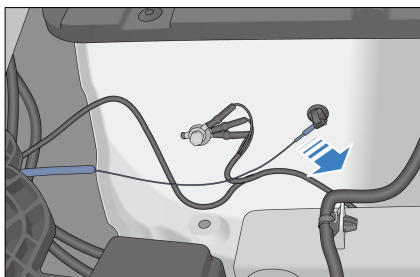

REMINDER

- In the event of abnormality or function failure, contact a BYD authorised dealer or service provider.

Batteries

High-Voltage Battery

- The vehicle is powered by a high-voltage battery that can be charged and discharged repeatedly. The high-voltage battery is charged by an external power source or through energy recovery when the vehicle brakes or coasts.
- The high-voltage battery is located under the vehicle floor, so be careful to avoid bumping when driving on bumpy or uneven roads.
- Due to the chemical characteristics of the battery itself, the battery capacity of vehicles that have been used for a period of time has natural degradation, and their pure electric mileage will reduce. It is recommended to go to a BYD authorized dealer or service provider for regular vehicle checks. The store-side inspection can confirm whether the reduction of pure electric mileage is normal.

Battery Properties

- It is normal that vehicle performance is affected by battery electrochemical properties and self-protection and varies to some extent in the following conditions:
 - When SOC is high, the regenerative braking performance may decline.

- The vehicle switches to trickle charging mode at high SOC. If the charging time is prolonged, the estimated remaining charging time displayed on the instrument cluster may not be accurate.
- When SOC is low, the acceleration performance may decline.
- When the high-voltage battery is low, V2L cannot be used as normal. Charge the battery promptly.
- At high or low temperatures, it is normal that the charging and discharging capabilities of the high-voltage battery decline, and the charging time is prolonged. Power performance may also decline under extreme temperatures.
- When charging in low temperatures, the temperature control system can significantly improve charging capability. For details, see Charging Precautions.
- When the vehicle is used at low temperatures, the battery's temperature control system will start heating the battery as appropriate to ensure the driving power and discharging performance and improve your driving experience. When the vehicle is driven over short distances, heating may be ineffective, which increases power consumption and decreases driving range.
- When the high-voltage battery is normal, the driving range of the vehicle varies with the following factors:
 - Driving habit: For example, the range in frequent acceleration or deceleration is shorter than that at constant speeds, and the range is shorter when driving at high speeds than when at low speeds.
 - Road conditions: For example, the range driven in rough conditions or

on long slopes is shorter than that in normal conditions and on even roads.

- Temperature: The driving range at low temperatures is shorter than that at ambient temperatures.
- Use of electric equipment: For example, the range driven with A/C on is shorter than that with A/C off.
- Usable capacity of the high-voltage battery is lower in cold weather and reduces as the temperature decreases. If the vehicle with high battery level is charged at low temperatures, the SOC may quickly jump to 100%.

Battery Usage Tips

- It is recommended to use the vehicle at temperatures between 14°F (-10°C) to 104°F (40°C). When SOC is low, timely charge the vehicle to ensure enough driving range and good acceleration performance.
- To ensure long term performance, avoid driving in extreme temperatures for over 24 hours.
- In low ambient temperatures, if the vehicle must be stored for a long time, it can be placed in an underground garage or other warmer area to reduce loss of battery heat, maintaining vehicle performance.
- Frequent and sudden acceleration or deceleration should be avoided. Drive the vehicle on flat and dry roads. When necessary, turn off high-power equipment such as A/C or adjust the A/C temperature to reduce power consumption of such devices and increase the driving range.
- Low-power charging contributes to the service life of high-voltage battery.

- When the vehicle is used for the first time or after a long idle period, the SOC displayed on the instrument cluster may not be correct. It is recommended to fully charge the vehicle first.
- It is recommended to fully charge the vehicle at a regular basis (at least once a week), and fully charge it from low battery (SOC <10%) once every three to six months.
- Under extreme working conditions (such as frequent sudden acceleration/ deceleration) that cause battery overheating, if the temperature of high-voltage battery is excessively high, it is normal for discharging capability to decrease gradually. If the battery temperature keeps rising, the fault warning light lights up on the instrument cluster. In that case, it is recommended to contact a BYD authorised dealer or service provider.
- When the battery SOC increases or decreases abnormally, it is recommended to contact a BYD authorised dealer or service provider for inspection.

WARNING

In the event of an emergency or accident, be aware of the following warnings:

- To avoid personal injury, do not touch the high-voltage battery directly.
- It is recommended to contact a BYD authorised dealer or service provider as soon as possible.
- If the high-voltage battery is damaged and leaking fluid, avoid any contact with the fluid. If it comes into contact with skin or eyes, rinse immediately

WARNING

with plenty of water, and seek immediate medical attention.

- If the vehicle catches fire, use dedicated fire extinguishers instead of water-based fire extinguishers.

CAUTION

- To ensure safety of the high-voltage battery, stop the vehicle away from flammable and explosive materials, ignition sources and various hazardous chemicals.
- The available battery capacity decreases as the vehicle is used over time.
- Prolonged exposure to heat sources and direct sunlight reduce the service life of the high-voltage battery.
- When the vehicle is not to be operated for an extended period (over seven days), it is recommended that the battery SOC should be kept at 40%-60% to prolong its service life. When the vehicle is not to be operated for over three months, the high-voltage battery must be fully charged and then discharged to 40%-60% every three months. Otherwise, over-discharge may lead to battery performance degradation or even damage. Any vehicle fault or damage so caused will not be warranted.
- If there is a collision with the high-voltage battery, contact a BYD authorised dealer or service provider immediately for maintenance.

Recycling the High-voltage Battery

How to scrap an NEV:

1. Take the vehicle to the BYD recycling service provider that will assess the residual value of the high-voltage battery.
2. Take the assessed vehicle to the recycling organisation to disassemble the high-voltage battery.
3. Take the battery to the recycling service provider which will buy back the battery.

WARNING

- New energy car owners have the responsibility and obligation to hand over waste high-voltage batteries to the recycling service outlet. Anyone who hands over a used high-voltage battery to any other organisation or individual, or removes/disassembles a high-voltage battery without authorisation, shall be liable for any environmental pollution or safety incident so caused.

Low-Voltage Battery (12 V)

It is positioned under the rear seat, with its access cover near the ankle of the rear middle passenger. With the access cover open, the low-voltage battery's negative terminal and negative GND wiring harness are visible.

- To prevent the SOC of the low-voltage battery becoming too low, the intelligent charging function is triggered automatically when conditions are met (ignition off, high-voltage battery discharging allowed, and low-voltage battery level below the design value).

- If the battery voltage is too low, it may not be able to power on the vehicle. In that case, contact the BYD authorised dealer or service provider promptly.
- After the vehicle has been in use for 3-5 years, it is recommended that the staff conducting routine maintenance should conduct checks on the low-voltage battery. These include checking the battery terminal for corrosion and whether the battery and terminals are firmly attached.

WARNING

- The low-voltage battery contains a corrosive solution. To prevent damage to the battery or injury, do not disassemble or repair the battery without authorisation.
- Do not disassemble or dismantle the low-voltage battery. Any organisation or individual to do so shall bear the responsibility for environmental pollution or accidents.
- Since the low-voltage battery may produce combustible and explosive hydrogen gas, use tools in such a manner that the battery would not produce sparks. Do not smoke or use open flames near the battery.
- Avoid electrolyte contact with eyes, skin or clothing. In case that happens, use baking soda water to clean the skin, and plenty of water to rinse the eyes, and immediately seek medical attention.
- In case of mouth contact with the electrolyte, seek medical attention immediately.
- Keep children away from the low-voltage battery.

⚠ CAUTION

- When checking the low-voltage battery, remove the ground cable from the negative terminal (-) first, and reconnect it last.
- When cleaning the low-voltage battery, make sure to avoid any fluid getting inside.

! REMINDER

- It is normal that intelligent charging with the ignition off produces a noise similar to when the ignition is switched on.
- Do not carry out maintenance work during intelligent charging.
- When leaving the vehicle, make sure the doors are closed and all electrical equipment is turned off.
- If the vehicle needs to be parked for a long time, please disconnect the negative terminal wire.

Waking up the Vehicle from Low SOC


Wake-up by the driver's door microswitch:

- The low-voltage battery features the dormant/wake-up function. The low-voltage battery may have entered a dormant state after long-term parking. In that case, the vehicle cannot be located or unlocked with the smart key. To wake up the vehicle, hold the smart key close to the driver's door and press the microswitch on the door for 3 seconds. When unlocked, the vehicle can be used as normal. If these actions cannot wake up the vehicle, the low-voltage battery may have been exhausted.


Wake-up by jump starting*:

If the vehicle cannot be waked up by using the microswitch, use a 12V power supply and two specially designed cables to jump start the vehicle.

- Positive terminal for jump starting: inside the under-bonnet power distribution box (PDB)

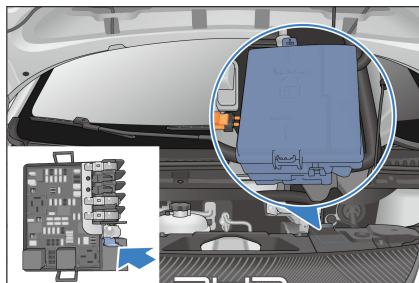

- Negative terminal for jump starting: bonnet latch

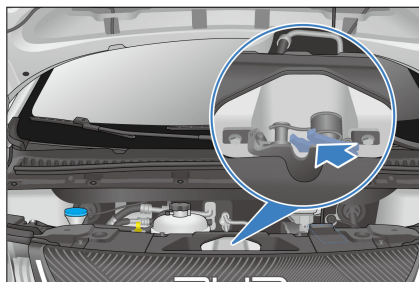

⚠ WARNING

- Never jump start another vehicle. This may damage the low-voltage battery.
- If the low-voltage battery SOC is too low or the battery fails, jump starting may be required. Please carefully read and strictly follow the jump starting instructions in this manual.
- The low-voltage battery contains an intelligent control module. To prevent battery damage,

WARNING

do not disassemble or damage this battery without permission, except in an emergency.

- Disconnect the negative terminal of the low-voltage battery before performing parts replacement and vehicle repairs.
- Do not clean the low-voltage battery with water, but wipe it with a cloth instead.

CAUTION

- It is recommended that the jump starting be done under the guidance of professionals, as the space for operating the under-bonnet PDB is limited and circuit-based risks are present.

Usage Precautions

Break-in Period

- If the powertrain is hard to start or frequently stops turning, inspect the vehicle immediately.
- If the powertrain makes any abnormal sounds, stop the vehicle for inspection.
- If the powertrain has severe coolant and oil leakage, stop the vehicle for inspection.
- The powertrain needs break-in. This should preferably be done within the first 1,243 miles (2,000 km) in economic mode. Steady driving instead of high-speed driving is recommended. The following practices effectively prolong vehicle service life:

- Avoid flooring the accelerator pedal when starting and driving the vehicle.
- Avoid speeding.
- Do not maintain a high or low speed for too long.

Trailer Towing

- This vehicle is designed to carry passengers. Do not overload or use it to tow other vehicles.
- Towing other vehicles has an adverse impact on the maneuverability, performance, braking, endurance, driving economy, power consumption, and other aspects of performance of the vehicle itself.
- Do not disassemble the rear bumper beam or add any boot-mounted bike rack without authorisation. Issues so caused are not covered by warranty.
- If you want to install a boot-mount bike rack, go to a BYD authorised dealer or service provider to consult whether this function is supported on your model. Upgrade the hardware there if it is practicable.
- The installed bike rack can load no more than three bikes. When the vehicle is carrying a bike (or bikes), only one passenger is allowed in the rear seat and the technically permissible laden mass (165.35 lb or 75 kg) of the towbar must not be exceeded. For driving safety, do not speed or overload the vehicle.
- This vehicle is designed to carry bike rack or similar luggage rack. Do not tow a caravan or any other trailers.
- This vehicle is not designed for transporting luggage on the roof, so installing roof racks or boots are not recommended. Any damage

from such adjustments or the use of these accessories are not covered by warranty.

- Driving safety and comfort depend on correct equipment usage and good driving habits.
- BYD does not provide free warranty for the damage or faults resulted from the trailer towing.

Driving Safety Precautions

No Drunk Driving

Even a small amount of alcohol can reduce a driver's ability to respond to traffic condition changes. The higher the level of alcohol, the less responsive the driver will be. Therefore, never drive while under the influence.

No Speeding

Speeding is a major cause of fatal accidents. Faster speeds generally entail higher risk. Therefore, maintain a speed safe for the road traffic conditions.

Keeping the Vehicle Safe for Driving

Tyre bursts and mechanical faults are extremely dangerous. To reduce the possibility of such faults, frequently check the vehicle's condition, and regularly complete the specified inspections.



CAUTION

- Any driver must possess a driver's license before driving a vehicle.
- Do not drive when fatigued.
- Always follow the traffic regulations when driving a vehicle.



CAUTION

- When driving, drivers must stay focused and not carry out any unrelated activity, such as answering calls or adjusting buttons.

Vehicle Use Suggestions

Battery service life is extended when the following is observed:

- When the vehicle is not to be operated for an extended period (over seven days), it is recommended that the battery SOC should be kept at 40%-60%, or it will reduce high-voltage battery service life.
- When the vehicle is not to be operated for over three months, the high-voltage battery must be fully charged and then discharged to 40%-60%. Otherwise, over-discharge may lead to battery performance degradation or even damage. Any vehicle fault or damage so caused will not be warranted.
- During operation of the vehicle, if the instrument cluster displays the pure electric driving mileage as 0, it indicates the battery SOC is low. In this case, charge the high-voltage battery in time and avoid operating the vehicle with low SOC for a long time.
- For optimal battery performance, use a charging connector to fully charge the battery regularly, and the recommended frequency is once a week at least.
- To maintain long-term performance, avoid continuously exposing the vehicle to an environment with a temperature above 140°F (60°C) or below -22°F (-30°C) for over 24 hours.
- If the tray dented inward or there is scarification under the battery package

tray, it is suggested to check at a BYD authorised dealer or service provider.

- During operation of the vehicle, avoid repeated rapid acceleration or deceleration whenever possible.
- Keeping the vehicle work for a long time could overheat the battery, and optimal vehicle performance may not occur. In that case, turn off the vehicle and wait until the battery cools down.
- If the instrument cluster malfunctions during driving, it is recommended to contact a BYD authorised dealer or service provider for inspection as soon as possible.

REMINDER

- If the meter drops to 0, the battery must be recharged. If it is not recharged within 7 days, the battery may suffer permanent damage. Such damage is not covered by BYD warranty terms.
- Driving range depends on many factors, such as the vehicle's available power, vehicle age (current battery life), weather, temperature, road conditions and driving habits. Compared with under normal temperatures, the pure-electric driving range is somewhat reduced and power performance will also be affected in low or high temperature environments.

Carrying Luggage

- This vehicle has multiple storage spaces. Overloading or improper accommodation may affect maneuverability, stability and normal operation of the vehicle, and reduce its safety.

- Make sure the vehicle's total load (vehicle + passengers + luggage) remains within the specified maximum weight.

WARNING

- Overloading and improper accommodation may affect vehicle maneuverability and stability, which may lead to collisions.
- Observe the maximum weight limit and other loading guidelines in this manual.
- Do not carry highly magnetic items, as they might interfere in the vehicle's normal operations.

Carrying Luggage in the Passenger Area

- All items that could be thrown inwards and thus injure occupants in case of a collision must be properly placed and secured.
- Ensure that items placed on the floor behind the front seat do not roll under the seat, so as to avoid affecting the driver's ability to control the pedals or normal seat adjustment. Do not stack items to a height taller than the front seatbacks.
- Make sure the glove box is always closed while driving. If the glove box is open, the occupant's knees may be injured in case of a collision or an emergency stop.

WARNING

- Do not pile up toys in the vehicle, as this may affect driving safety and present a hazard to the children, especially in case of emergency braking or collision.

Loading the Boot

- Place luggage evenly in the boot. Put heavier items at the bottom and as far in as possible.
- Secure items with ropes or straps so that they will not move while driving. Do not stack items to a height taller than seatbacks.
- For boot strapping or fastening supplies, contact a BYD authorised dealer or service provider.

Wading into Water

- Check water depth before driving into flooded areas, it must not exceed the vehicle's lower edge.
- If crossing a flooded area is necessary, turn off the air conditioner and keep acceleration steady to slowly cross over.



- Never stop, back up, or turn off the vehicle in flooded areas.
- After crossing over, press the brake pedal several times to dry out the disks and recover brake performance.
- Be careful when driving through deep water, as brakes may get wet.

WARNING

- The presence of water, mud, or silt in the braking system may delay brake response and extend braking distance.
- Drive carefully and avoid emergency braking after crossing flooded areas.
- The motor will be seriously damaged if it is submerged when crossing a flooded area. Such damaged is not covered by the vehicle's warranty
- Other systems like transmission, driving and electrical systems may also be seriously damaged upon submersion. Such damage is not covered by the vehicle's warranty either.

Influence of water ingress in high-voltage components:

- Water getting into high-voltage components, which are electronic devices, may not be fully dried out by any means.
- Water ingress seriously compromises insulation of high-voltage components, and conductive substances in water may lead to short circuit of high-voltage components or such risk in the entire high-voltage system. This significantly affects the safety and service performance of the vehicle.
- The reduced ingress protection rating and voltage withstanding performance due to water in high-voltage components pose a high safety risk.
- Be sure to find a sheltered place when charging the vehicle on rainy days. If the vehicle is immersed in water or wades through water over

the doorsill, which may cause water ingress in high-voltage components, promptly contact a BYD authorised dealer or service provider for testing and troubleshooting. Do not drive on roads where the depth of accumulated water exceeds half of the tyres.

Fire Prevention

To prevent vehicle fires in a timely and effective manner, pay attention to the following during use of the vehicle:

- No flammable or explosive items are allowed in the vehicle.
 - Temperatures may reach 140°F - 158°F (60°C - 70°C) in a vehicle exposed to direct sunlight in summer. Therefore, flammable and explosive items, such as lighters, cleaning agents and perfumes, stored in the vehicle can cause a fire or even explosion easily.
- Make sure cigarettes are thoroughly put out.
 - Smoking is harmful to your health and may cause a fire. Cigarettes that not thoroughly put out may cause a fire.
- It is recommended to go to a BYD authorised dealer or service provider for regular vehicle checks.
 - Check vehicle wiring, connections, wiring harnesses, insulation, and fixed position regularly. Deal with identified problems promptly.
- Do not refit vehicle wiring or add any unauthorised electrical appliance.
 - The addition of extra electrical appliances, such as high-power audio systems, and light fixtures, may overload and overheat the wiring harness and increase the risk of fire.
- Improper refitting of electrical appliances or wiring may cause a fire due to contact resistance and abnormal heating. Fuses or other replacement wires in excess of relevant electrical rating are strictly prohibited.
- Select a proper parking location.
 - When parking the vehicle, try to avoid sun exposure.
- Keep a lightweight fire extinguisher in the vehicle and know how to use it.
 - In order to ensure vehicle safety, a fire extinguisher should be equipped in the vehicle, and be checked and replaced regularly. Also, you should familiarise yourself with use of the fire extinguisher and be prepared for any accidents.
- Disconnect the negative cable of the low-voltage battery when the vehicle is being serviced or repaired.
- In the event of a fire in the vehicle, take effective measures in a timely and calm manner to minimise any losses:
 - Fires typically show initial warning signs, such as abnormal noises and odours in the vehicle body. When abnormal conditions are found, turn off and stop the vehicle immediately. It is best to park the vehicle in a windproof place, and then put out the fire using the fire extinguisher in the vehicle.
 - Call the fire alarm in time, and also dial the insurance company's reporting number and ask the company to come to the fire site for handling.
 - Look for the ignition point. If the engine compartment smokes, do not open the bonnet immediately. (This will let a large amount of air in and cause fire spreading. There is limited comburent in the cabin. Keeping the

bonnet closed can control the fire so that the fire can be easily put out). Point the on-board fire extinguisher at the ignition point from the bonnet gap to put the fire out, or seek help from the passing cars. If you can borrow more fire extinguishers, open the bonnet to put it out when you cannot see any flame from outside.

- If the fire brigade is involved, ask for a duty performance certificate and a description of fire cause.
- After occurrence of the accident, contact the insurance company for post-event handling in a timely manner.

! REMINDER


- In order to mitigate losses in the event of an accident, the purchase of commercial insurance (fire loss, theft, etc.) is recommended.

Starting and Driving

Starting the Vehicle

In normal cases, start the vehicle as below:

- Turn off all unnecessary lights and accessories.
- Carry the correct smart key with you.
- Press the START/STOP button ② while pressing the brake pedal ①.

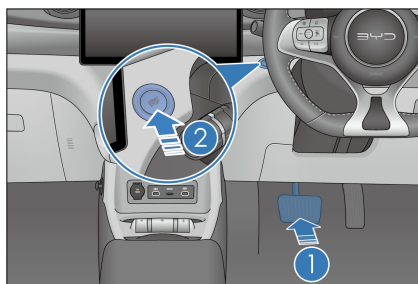

- The vehicle is ready to drive when the OK indicator lights up on the instrument cluster.
- The vehicle cannot power on when:
 - After you press the START/STOP button, if the smart key warning light turns on, a beep sounds, and the message "No key detected" is displayed on the instrument cluster, the key may not be in the vehicle or cannot be detected due to interference.
 - The electronic smart key is on the floor, or in the boot or glove box.



CAUTION

- The vehicle can not be started when the electronic key is left stationary for more than 1 minutes (depending on the configuration of the vehicle).

To start the vehicle in emergency if the braking signal cannot be detected or is erroneous:

- Engage the parking brake firmly.
- Turn off all unnecessary lights and accessories.
- Shift to "P" or "N".
- The ignition must be off.
- The smart key is in the vehicle.

- Press and hold the START/STOP button for more than 15 seconds to start the vehicle.

REMINDER

- Do not touch the power button while driving.


Remote Start*

Before starting

1. The ignition must be off.
2. The vehicle must be in Park.

Remote Start with the Smart Key

1. Press and hold the remote start/stop button on the electronic smart key for two seconds to start the vehicle. After it is started, turn signals will flash three times.
2. If there is no valid operation within 10 minutes after remote start, the vehicle stops and powers off, and turn signals flash twice.

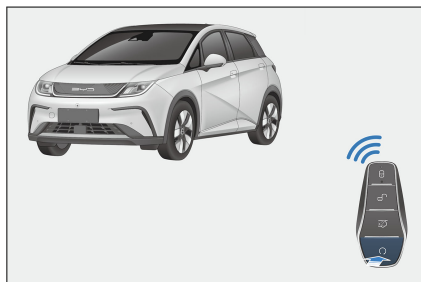

3. After the vehicle is started, pressing and holding the remote start/stop button on the smart key for two seconds switches the ignition off. The turn signals then flash twice.

Auto Power On/Off*

- Auto power on/off is disabled by factory default. You can enable

this feature in the infotainment touchscreen →  → **Vehicle** → **Comfort Driving**.

- When auto power on is enabled, power on the vehicle in either of the following two methods:
 - Method 1: After unlocking with the valid smart key, microswitch, NFC key* or by using the BYD App*, open the driver's door for the first time while carrying the valid key to activate the feature.
 - Method 2: Press the brake pedal while carrying the valid smart key, NFC key* or using the BYD App* to let the vehicle become drive-ready.
- When auto power off is enabled, power off the vehicle in either of the following two methods:
 - Method 1: Press the START/STOP button.
 - Method 2: Shift to Park, and lock from the outside with the valid smart key, microswitch, NFC key* or using the BYD App*.

REMINDER

- Auto power on is operational only when the driver's door is opened for the first time after unlocking.
- If a door other than the driver's door is first opened after unlocking:
 - When the ignition is still off, opening the driver's door the first time switches it on.
 - When the ignition has been switched on and then off, opening the driver's door does not switches it back on.
- When auto power on is disabled, the brake pedal and the START/



REMINDER

STOP button must be pressed to power on the vehicle.

- Auto power on is not operational when the bonnet is open.
- The vehicle responds to the locking command from the BYD App, but not the off command. This prevents false triggering.

Driving

Safety Check Before Driving

Exterior

- Tires: Check tyre pressure and carefully inspect tyres for any cut, damage, foreign material, anomaly, and excessive wear. In case of excessive or uneven tyre wear, take the vehicle to a BYD authorised dealer or service provider for four-wheel alignment and relevant inspections as soon as possible.
- Lug nuts: Ensure all nuts are fitted and tightened.
- Leaks: After the vehicle has been stationary for some time, check for fluid deposits beneath it. These may indicate a leak of coolant or other liquids. (It is, however, normal for a small pool of water to form, caused by the air conditioning system.)
- Lighting: Make sure headlights, position lights, turn signals and all other lights are working normally. Check headlight intensity.

Interior

- Seat belts: Check whether seat belts can be properly fastened. Verify that seat belts are not worn or scratched.

- Instrument cluster: Particularly, verify that maintenance indicator, instrument cluster lighting, and defroster work properly.
- Braking: Verify that there is enough space for the brake pedal to work.
- Low-voltage battery and cables: Check connectors for any corrosion or looseness and any cracks in the battery housing.

In the engine compartment

- Spare fuses: Verify that spare fuses of all rated charges in the fuse box are available.
- Coolant level: Verify that coolant level is correct.
- Brake fluid level: Verify that the brake fluid level is correct.

Check after starting

- Instrument cluster: Confirm that the maintenance indicator and the speedometer work normally.
- Brakes: In a safe area, drive the vehicle straight, hold the steering wheel tightly, decelerate and apply the brake. Verify that the vehicle maintains a straight direction.
- Other abnormalities: Check for loose parts, leaks, and unusual noises.


Preparations Before Driving

- Check your surroundings before getting into vehicle.
- Adjust seat position, seatback angle, cushion height*, head support height, and the steering wheel angle.
- Adjust interior rearview mirror and side mirrors.
- Make sure all doors are closed.
- Fasten the seat belts.


Gear Shift Controls

The gear options are marked on the centre console switches as shown.

- "R": Reverse, used only when the vehicle has come to a complete stop.
- "N": Neutral, used for temporary stop. Under all circumstances, always shift to "P" before getting out ("Parking").
- "D": Drive. Shift to "D" to drive the vehicle normally.

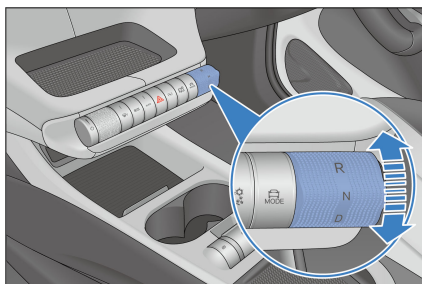

- "P": Park. Press this button to park the vehicle. The transmission should be set to this position when the vehicle is being shut down or started up. While pressing the brake pedal to start the vehicle, you may shift from "P" to another position.

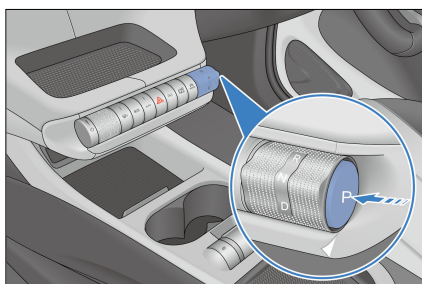

WARNING

- Don't coast downhill in "N" or "P", even if the motor is not running.


CAUTION

- To prevent unintended vehicle movement, pull up the brake and press the "P" button once the vehicle has stopped completely.
- To prevent damaging the transmission, press the "P" button only after the vehicle has completely stopped.

Electronic Parking Brake (EPB)

Electronic Parking Brake (EPB) Switch

- Be sure to engage the EPB every time before parking and leaving the vehicle.

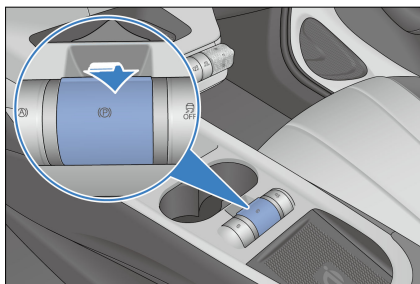

Engaging EPB Manually

Pull up the EPB switch to let EPB apply an appropriate parking brake force. On the instrument cluster, (P) flashes and then becomes solid on, indicating that EPB has been engaged. The "EPB activated" message is now displayed.

CAUTION

- When (P) flashes, EPB is working. If the vehicle is on a slope, do not release the brake pedal until (P) is steady on to avoid vehicle slipping.

Engaging EPB Automatically

This function is designed to improve vehicle safety. Excessive reliance on or frequent use of the function is not recommended. For safety, make sure that the vehicle is shifted into Park and the EPB is engaged before getting off.

- When the ignition is switched off, EPB engages automatically and (P) lights up on the instrument cluster.
- Press the brake pedal to stop the vehicle and shift into Park. EPB is engaged automatically. Do not release the brake pedal until (P) on the instrument cluster stops flashing and becomes steady on and the "EPB ON" message is displayed.
- Press the brake pedal to stop the vehicle and engage the EPB continuously, and open the driver's door after shifting into Park or Drive. Do not release the brake pedal until the indicator (P) on the instrument cluster stops flashing and becomes steady on and the "EPB ON" message is displayed.



CAUTION

- The EPB is not automatically engaged if you switch off the ignition immediately after pressing the EPB switch.

Releasing EPB manually

- When vehicle has been powered on and is not shifted into P (Park), press and hold the brake pedal and the EPB switch until the indicator on the instrument cluster goes out, indicating EPB has been released, and an "EPB released" message is displayed.



CAUTION

- The P gear is the vehicle's parking gear, meaning that the vehicle is in a stable parking status, while EPB is the vehicle's main parking device. To ensure parking safety, release EPB with the EPB switch only when the vehicle is not in P gear (parking gear).

Automatic EPB Release upon Vehicle Start

- With the vehicle parked, start the vehicle, press and hold the brake pedal, and shift from Park or Neutral into a driving gear such as Drive or Reverse. EPB is released automatically, the indicator goes off, and the "EPB released" message is displayed.



CAUTION

- Be sure to always press and hold the brake pedal when shifting gears. Release the pedal only after the intended gear is displayed on the instrument cluster.
- The EPB system conducts power-up self-check within several seconds after the vehicle is started. In this process, the system does not respond to any function.

- When the vehicle has been started and the gear is in a driving gear such as Drive or Reverse, engage EPB on the infotainment touchscreen, then simply press the accelerator pedal slowly to a certain degree. EPB is released automatically and (P) turns off with the message "EPB released" displayed.

When EPB Release Fails

- If manual EPB release fails, press and hold the EPB switch for over two

seconds. If EPB can be released, drive the vehicle to the nearest repair shop to check the brake pedal switching signal and relevant parts and lines. If it cannot be released, contact a BYD authorised dealer or service provider immediately.

- If braking fails or is blocked, press and hold the "P" button for over 2 seconds for emergency braking.

WARNING

- For safety considerations, refrain from using the "P" button for emergency braking in normal driving.
- If the brake pedal fails or is blocked, use the emergency braking function while you can always keep the vehicle under control and drive normally.
- As the EPB cannot go beyond the physical limit of road adhesion, activating the emergency brake function may result in vehicle drift, sideslip, or deflection when the vehicle passes through bends or dangerous/heavy-traffic road sections, or when the vehicle is driven under severe weather conditions. Be careful to avoid any possible accident.

EPB System Indicator

- When the vehicle is powered on, if the EPB is engaged, the indicator (P) on the instrument cluster will be steady on.
- When the vehicle is powered off, if the EPB is engaged, (P) on the instrument cluster turns on and then turns off in several seconds.
- When the vehicle is powered on, the EPB system starts self-check. (i) turns

on and then off in several seconds on the instrument cluster. If it does not, the EPB or braking system may be faulty. It is recommended to contact a BYD authorised dealer or service provider for inspection immediately.

EPB Operating Sound

- EPB motor noises can be heard while the EPB is being engaged or released.
- If there is a burning smell or unusual noises after emergency braking is activated, contact a BYD authorised dealer or service provider immediately.

WARNING


- To prevent the vehicle from moving, do not the replace EPB with the gearshift when parking. EPB must be used instead, and the vehicle must be in Park.
- To prevent serious accidents, never allow any passenger in the vehicle to operate the EPB button when the vehicle is running.
- When the EPB is being engaged or released, the brake pedal must be pressed to prevent the vehicle from moving, and the subsequent locking of the gearshift that occurs because the EPB cannot provide a sufficient parking force.

Automatic Vehicle Hold (AVH)

Auto Vehicle Hold (AVH): The automatic vehicle hold (AVH) is activated automatically when the moving vehicle needs to be stationary for longer periods of time, such as in traffic jams on a slope or waiting at traffic lights.

AVH standby

- When the ignition is on, press the AVH switch to enable AVH. (A) is displayed on the instrument cluster.
- Press the AVH switch again to disable AVH.

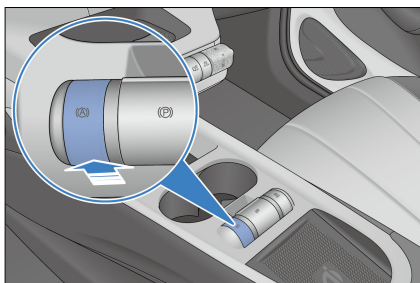

AVH activated

- When the AVH standby indicator (A) is solid on, press the brake pedal until the vehicle stops (vehicle speed goes to zero) to activate AVH function. At this time, the vehicle is in AVH state with (A) displayed on the instrument cluster.

! CAUTION

- For AVH to be activated, all of the follow conditions must be met:
 - The driver's seat belt is fastened and the doors are closed.
 - Intelligent power braking system and electronic park brake (EPB) systems are normal.
- Pressing the accelerator pedal, shifting into Park, or activating the EPB cause AVH to exit to the standby status.
- The AVH defaults to off once the vehicle is powered up.
- The next time the ignition is switched on, AVH restores to the on/off status the last time the ignition was switched on.

AVH running

- The AVH function runs normally when the AVH function is activated, brake lights and the high mount brake light are on, and the AVH indicator (A) is solid on on the instrument cluster.
- The AVH function exits to the standby mode after the vehicle stops for 10 minutes, with the AVH standby indicator (A) lighting up and gear shifted into Park
- To activate AVH function, shifting into Drive to enable the vehicle to move, and then press the brake pedal until the vehicle stops (vehicle speed goes to zero).

AVH exits

- When the AVH function runs normally, AVH exits and the gear is shifted into Park from Drive automatically when the driver performs the followings:
 - Open the driver's door.
 - Unlock the driver's seat belt.
- The gear status is in Drive when the vehicle stops, and EPB is enabled.
- Press the AVH switch again to disable AVH when releasing the brake pedal.

AVH suppressed

- Shifting into Reverse, AVH goes into slow-moving condition. When the vehicle is reversing (R gear) or travelling (shift into D gear from R gear) at a low speed, AVH cannot be activated and stays in standby status to improve vehicle motion.
- To exit slow-moving mode, drive at a speed above 10 km/h or restart AVH after exiting.

Driving Precautions

- Drive slowly and carefully along gravel roads. To prevent tyre damage, do not drive over sharp-edged obstacles.
- Slow down on bumpy or uneven roads. Otherwise, the impact may seriously damage wheels.
- Avoid driving through flooded areas as much as possible.
- Slow down when driving against strong winds.
- Cleaning the vehicle or driving through deep water may wet brakes. To keep brakes dry, drive carefully and press the brake pedal gently.
- Drive carefully on slippery roads, such as roads covered in ice, snow or sand, or surfaces such as wet ceramic tiles or epoxy resin. Avoid parking on slopes to prevent vehicle sliding.



WARNING

- Drivers must ensure the safety of all vehicle occupants, and show them how to handle the vehicle's functions properly.



REMINDER

- The battery is located in the vehicle's chassis. Make sure to avoid bumping when driving.
- Before driving, make sure that EPB is fully released and that the EPB indicator light is off.
- Do not leave the vehicle with ignition on.
- Do not rest your feet on the brake pedal and accelerator pedal for a long time during driving. Otherwise, this will cause



REMINDER

- overheating, wear and waste of electric energy.
- Remember to carry the smart key when leaving the vehicle.
- Slow down when driving down steep slopes, and avoid braking too frequently to prevent disc overheating, which affects brake performance.
- Be careful when accelerating or braking on slippery roads. Quick acceleration or sudden braking will cause the vehicle to skid or deviate.
- Make sure no occupant sticks their head or hands outside the vehicle, specially when it comes to children.
- Large amounts of water entering the engine compartment can cause damage to the power system and electrical components.

Winter Driving Precautions

- Make sure the coolant is freeze-proof.
- Use coolant of the same type as the one used originally. Fill up coolant into the cooling system based on ambient temperature.
- Improper coolant damages the cooling system.
- Check batteries and cables conditions.
- The low-voltage battery's capacity is lower in cold weather, so they must be fully charged when winter comes.
- Avoid door frost.
- Spray some deicing agent or glycerin in the lock hole to prevent freezing.

- Use anti-freeze washer fluid.
 - These can be found in the BYD authorised dealer or service provider and the auto parts stores.
 - The water and anti-freeze ratio must conform to manufacturer instructions.



CAUTION

- Use special washer fluid to prevent paint damage.
- Prevent ice and snow from going under the fender.
 - Steering is difficult with ice or snow accumulating under the fenders. When driving in cold weather, stop from time to time and check for snow and ice under the fenders.
- Have emergency tools or items available as prevention for difficult road conditions.
 - It is advisable to have snow chains, window scraper, bags of sand and salt, flashing signal, a shovel and connecting cables in the vehicle.

Winter Tyres

- Winter tyres provide better traction on snowy roads. The special rubber mixture and tread pattern makes the tyres less affected by low temperatures and delivers excellent braking performance to improve driving safety.

Usage tips

- It is recommended to use winter tyres in snow or ice conditions or at temperatures below 45°F (7°C). When temperatures rise to above 45°F (7°C), install summer or all-season tyres instead for driving safety and better performance.

- Winter tyres used must be the same size, load index, and speed rating as those originally provided by BYD.
- Winter tyres must have adequate tread depth. Tyres with a tread depth less than 4 mm do not perform well in winter conditions.
- Winter or summer tyres are designed for specific acceleration conditions. Use them in the corresponding seasons to avoid poor traction or braking performance.
- Do not exceed the speed rating of winter tyres, which is relatively low.
- After installing winter tyres, inflate them to the design pressures.

Snow Chain Instructions

- Snow chains are only for emergencies or areas where they are permitted by laws.
- Snow chains should be installed on front wheels. Be careful when driving the vehicle installed with snow chains on snow-covered roads. Use thin snow chains. Some snow chains may damage tyres, wheels, and the vehicle body. The recommended snow chains are no larger than 6 mm in thickness or diameter, which provides enough space between tyres and other parts in the hubcap.
- Read the component assembly drawings and other instructions provided by the snow chain manufacturer carefully.
- Before purchasing and installing snow chains, consult a BYD authorised dealer or service provider where your vehicle was purchased.
- In order to minimise wear of tyres and snow chains, do not travel with snow chains on roads without snow.

REMINDER

- Driving speed must not exceed 18 mph (30 km/h) or the speed limit specified by the snow chain manufacturer.
- Drive carefully, paying attention to bumps, potholes, and sharp turns that can cause the vehicle to bounce.
- Install the chains symmetrically and remove them once you are on snowy or muddy roads.
- For vehicles with snow chains, avoid sharp turns or braking with locked wheels, and slow down the vehicle before entering a curve to avoid accidents due to loss of control.
- If an abnormal sound is heard from the snow chain, please stop the vehicle immediately to check whether the vehicle components such as suspension, body or brake lines are normal, and ensure that there is no contact between them and the snow chains.
- Do not install snow chains with low tyre pressure.

Saving Energy and Extending Vehicle Service Life

- Saving energy is simple and easy, and it helps prolong the vehicle's service life.
- Here are some tips for saving energy and repair cost:

Regenerative braking setting:

- The vehicle is equipped with a regenerative braking system which enables energy recovery. To set the braking intensity, go to the infotainment touchscreen → 

→ **Energy** → **Energy Manager** → **Regenerative Braking**. Selecting a higher level allows more energy to be recovered during braking and coasting. Adjust the setting according to your driving preferences.

Maintaining constant speed:

- Constant speeds save energy. Sudden acceleration, sharp turns and emergency braking increase consumption.
- Keep a constant speed according to traffic conditions. Additional energy is consumed each time the accelerator is pushed.
- Acceleration should be gradual. Avoid sudden startup, acceleration, or deceleration.
- Prevent emergency braking, and subsequent brake wear, by keeping an appropriate distance from vehicles ahead, and paying attention to traffic lights.
- Congested roads increase energy consumption.
- Keep moderate speeds in motorways. The higher the speed, the higher the consumption. Maintaining vehicle speed within the economical speed range can save power.

Reducing load:

- Consumption is higher when air conditioning is used. Turn off the A/C to reduce power consumption. When outside temperatures are moderate, use fresh air mode.
- Do not overload the vehicle unnecessarily. Excessive weights add the load of vehicle, increasing energy consumption.

Other tips:

- Make sure tyre pressure is correct. Low tyre pressure increases energy consumption and wear.
- Keep front wheels properly aligned, avoid driving into curbstones, and drive slowly in rough terrain. Misalignment of the front wheels not only increases tyre wear, but also increases load on the powertrain and power consumption.
- Keep the bottom of the vehicle clean and mud free. This reduces vehicle weight and prevents corrosion.



REMINDER

- Do not coast in Neutral gear.

Driver Assistance

Adaptive Cruise Control (ACC)

- The adaptive cruise control (ACC) system, an extension of the traditional cruise control, uses a radar and a multi-purpose camera to detect the relative distance and speed of the vehicle ahead, so as to control vehicle speed accordingly. The system switches between traditional cruise control and ACC depending on whether there is a vehicle ahead.
- Cruise speed and time interval from the vehicle ahead can be set by using the cruise buttons. You can set the cruise control speed within the 20-95 mph (30-150 km/h) range, or set a fixed distance from the vehicle ahead to cruise at speeds between 0 mph (0 km/h) and 95 mph (150 km/h).

Status Description

- ACC standby:

- Once enabled, the system is on standby by default and can be manually activated. If the vehicle does not meet activation conditions, it must be checked until such conditions are met. At this time,  (with a variable cruise speed value) is displayed on the instrument cluster.
- ACC activated:
 - The system is operational. It maintains the set speed or automatically adjusts the distance from the vehicle ahead. At this time,  (with a variable cruise speed value) is displayed on the instrument cluster.
- Over speed:
 - When you step the accelerator pedal while ACC is active, the vehicle responds to your acceleration action so that the ACC is temporarily deactivated until you release the pedal.
- ACC failure:
 - There has been a failure in the system. No operation can be performed, and the ACC failure indicator  lights up on the instrument cluster.

ACC Activation Conditions


- The EPB has been released.
- The vehicle is in Drive.
- The vehicle does not slide backwards.
- The boot, bonnet and all doors are closed.
- Driver seat belt is fastened.
- The ESC system is on, but not activated yet.
- Vehicle speed is equal to or less than 95 mph (150 km/h).

- Brake pedal is pressed at speed 0; or brake pedal is not pressed at speeds above 0.
- There is no vehicle network communication failure prompt on the instrument cluster.
- The AEB function is not activated.

How to Use

ACC on/off button

- Press button ② to activate or exit ACC. (The system is on standby when activation conditions are met.)
- By default, ACC activation by pressing button ② sets the current speed as the cruise speed. If the current speed is less than 18 mph (30 km/h), the cruise speed is set to 18 mph (30 km/h).

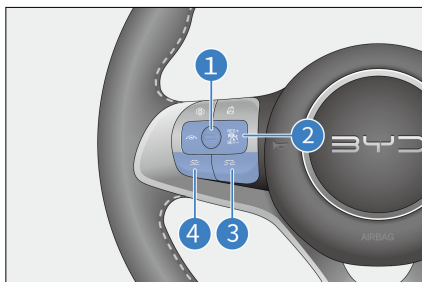

Resetting ACC

- When the ACC system is on standby within the same ignition cycle, the system memorises the last speed setting. Push up the switch ① to reset to the speed stored prior to exiting the cruise system.

Increasing/Decreasing the target speed

- When ACC is active, set to cruise between 19 mph (30 km/h) and 93 mph (150 km/h) by pushing the switch ①. Briefly push the switch ① up/down to increase/decrease the vehicle target speed by 5 mph (5 km/h). Press and hold the switch up/down to increase/

decrease the vehicle target speed by 1 mph (1 km/h).

WARNING

- Please strictly abide by the local speed limit regulations, drive safely, and do not speed.

Exiting ACC

- While ACC is active, pressing button ② for a second time or pressing the brake pedal makes the ACC system go on standby.

Setting vehicle distance

- You must select a safe vehicle distance.
- The system adjusts vehicle speed to keep a suitable distance from the vehicle ahead on the same lane. Pressing buttons ③ and ④ on the steering wheel adjusts vehicle distance to any of the four available levels. At each level, vehicle distance is in direct proportion to vehicle speed. The faster the speed, the longer the distance.

Increasing/Decreasing speed with ACC active

- When ACC is activated, you can accelerate by actively pressing the accelerator pedal; the assisted driving cannot brake while the accelerator pedal is pressed.
- When the target cruise speed is below 49 mph (80 km/h), pressing the accelerator pedal can increase the set speed.
- If the accelerator pedal is held until the real-time speed is greater than the target cruise speed but less than 49 mph (80 km/h), the real-time speed when the accelerator pedal is released is set as the target cruise speed.

- If the accelerator pedal is held until the real-time speed is greater than the target cruise speed and is no less than 50 mph (80 km/h), the target cruise speed is set to 50 mph (80 km/h) when the accelerator pedal is released.
- If the cruise speed is set to be no less than 50 mph (80 km/h), you can increase the real-time speed by depressing the accelerator pedal. The cruise speed remains unchanged when the pedal is released.
- If you press the accelerator pedal at the same time, you can accelerate up to 5 mph (5 km/h) with a short press of the button, and 1 mph (1 km/h) continuously with a long press of the button. ACC deactivates itself if the speed exceeds 84 mph (135 km/h) or acceleration lasts longer than five minutes.

Follow-to-stop/start

- Controlled by ACC, the vehicle can stop when the vehicle ahead stops in normal driving conditions and resume driving automatically following the vehicle ahead if the stop is less than 30 seconds.
- If the vehicle stops for a time period between 30 seconds and three minutes, press the accelerator pedal or push up switch ① to reactivate ACC.

System Limitations

- The front mmWave radars are installed in the front of the vehicle. Blockage of its detection area by contaminants can disturb the intended function. In particular, if the sensor is covered by snow completely, the ACC system exits and informs of this on the instrument cluster. System function will recover after blockage is removed and the vehicle is restarted or runs on normal roads for a while.
- Front mmWave radars may have a transient function failure from limited detection if the vehicle runs under special conditions, such as circular ramps or tunnels, for an extended period. The function can be recovered by restarting the vehicle or driving on normal roads for a while.
- Reaching or leaving a curve may delay or disturb target selection. In such cases, the ACC vehicle may not brake as expected or may brake late.
- On roads with sharp curves, such as winding roads, the vehicle ahead may be out of ACC sensor detection for several seconds due to sensor vision limitations, possibly causing the ACC vehicle to accelerate automatically.
- Traffic flow and weather conditions - such as rain and fog - must be heeded for setting vehicle distance on the ACC system. After the ACC system is properly set, the driver must be able to decelerate until the vehicle stops at any time.
- The ACC system may not be able to identify stationary or slow-moving objects, such as vehicles, the end of traffic, toll booths, bicycles, motorcycles or pedestrians. This means a risk of collision and requires the driver to beware of the surroundings.
- The ACC system cannot identify pedestrians or oncoming vehicles.
- The ACC system can only achieve limited braking instead of emergency braking.
- Metal objects, such as rail or metal plates used in road construction, may interfere with front mmWave radars, making it malfunction.
- Performance of front mmWave radar sensors may be affected by vibration or collision. In this case, it is

recommended to contact a BYD authorised dealer or service provider.

Precautions

- ACC is a comfort system rather than a safety system, obstacle detector or collision warning system. The driver must keep control of vehicle at all times and be fully responsible for the vehicle.
- ACC assists instead of replacing the role of the driver. The driver is responsible for abiding by traffic rules and keeping vehicle control.
- For safety reasons, ACC cannot be activated with ESC disabled.
- The ACC is suitable for motorways and roads in good conditions, rather than complex urban or meandering roads.
- It is the driver's responsibility to keep distance from the vehicle ahead. The ACC system's vehicle distance meets the minimum distance required in driving environments in the country.
- Vehicle control is transferred to the driver if the accelerator or brake pedal is pressed with ACC active. As a result, the ACC system cannot keep a safe distance from the vehicle ahead.
- ACC may have no or slow responses to a vehicle ahead that brakes or stops suddenly, resulting in a risk of late braking. In such cases, there will be no take-over request.
- In some cases, such as when the vehicle ahead is going too slow, when lane change is too fast, or when the safe distance from the vehicle ahead is too short, there is no adequate time for the system to decrease the relative speed, so response has to come from the driver. The system cannot give audible or visual warnings in every case.
- If ACC is activated with the vehicle stationary, the system identifies any stationary obstacle ahead and keeps the vehicle still to ensure a safe startup and prevent collision. However, this function cannot identify all the obstacles, so the driver must be alert to the front obstacles or other traffic participants.
- A short distance from an adjacent lane (or a vehicle on an adjacent lane that is too close to the ACC vehicle's lane) may trigger ACC to brake.
- Vehicles coming into the ACC vehicle's lane and within the detection range of its front mmWave radars are identified as target vehicles and prompt a response accordingly, which may lead to hard or late braking.
- Detection may be affected or delayed in some environments. If the radar cross section of the target (a bicycle, motorcycles, four-wheeler, or pedestrian, for example) is too small, the system may not be able to establish its distance, resulting in either late or no response to those vehicles. In such cases, vehicle speed must be controlled by the driver. In addition, detection may also be affected or delayed by noise or electromagnetic interference.
- ACC cannot target vehicles with too small contact ratio, so the driver must keep control of the vehicle.
- When the vehicle stops as it follows a vehicle ahead, in rare cases, the system does not recognise the end of the vehicle ahead but the lower end of the target (for example, the rear axle of a truck with a high chassis or a vehicle bumper). In such cases, the system cannot ensure proper stop distance, so the driver must stay alert and be ready to brake.

- Modifying the vehicle structure, such as lowering the chassis or changing the front license mounting plate, may affect the ACC system.
- Do not use the ACC system when visibility is poor, or when driving on slopes, winding roads, or wet roads (covered in ice/snow or flooded).
- ACC cannot be activated if special driving modes* such as tow/snow/mud/sand/terrain are enabled.
- Make sure to go to a BYD authorised dealer or service provider for professional calibration and checking of front mmWave radars or the multi-purpose camera in any of the following situations:
 - The front mmWave radar, front bumper, or front windscreen has been removed.
 - Wheel alignment has been carried out.
 - The vehicle has experienced a collision.
 - ACC system performance has degraded or the instrument cluster has prompted an system error.

WARNING

- ACC serves as a driver assistance function only, so the driver is fully responsible for driving safety.
- Influence of weather, road conditions, and other factors may cause ACC to fail.
- Use ACC based on your needs, traffic, and road conditions.

Intelligent Cruise Control (ICC)

- Integrating ACC and lane centring control, intelligent cruise control (ICC) helps control the vehicle both longitudinally and laterally at speeds below 80 mph (130 km/h), enhancing driving safety and comfort.
- When the feature is active, always hold the steering wheel and take control of the vehicle whenever necessary.
- Longitudinal assistance, driven by the ACC system, keeps the vehicle at a fixed speed or a fixed distance from the road user ahead.

Status Description

- ICC standby:
 - The ICC system is on standby by default and can be manually activated. If the vehicle does not meet activation conditions, the vehicle must be checked until such conditions are met. At this time,  is displayed on the instrument cluster.
- ICC activated:
 - The ICC system is operational. It maintains the set speed or automatically adjusts the distance from the vehicle ahead. At this time,  is displayed on the instrument cluster.
- ICC failure:
 - There has been a failure in the system. No operation can be performed, and the ICC fault indicator  lights up on the instrument cluster.

ICC Activation Conditions

- EPB has been released.
- The vehicle is in Drive.
- The vehicle does not slide backwards.
- The boot, bonnet, and all doors are closed.
- The driver seat belt is fastened.
- The ESC system is on, but not activated yet.
- Vehicle speed is not greater than 80 mph (130 km/h).
- Brake pedal is pressed at speed 0; or brake pedal is not pressed at speeds above 0.
- There is no vehicle network communication failure prompt on the instrument cluster.
- The AEB function is not activated.
- Two-way lane lines are clear and the vehicle is at the centre of the lane.

How to Use

- Press the  button on the steering wheel to activate or deactivate ICC.
 - At the time of ICC activation, the current speed is set as the cruise speed if it is 18 mph (30 km/h) or above. If not, the cruise speed is set to 18 mph (30 km/h).
 - For how to set the cruise speed and vehicle distance, see ACC descriptions (in the previous chapter).
- Alternatively, you can go to  → **ADAS → Driving Assist → Intelligent Cruise Control**. (If already toggled on on the infotainment touchscreen, ICC can be deactivated only when the vehicle is in Park.) When the vehicle is

just started up, ICC status before the last power-off is maintained.

Precautions

- ICC integrates ACC and lane centring control. Therefore, ACC precautions apply (see the previous chapters for details).
- At vehicle speeds between 0 mph (0 km/h) and 80 mph (130 km/h) when ICC is active:
 - If there are no lane lines ahead, transverse ICC control is suppressed and only ACC works. In that case, ICC working status indicator turns grey on the instrument cluster.
 - If lane lines ahead are clear and recognisable, transverse ICC control is activated automatically. In that case, ICC working status indicator shows activated status on the instrument cluster.
- ICC serves as a driver assistance system rather than an autonomous driving system. Always maintain control of the vehicle. The system does not allow hands-off driving for longer time periods and will deactivate itself if this is detected.
- The ICC system can be affected by weather conditions, lighting and clarity of lane lines. Performance degrades significantly in situations such as backlighting, sunset, snow covered roads, and severely damaged roads.
- Do not use ICC on winding roads with sharp turns, icy and slippery bends, or under weather conditions, such as dense fog, heavy rain and heavy snow, liable to hinder the sensing operation of front mmWave radars or the multi-purpose camera.
- Situations where ICC cannot be used include:

- The sensor is blocked.
- The vehicle is running under severe weather conditions.
- Active safety function has been triggered.
- Vehicle speed exceeds the specified range.
- ICC cannot be activated if special driving modes* such as tow/snow/mud/sand/terrain are enabled.



WARNING

- ICC serves as a driver assistance function only, so the driver must be fully responsible for driving safety.
- Influence of weather, road conditions, and other factors may cause ICC to fail.
- Use ICC based on your needs, traffic, and road conditions.

Forward Collision Warning (FCW) & Automatic Emergency Braking (AEB)

Forward collision warning (FCW) and automatic emergency braking (AEB) detect vehicles and pedestrians ahead by using radars and the multi-purpose camera. When detecting a risk of collision, the system alerts audibly and visually and improves the potential braking pressure for better response timing. If detecting increased risk of collision, the system automatically applies braking pressure to assist in collision avoidance or impact reduction.

How to Use

- Enable or disable FCW and AEB in  → **ADAS** → **Safety Assist** → **Collision avoidance assist**.
- FCW gives alarms in forms of audio, messages, and intermittent braking.
- When FCW is activated,  or  flashes, depending on the level of emergency, and a prompt message is displayed on the instrument cluster.
- When AEB is triggered,  lights up together with a prompt message on the instrument cluster.
- In the event of malfunction,  is displayed.
- If you disable AEB manually by pressing buttons,  is displayed.

FCW Activation Conditions

- This function has been turned on in **Vehicle Settings**.
- Vehicle speed is between 5 mph (8 km/h) and 93 mph (150 km/h).
- The vehicle is in Drive.
- The vehicle does not slide backwards.

AEB Activation Conditions

- This function has been turned on in **Vehicle Settings**.
- Vehicle speed is between 3 mph (4 km/h) to 93 mph (150 km/h).
- EPB has been released.
- The vehicle is in Drive.
- The vehicle does not slide backwards.
- The boot, bonnet, and all doors are closed.
- The driver seat belt is fastened.

- The ESC system is on, but not activated yet.

System Limitations

- Detection may be affected or delayed in some environments. If the radar cross section of the target (a bicycle, three-wheelers, four-wheeler, or motorised bicycle, or motorcycle, for example) is too small, the system may not be able to establish its distance, resulting in either late or no response to those vehicles.
- The system may be affected or give no response in the following cases:
 - On rainy, snowy or foggy days, large water splashes, or exposure to direct sunlight or glaring lights, or significantly varying lighting conditions.
 - Dirty, hazy, damaged or blocked sensor.
 - Radar failure due to interference from other radar sources, such as strong radar reflection in multi-storey car park.
- In complex traffic, the system may be unable to properly respond to the following circumstances:
 - Pedestrians or vehicles move too quickly into the sensor's detection range.
 - Pedestrians are obscured by other objects.
 - Pedestrian outlines are indistinguishable from the surroundings.
 - Pedestrians are not detected, due to, for example, coverage by special clothing or other materials.
 - The vehicle is on a sharp curve.
- Oncoming traffic scenario:

- When detecting a possible risk of collision with oncoming traffic, the system applies emergent braking automatically. If an accident is unavoidable, the system helps reduce the collision speed.

Precautions

- The AEB system cannot ensure zero collision. In complex traffic, the system cannot always clearly identify all the vehicles or pedestrians. It may trigger unnecessary warning or braking action for well covers, iron plates or road signs.
- Make sure to drive safely and observe surrounding traffic conditions. The AEB is not a substitute for normal braking operation in any event.
- Do not overly rely on the AEB system as this may result in severe injuries or deaths. The system is just an assistance tool. You are fully responsible for driving safety. Therefore, always maintain a safe distance from vehicles ahead, control the speed, be ready to brake or steer away when necessary, and keep control of the vehicle at all times.
- The AEB system is activated only when it exceeds certain speeds. Careful driving is always required, because the system may not be triggered correctly.
- The AEB system cannot work normally when the ESC function is disabled or the fault light is on.
- If FCW gives an alarm, brake based on traffic conditions to slow down or steer away from obstacles.
- If the vehicle travels too close to the vehicle ahead for too long, a safety distance warning will be given. If the vehicle ahead brakes suddenly, collision may be unavoidable.

- The system will not trigger AEB when you are aware of an emergency warning but turn the steering wheel, accelerate, or brake.
- Front mmWave radar sensors may have a transient function failure from limited detection if the vehicle runs under special conditions, such as circular ramps or tunnels, for an extended period. The function can be recovered by restarting the vehicle or driving on normal roads for a while.
- Sometimes the surfaces of front mmWave radars or the multi-purpose camera are dirty or obscured by foreign objects. In that case, a message is displayed on the instrument cluster and both FCW and AEB are disabled. The functions will return normal after the sensor is cleaned.
- As the pedestrian protection function is limited by certain physical conditions, you must take timely and effective control of the vehicle under dangerous conditions.
- The system cannot completely protect pedestrians or avoid accidents and severe injuries on its own.
- Under certain complex conditions, such as on winding roads, the pedestrian protection function may trigger unnecessary warning or braking.
- System failure may trigger wrong warnings or braking. This may be caused, for example, by the misalignment of the front mmWave radar or multi-purpose camera.
- If AEB is triggered, a large amount of hydraulic pressure will be required to push the caliper in a short time and there will be a sizzling noise.
- The AEB system activates only after all doors are closed and all occupants are buckled up. The AEB system will fail to work if:
 - Any door is not closed or it is opened when the vehicle is moving.
 - The seat belt is not fastened or it is unfastened when the vehicle is moving.
 - The vehicle accelerate or decelerate rapidly or the steering wheel is turned quickly.
 - The vehicle is on a sharp curve.
- System performance may be reduced in the following cases:
 - Strong front bumper impact from accidents or other causes.
 - Improperly inflated or worn out tyres.
 - Unqualified tyres installed.
 - Snow chains installed.
 - Use of a small spare tyre or tyre repair kit.
- Make sure to go to a BYD authorised dealer or service provider for professional calibration of the front mmWave radar or multi-purpose camera in any of the following situations:
 - The front mmWave radar or multi-purpose camera has been removed.
 - Toe-in or rear camber has been adjusted during wheel alignment.
 - The position of front mmWave radars or the multi-purpose camera has changed after a collision.
- Do not attempt to test the AEB system on your own using objects such as carton, iron plate, dummy, etc. The system may not work properly and thus result in accidents.

WARNING

- FCW and AEB serve as driver assistance functions only, so the driver is fully responsible for driving safety.
- Influence of weather, road conditions, and other factors may cause FCW and AEB to fail.
- Use FCW and AEB based on your needs, traffic, and road conditions.

Front Cross Traffic Alert (FCTA) and Front Cross Traffic Brake (FCTB)

Front cross traffic alert (FCTA) and front cross traffic braking (FCTB) detects vehicles crossing the driveway at the front through mmWave radars on both sides of the front bumper to alert the driver and engage the brake if necessary. At low vehicle speeds, when the system detects a risk of collision with a vehicle crossing the driveway at the front, it provides the driver with visual and audible alerts; in the event of an impending collision, the vehicle brakes automatically.

How to Use

- Enable or disable the FCTA and FCTB on the infotainment touchscreen →  → **ADAS** → **Safety Assist** → **Cross Traffic Collision Avoidance Assist**.
- When FCTA is activated, side mirror warning indicators flash and an audible alarm sounds.
- When FCTB is activated,  is displayed on the instrument cluster and an audible alarm sounds, with AEB automatically braking the vehicle.

- In the event of FCTA/FCTB malfunction,  is displayed.

Precautions

- While the system provides assistance in monitoring front left and right sides, it cannot replace the driver's observation and judgement. You must keep control of vehicle at all times and drive responsibly.
- When a target vehicle is approaching from the side at a high speed, the FCTA/FCTB system may not be able to provide adequate warning.
- The driver must ensure the normal operation of the system, keeping mmWave radars on both side of the bumper in good condition. For example, dirt, snow, or other obstructions need to be cleared right away.
- In addition, detection may also be affected or delayed by noise or electromagnetic interference.
- Under some circumstances, it is difficult for the system to assist the driver, and detection may be affected or delayed. Possible circumstances include, but are not limited to:
 - The vehicle coming from the side suddenly changes the lane.
 - The target vehicle is obscured.
 - The radar cross section of the target (for example, a bicycle or electric moped) is too small.
 - The vehicle is running under severe weather, such as rain or snow.
 - MmWave radar(s) come off, are loosely installed, or are blocked.
 - The vehicle encounters complex metal guardrails or similar road conditions.

- The system does not work when:
 - Targets are outside the mmWave radar's detection range.
 - FCTA or FCTB is switched off.
 - The vehicle is not in Drive.
 - Four doors are open.
 - System initialisation has not been complete yet.
 - MmWave radar(s) fail.
 - Vehicles coming from the front left or right side are detected too late at sharp turns, slopes, or other settings.
- Influence of vibration or collision on mmWave radar sensor calibration can degrade system performance. If this is detected, contact a BYD authorised dealer or service provider.



WARNING

- FCTA/FCTB serves as a driver assistance function only, so the driver must be fully responsible for driving safety.
- Influence of weather, road conditions, and other factors may cause FCTA/FCTB to fail or lead to late braking.
- Use FCTA/FCTB based on your needs, traffic, and road conditions.

Traffic Sign Recognition (TSR)

The traffic sign recognition (TSR) system identifies speed limit signs through the multi-purpose camera and map*, displays such signs on the current road on the instrument cluster, and triggers an alert when vehicle speed exceeds the detected limit.

How to Use

- Enable or disable TSR in  → **ADAS → Safety Assist → Traffic Sign Recognition.**
- When the TSR system identifies the current traffic sign,  is displayed on the instrument cluster.
- When TSR cannot identify whether the recognised speed limit value applies to the lane,  is displayed.
- When TSR system performance reduces,  is displayed.
- When the TSR system experiences reduced performance and cannot identify whether the recognised speed limit value applies to the lane,  is displayed.
- In the event of TSR malfunction,  is displayed.
- If you disable TSR manually,  is displayed.
- The specific numbers displayed in the indicators depend on the actual traffic signs.

Precautions

- The TSR system can only identify speed limit signs. The control over the vehicle always vests you. Please drive responsibly.
- Weight limit signs not in standard size as per national regulations may mistakenly be identified as speed limit signs.
- If a speed limit sign is unclear, distorted, inclined, reflective, or partly blocked or overlaid, the multi-purpose camera may fail to or incorrectly identify the sign.

- TSR performance depends on weather conditions, lighting, and sign visibility. The system may fail to or incorrectly identify the sign at night or sunset, in rainy, foggy, hazy, snowy or dusty environment, when light is coming from the back of the vehicle, or when there is a sudden change in lighting.
- In case the vehicle has been involved in a collision or the multi-purpose camera's sensor has been reassembled, go to a BYD authorised dealer or service provider for sensor calibration so as to avoid affecting system performance.
- If the model is available on the European market, recognition of traffic jams, construction zones, and accidents ahead must rely on Internet connection and is on the premise that recognition of these signs are supported.

WARNING

- TSR serves as a driver assistance function only, so the driver must be fully responsible for driving safety.
- Influence of weather, road conditions, and other factors may cause TSR to fail or lead to late alarms.
- Use TSR based on your needs, traffic, and road conditions.

Intelligent Speed Limit Control (ISLC)

- The intelligent speed limit control (ISLC) integrates ACC and TSR. With ISLC enabled, if the current ACC speed is inconsistent with the value on the recognised speed limit sign, the system prompts whether to adjust it to that limit value. The setting will

be performed after it is confirmed (by pushing down the ACC speed rocker switch on the steering wheel).

- This feature is accessible between 20 mph (30 km/h) and 95 mph (150 km/h).

How to Use

- Enable or disable ISLC in infotainment touchscreen →  → **ADAS** → **Safety Assist** → **Traffic Sign Recognition**.
- When the TSR system is disabled, the ISLC switch is greyed out and unusable. ISLC is turned off at this time. The ISLC switch will be usable after the TSR system is enabled again.
- ISLC can be activated provided that ACC is active.

Precautions

- ISLC integrates ACC and TSR. Therefore, ACC and TSR precautions apply (see previous chapters for details).
- ISLC is a driving assistance system, so be sure to keep control of vehicle at all times.
- ISLC performance depends on weather conditions, lighting, and traffic sign visibility. The system may fail to or incorrectly identify the sign at night or sunset, in rainy, foggy, hazy, snowy or dusty environment, when light is coming from the back of the vehicle, or when there is a sudden change in lighting.
- ISLC integrates ACC and TSR. Therefore, ACC and TSR precautions apply (see previous chapters for details).

WARNING

- ISLC only serves as a driver assistance function, so the driver must be fully responsible for driving safety.
- Influence of weather, road conditions, and other factors may cause ISLC to fail or lead to late alarms.
- Use ISLC based on your needs, traffic, and road conditions.

Intelligent High Beam Control (IHBC)

Intelligent high beam control (IHBC) assesses current driving conditions by using multi-purpose camera sensors and automatically activates or deactivates the high beam accordingly, when vehicle speed exceeds 22 mph (35 km/h).

Status Description

- IHBC on standby:
 - When the function is enabled but not activated yet,  is displayed on the instrument cluster.
- IHBC activated:
 - With the function enabled, when you set the light switch to the auto lights position, the light meets conditions, and vehicle speed exceeds 22 mph (35 km/h),  is displayed.
- IHBC failure:
 - When the feature fails,  is displayed.

How to Use

- Enable or disable IHBC in  → **Light** → **Exterior Light** → **Intelligent High**

Beam Control (IHBC). The system defaults to previous settings when the vehicle is just started.

- When you set the light switch to the auto lights position, the light meets conditions and vehicle speed exceeds 22 mph (35 km/h), IHBC, if enabled, automatically switches between low and high beams based on the current driving environment.

Precautions

- While IHBC serves as a recommended light control complement at high vehicle speeds, it does not replace the driver entirely. You are supposed to observe road regulations and use high and low beams safely on the road.
- Beam switching is suppressed if the vehicle is in a high dynamic state, for example when ABS or ESC is activated.
- IHBC deactivates itself when you are using fog lights or turn signals, set wipers to fast mode, are backing up, or set the light switch to a position other than auto lights, or when the environment has too much lighting.
- Even when IHBC is working, you must respond to possible situations where the IHBC is triggered in error or fails to work due to unavoidable environmental factors and conditions. Typical situations are:
 - The driver's operation to switch to the high beam is prioritised.
 - The weather, such as fog, rain or snow, is extremely terrible for driving.
 - There are traffic participants with poor lighting (such as pedestrians and bicycles), railways or waterways nearby, or wild animals on the roads.
 - There are strongly reflective objects around, such as traffic signs on

highways and water reflection on the road surface.

- The front windscreen is dirty, covered in mist, or blocked by stickers or decorations.
- In case the vehicle has been involved in a collision or the sensor has been reassembled, go to a BYD authorised dealer or service provider for sensor calibration so as to avoid affecting system performance.

WARNING

- IHBC serves as a driver assistance function only, so the driver must be fully responsible for driving safety.
- Influence of weather, road conditions, and other factors may cause IHBC to fail.
- Use IHBC based on your needs, traffic, and road conditions.

Lane Departure Assist (LDA)

Lane departure assist (LDA) includes lane departure warning (LDW) and lane departure prevention (LDP).

Lane Departure Warning (LDW)

Lane departure warning (LDW) detects the lane lines ahead through the multi-purpose camera. When the vehicle is unintentionally drifting out of the lane at a speed between 38 mph (60 km/h) and 93 mph (150 km/h), the system warns you by steering wheel vibration, a sound, and an instrument cluster prompt.

Lane Departure Prevention (LDP)

- The lane departure prevention (LDP) system identifies lane lines ahead

through a multi-purpose camera. If the vehicle is unintentionally drifting onto the lane line between 38 mph (60 km/h) and 93 mph (150 km/h), the system, when active, provides corrective steering inputs through the electronic power steering (EPS) system to prevent lane departure.

- If LDP is activated for over five seconds, it gives visual and audible alarms at the fifth second and continues until this activation ends. If the system is activated twice or more within a continued 180-second cycle, the system alarms immediately. For the third activation (and any further ones), alarms are extended by at least 12 seconds.

How to Use

- Enable or disable this feature in the infotainment touchscreen →  → **ADAS → Safety Assist → Lane Departure Assist → Alert Mode.**
- There are three LDW modes: audible alarm only, steering wheel vibration only, and combination.
- When LDW or LDP is enabled,  is displayed on the instrument cluster.
- When activated, LDW gives alarms (in the form of audible alarm, visual alarm, and steering wheel vibration). On the instrument cluster, the virtual lane line on the side where the vehicle drift toward turn red.
- When activated, LDP gives audible and visual alarms. On the instrument cluster,  flashes twice, and the virtual lane line on the side where the vehicle drift toward turn green.
- In the event of malfunctions,  is displayed.

System Limitations

- In a complex road traffic environment, the LDA system may detect the lane line incorrectly or fail to detect the lane line. In the following cases, the system may not work or its performance may be significantly degraded:
 - Poor visibility on snowy, rainy, or foggy days
 - Dirty or fogged front windscreen, or blocked multi-purpose camera
 - Glaring from direct sunlight, reflection in puddles, or oncoming vehicles
 - Sudden changes in light, such as when the vehicle is entering or exiting a tunnel
 - Lane lines obscured by tree shadows on roads in direct sunlight on sunny days
 - Unidentifiable road boundary with grass, soil, or kerb
 - The function may be suppressed in narrow lanes to prevent the interference of its frequent activation.
- LDW may be suppressed on slopes or winding roads when the vehicle travels too close to the vehicle ahead or when the vehicle ahead obscures lane lines.
- LDW may be suppressed when the vehicle jolts, accelerates or decelerates too quickly, or takes a sharp turn.
- The system operation may be affected if the windscreen within the visual field of the multi-purpose camera is cracked, if the front windscreen glass is dyed or coated in a manner that is not compliant with standards, if any reflective object is placed on the dashboard, or if any other object interferes with camera sight.
- For safety reasons, do not test LDW function on your own. The function will be interrupted if the multi-purpose camera is blocked by any object or exposed to strong lights. The function recovers once conditions return to normal. If it does not, it is recommended to contact a BYD authorised dealer or service provider.
- Disabling LDW is recommended under any of the following circumstances:
 - Driving in a sporty style
 - Severe weather conditions
 - On uneven roads
- Situations where lane lines may not be identified include, but are not limited to:
 - Unclear lane lines
 - Incomplete lane lines
- Situations that may cause recognition difficulty or late function activation of the multi-purpose camera include, but are not limited to:
 - The multi-purpose camera comes off, is loosely installed, or is blocked.

Precautions

- LDW is suppressed if a turn signal is used and the vehicle changes lane as indicated by the turn signal.
- LDW may be suppressed if the vehicle travels over lane lines, or lane lines are unclear, too thin, worn, blurred or covered by dirt/snow.
- LDW may be suppressed if the lane is too wide or too narrow, the number of lanes increases or decreases, lane markings change suddenly (for example, on a ramp or exit), or in situations of complex line arrangements.

- The vehicle is running under extreme weather, such as rain, snow, or smog.
- The multi-purpose camera is partially or completely blocked.

WARNING

- LDA serves as a driver assistance function only, so the driver must be fully responsible for driving safety.
- Influence of weather, road conditions, and other factors may cause LDA to fail.
- Use LDA based on your needs, traffic, and road conditions.

Emergency Lane Keeping Assist (ELKA)

The emergency lane keeping assist (ELKA) system recognises lane lines ahead through a multi-purpose camera and identifies adjacent rear vehicles through rear corner mmWave radars. Between 32 mph (50 km/h) and 93 mph (150 km/h) when the vehicle drifts onto the solid lane line, is crossing the road edge, or risks colliding with oncoming vehicles or adjacent vehicles passing it, the system activates EPS to provide reverse torque, keeping the vehicle in the current lane.

How to Use

- Enable or disable ELKA in  → **ADAS** → **Safety Assist** → **Emergency Lane Keeping Assist**.
- When ELKA is active,   flashes on the instrument cluster.
- In the event of ELKA malfunction,   is displayed.
- If you disable ELKA manually by pressing buttons,   is displayed.

System Limitations

- ELKA may detect incorrect or no lane lines in complex traffic. The following situations may lead to failure or performance degradation of the system:
 - Poor visibility on snowy, rainy, or foggy days
 - Dirty or fogged front windscreen, or blocked multi-purpose camera
 - Glaring from direct sunlight, reflection in puddles, or oncoming vehicles
 - Sudden changes in light, such as when the vehicle is entering or exiting a tunnel
 - Lane lines obscured by tree shadows on roads in direct sunlight on sunny days
 - Unidentifiable road boundary with grass, soil, or kerb
 - The function may be suppressed in narrow lanes to prevent the interference of its frequent activation.

Precautions

- Situations where lane lines may not be identified include, but are not limited to:
 - Pedestrians, animals, and specialty or specially-shaped vehicles
 - Unclear or incomplete lane lines
- Situations that may result in detection failure of the multi-purpose camera or late alarms include, but are not limited to:
 - The multi-purpose camera comes off, is loosely installed, or is blocked.
 - The vehicle is running under extreme weather, such as rain, snow, or smog.

- The multi-purpose camera is partially or completely blocked.
- Situations that may result in detection failure of mmWave radars or late alarms include, but are not limited to:
 - MmWave radar(s) come off, are loosely installed, or are blocked.
 - The vehicle is running under extreme weather, such as rain, snow, or smog.
 - The vehicle encounters certain metal guardrails or similar road conditions.

WARNING

- ELKA serves as driver assistance only, so the driver must be fully responsible for driving safety.
- Influence of weather, road conditions, and other factors may cause ELKA to fail.
- Use ELKA based on your needs, traffic, and road conditions.


Blind Spot Assist (BSA)

- Blind spot assist (BSA) includes blind spot detection (BSD)*, rear cross traffic alert (RCTA)*, rear cross traffic braking (RCTB), rear collision warning (RCW)*, and door open warning (DOW)*. It detects the environment behind the vehicle through corner mmWave radars installed on both sides of the rear bumper so as to remind the driver of safe driving.

Blind Spot Detection (BSD)*

At vehicle speeds between 10 mph (15 km/h) and 93 mph (150 km/h), if a rear corner mmWave radar detects a vehicle in blind spots on an adjacent lane or a vehicle approaching quickly on the adjacent lane, the indicator on the corresponding side mirror lights up. If the turn signal for the same side is turned on

at this moment, the alarm indicator on the side mirror flashes to alert the driver of a risky lane change.

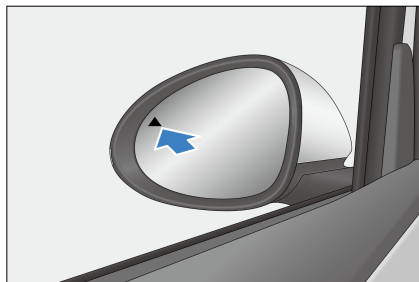

Rear Collision Traffic Alert (RCTA)*

When the vehicle is reversing at a speed no more than 9 mph (15 km/h), RCTA detects the vehicles travelling in the blind spot at the back through rear corner mmWave radars. If the system determines that a vehicle approaching from behind poses a risk of collision, the side mirror warning indicators flash and an audible alarm is given to alert the driver, reducing the possibility of collision.

Rear Cross Traffic Braking (RCTB)*

When the vehicle is reversing at a speed no more than 5 mph (9 km/h), RCTB detects the vehicles travelling in the blind spot at the back through rear corner mmWave radars. If the system determines that a vehicle approaching from behind poses a risk of collision, it performs emergency braking automatically.

Rear Collision Warning (RCW)*

At vehicle speeds between 4 mph (5 km/h) and 90 mph (146 km/h), if the rear corner mmWave radar detects a risk of collision with a vehicle approaching quickly from behind on the current lane, the hazard warning light turns on to warn the driver in that vehicle against a possible collision.

Door Open Warning (DOW)*

DOW is realised with corner mmWave radars installed on both sides of the rear bumper. When the vehicle is stationary with doors unlocked, the system keeps indicators on side mirrors solid on to warn the driver if moving objects, such as bicycles or automobiles, on an adjacent lane are approaching from behind. At the same time, an icon is displayed on the instrument cluster. If you attempt to open the door now, indicators on side mirrors begin to flash and a chime sounds.

How to Use

- Enable or disable BSD, RCTA, RCTB, RCW, or DOW in  → **ADAS** → **Safety Assist**.
- When the blind spot assist system is disabled, no relevant indicators are displayed on the instrument cluster.
- When the blind spot assist system is standing by, if vehicle conditions, such as speed or gear status, do not meet the requirements of any function,  is displayed on the instrument cluster and blind spot assist will not be activated.
- If the blind spot assist system malfunctions,  is displayed on the instrument cluster.
- When the blind spot assist system is active,  is displayed, meaning that the feature has been activated and can trigger alarms at any time.

Precautions

- While the BSD system provides assistance in monitoring blind spots of rearview mirrors, it cannot replace your observation and judgement. You must keep control of vehicle at all times and drive responsibly.
- The BSD system may be unable to provide adequate warning on target

vehicles approaching from behind at a high speed.

- Ensure the normal operation of the BSD system, keeping its rear corner mmWave radars in good condition. For example, dirt, snow, or other obstructions need to be cleared right away.
- The BSD system gives a warning if unrelated targets at the rear side or in the rear (such as work zone barriers, large roadside billboards, reflectors in tunnels, or other objects with a large radar cross section) are mistakenly selected as target vehicles.
- Detection may be affected or delayed in some environments. If the radar cross section of the target vehicle is too small (a bicycle, electric moped or pedestrian, for example), the system may fail to identify targets, leading to false alarms. In addition, detection may also be affected or delayed by noise or electromagnetic interference.

System Limitations

- Under some circumstances, it is difficult for the system to assist the driver, and detection may be affected or delayed. Possible circumstances include, but are not limited to:
 - The vehicle coming from behind changes the lane suddenly.
 - Vehicles coming from behind are detected too late at sharp turns, slopes, or other settings.
 - The target vehicle is obscured.
 - Vehicles come from behind at a relative speed above 50 mph (80 km/h).
 - The vehicle is on a curve which is too sharp, or is entering or exiting a curve.

- The vehicle is running under severe weather, such as rain or snow.
- Rear corner mmWave radar(s) come off, are loosely installed, or are blocked.
- The vehicle encounters certain metal guardrails or similar road conditions.
- Targets that may not be responded include, but are not limited to, pedestrians and animals.
- The environment contains electromagnetic interference or other influences.
- Vibration or collision influence on sensor calibration of BSD's rear corner mmWave radars can degrade system performance. If this is detected, contact a BYD authorised dealer or service provider.

WARNING

- Blind spot assist serves as a driver assistance function only, so the driver must be fully responsible for driving safety.
- Influence of weather, road conditions, and other factors may cause blind spot assist to fail.
- Use blind spot assist based on your needs, traffic, and road conditions.


Driver Monitoring System (DMS)*

Driver monitoring system (DMS), including fatigue and distraction monitoring, is designed to monitor driver status with a camera and alert in a timely manner based on camera data assessment. The camera data will not be saved or uploaded to the server but

instead will be deleted immediately after the assessment is complete.

How to Use

- The camera for DMS is mounted on the A-pillar of the driver side. Make sure it is unobstructed before use, or DMS may not function normally.

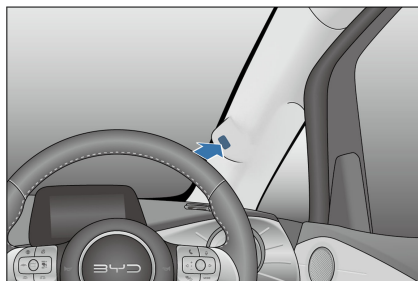

- To enable or disable driver fatigue or distraction warning (both enabled by factory default), go to infotainment touchscreen →  → **Vehicle** → **Cabin Perception**.
- When the system sounds a fatigue or distraction warning, pressing the scroll button on the steering wheel pauses the warning for 15 minutes, during which no warnings will be given.

Driver fatigue warning

- With the vehicle speed meeting the system activation condition and driver fatigue warning enabled, when the system detects signs of fatigue, such as closing eyes, blinking, and yawning, it alerts by means of instrument cluster prompts, voice assistant, or chimes.

Driver distraction warning

- With the vehicle speed meeting the system activation condition and driver distraction warning enabled, when the system detects signs of distraction, such as looking at side mirrors, it

alerts by means of instrument cluster prompts, voice assistant, or chimes.

REMINDER

- Clean the DMS camera lens with a clean and soft cloth and exercise caution to prevent any damage to the surface.

Precautions

- As an assistance system, DMS is not capable of effective recognition and alarm-raising in all situations and cannot entirely replace your observation and judgement. You are responsible for maintaining control of the vehicle at all times, complying with all road laws and regulations.
- The proper functioning and accuracy of DMS can be affected by a number of situations, including but not limited to:
 - Driver monitoring assistance is disabled.
 - The camera is directly exposed to strong light.
 - Part of the driver's face is exposed to light or the complete facial features are hard to recognise.
 - The driver wears infrared-blocking glasses or glasses with thick lenses.
 - The driver wears a mask or something that covers the face.
 - The driver is not properly seated or the driver's face is in the blind spot of the camera.

WARNING

- Pull over as soon as possible when you feel tired.

Driver Attention Warning*

- The driver attention warning system evaluates the driver's degree of fatigue based on the vehicle operations or status, such as steering wheel angle, breaking, gear, and lane changes, and alerts with popup windows or voice prompt accordingly to improve driving safety.
- It is enabled by default when the vehicle is just powered on.

How to Use

With the vehicle powered on, set the warning in infotainment touchscreen →



→ **Vehicle** → **Cabin Perception** →

Driver Attention Warning. For safety considerations, the setting is valid on the current trip only and will revert to the default mode on the next trip.



WARNING

- Pull over as soon as possible when you feel tired.



CAUTION

- As an assistance system, driver attention warning is not capable of effective recognition and alarm-raising in all situations and cannot entirely replace your observation and judgement. You are responsible for maintaining control of the vehicle at all times, complying with all road laws and regulations.

Child Presence Detection (CPD)

After the vehicle is powered off, child presence detection is performed if any

door is opened and then all doors are closed or locked. If child presence is detected, an alarm is given in the form of light flashing and honking. The A/C will be switched on soon after. To cancel the alarm, unlock or open any door.

How to Use

Activate, deactivate, or delay the detection alarm in infotainment touchscreen →  → **Vehicle** → **Cabin Perception** → **Child Presence Detection**.

- By default, the system is switched on each time when the vehicle is powered on.
- Tap **OFF** to deactivate the alarm in this trip.
- Tap **Delay** to push back the alarm (for five minutes) in this trip.
- Tap the exclamation mark for more details.

System Response

- If life presence is detected, the initial alarm (light flashing and honking) starts within 90 seconds and will last for about six seconds.
- If not cancelled, the alarm (light flashing and honking) escalates within 170 seconds and will last for about 25 minutes.
- The A/C will be switched on three minutes after alarm escalation, and will keep running for about 30 minutes.

WARNING

- While light flashing, honking, app message prompts, and A/C operation reduces the harm to the child(ren) in the vehicle, they cannot completely prevent harms.

WARNING

- When a reminder is provided, check whether any child has been locked inside the vehicle promptly to avoid further harms.

CAUTION

- Misidentification or false alarm could happen.
- The alarm may be given for adults, children, pets, or other lives detected.
- The alarm cannot be cancelled by unlocking the vehicle from the app.
- The system may not be able to trigger an alarm or switch on the A/C if the SOC is low. Keeping the vehicle at high SOC is recommended.

Direct Tyre Pressure Monitoring System

- The direct tyre pressure monitoring system help monitor tyre pressure in real time to improve vehicle safety and comfort and reduce tyre wear and energy consumption due to insufficient tyre pressure.
- Access the instrument cluster menu by pressing the  button on the steering wheel, then select the tyre pressure screen using the scroll button.

Tyre pressure system alarm

- When the pressure of any tyre is lower than 80% of the standard tyre pressure and the system is running, the tyre pressure fault warning light lights up and the tyre pressure value turns yellow. In that case, it is recommended

to check for slow air leakage and inflate the tyre to the correct pressure value.

- When the temperature of any tyre is above 185°F (85°C) for three consecutive minutes, the tyre pressure system gives a high temperature alarm, and the temperature value of the corresponding tyre turns yellow. You are then recommended to stop the vehicle and wait for the tyre temperature to decrease before further driving.
- When the system is running, if a fault occurs, the tyre pressure fault warning light is solid on after flashing, and the message "No Signal" or "Please check TPMS" is displayed on the instrument cluster. In that case, check the tyre pressure monitoring module, and check for any surrounding electromagnetic source nearby. If the alarm persists for a long time, please contact a BYD authorised dealer or service provider.

WARNING

- The system does not stop vehicle travelling in the event of abnormal tyre pressure. Therefore, each time before driving, ensure that the tyre pressure conforms to the requirements specified by the manufacturer. If not, do not drive, otherwise, vehicle damage or personal injuries may occur.
- If pressure is found to be abnormal while driving, check the tyre pressure immediately. If the low pressure warning light comes on, avoid sharp turns or emergency braking, slow down to pull over to the kerb as soon as possible. Driving with low tyre pressure can cause permanent

WARNING

damage to tyres and increase the risk of tyre scrapping. Serious tyre damage can lead to traffic accidents, resulting in serious injuries or deaths.

CAUTION

- The running time of the tyre pressure monitoring module is related to the daily travel distance and other factors.
- The monitoring module regularly transmits tyre pressure and other information to the display. Therefore, if the tyre pressure drops suddenly or there is a flat tyre, the monitoring module will not transmit data to the display until the next monitoring. In this case, the vehicle may be out of control. If there is a flat tyre and monitoring fails to inform, or if you feel that there are some tyre problems, stop driving immediately instead of waiting for the display to signal an alarm.
- Incorrectly installed monitoring module affects the air tightness of the tyre. It is recommended that the installation and replacement of the pressure monitoring module be carried out by professional technicians of a BYD authorised dealer or service provider in accordance with the requirements of the installation manual.
- Since tyre pressure varies with regional temperatures, inflate or deflate the tyres according to the values displayed on the instrument cluster and the standard tyre pressure values.


⚠ CAUTION

- The tyre pressure monitoring system may be disturbed by non-BYD approved electrical accessories on the vehicle. This is not a tyre pressure system failure.
- The tyre pressure system needs to be matched again after replacement of wheel rims or spare tyres* or tyre rotations. Please go to a BYD authorised dealer or service provider to re-match the tyre pressure.

Acoustic Vehicle Alerting System (AVAS)

The Acoustic Vehicle Alerting System (AVAS) refers to the broadcast to pedestrians near the vehicle when it is travelling at low speed.

- When driving forward:
 - The broadcast volume increases with vehicle speed in the range of 0 mph < V ≤ 12 mph (0 km/h < V ≤ 20 km/h).
 - The broadcast volume decreases with vehicle speed in the range of 12 mph < V ≤ 18 mph (20 km/h < V ≤ 30 km/h).
- At speeds above 19 mph (30 km/h), the broadcast sound stops automatically.

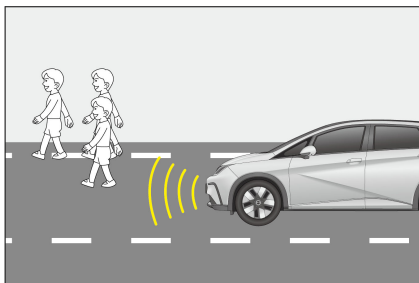

- The vehicle makes a continuous and balanced prompt sound when moving in reverse.

How to Use


- The system is enabled by factory default. To turn on or off AVAS, slide down the top status bar on the infotainment touchscreen to find the shortcut screen.
- AVAS offers two sound sources: standard and brand, which can be selected in ⚙ → **Audio Display** → **Notifications**.

⚠ WARNING

- The AVAS pause switch* can only be used if there are no other road users within a short distance, and no audio prompt is needed considering the surroundings (for example, in a traffic jam or on the motorway). As long as pedestrians may appear around the vehicle, the AVAS needs to be turned on.
- If the vehicle is running at low speed with AVAS turned off, it is unable to alert pedestrians, risking causing accidents and even casualties in severe cases.
- If the AVAS prompt sound cannot be heard when driving at a low speed, stop the vehicle in a relatively safe and quiet place, open a window, then drive in R gear and check whether you can hear an audible prompt from the front of the vehicle. If it is confirmed that there is no sound, it is recommended to contact a BYD authorised dealer or service provider.

Around View Monitor (AVM)

With the ignition switched on, tap **Vehicle View** on the infotainment system homepage or press the  button on the steering wheel to access the AVM.

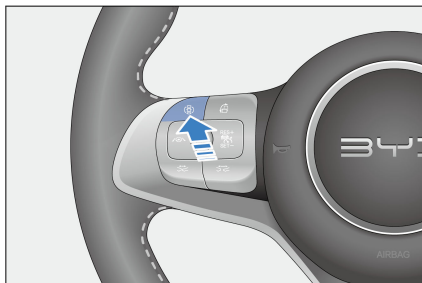

- Landscape mode:
 - Tap the front, rear, right, or left area of the vehicle icon on the right. View of the selected area is displayed in the image section on the left.
 - In the single front and rear views, double-tap the image section to switch to a 180° perspective displayed in full screen.



- Tap the radar icon  in the AVM system to enable the radar display, and tap it again to disable. When the radar display is enabled, a warning is displayed as the vehicle is approaching an obstacle.
- Portrait mode:

- Tap any two of the front, rear, right, and left areas of the vehicle icon in the lower left section. Views of the two selected areas are displayed in the upper and lower right image sections.
- Tap the vehicle image switching button in the lower left corner to switch between transparent and nontransparent vehicle images.
- When the vehicle is just started, the image before last power-off is displayed for the transparent around view. Foreign bodies shown may be inconsistent with the actual ones in the underbody and surrounding blind areas. The underbody image update will begin only after the vehicle has started to move and will be complete when the vehicle has been driven beyond its length.

WARNING

- The panoramic view system can provide transparent panoramic view to show the image below the vehicle. This function is only for assisting in observation of area below the vehicle during parking/driving. Investigation of foreign objects below the vehicle and dangerous situations should be carried out in any other manner to ensure the safety of personnel and the vehicle.
- When the vehicle runs at a low speed, the transparent panoramic view function is affected by speed fluctuation or multiple stops, so there will be misalignment between the images below the vehicle and that outside the vehicle.
- The panoramic view system is only to be used for parking/driving assistance. It is not safe

WARNING

to rely solely on this system to park or drive the vehicle, because there are some blind spots in front of and behind the vehicle. The surroundings of the car should be observed in other ways during the parking/driving process, so as to avoid accidents.

- This system uses wide-angle fisheye cameras, so the object on the display screen may appear somewhat deformed in comparison with the actual object.
- When the side mirrors are not extended in place, do not use the panoramic view system; and when the panoramic view system is used for parking/driving, ensure that all the car doors are closed.
- The distance to an object displayed on the panoramic view screen may be different from the distance perceived subjectively, especially when the object is closer to the vehicle. Assess the distance in various ways.
- Cameras are installed above the front grille, side mirrors, and the rear license plate. Make sure the cameras are unobstructed.
- To prevent affecting camera performance, avoid spraying directly on the cameras when washing the vehicle body with high-pressure water. Wipe any water or dust off the camera in time.
- Protect the cameras from any impact to prevent damage or malfunction.
- After the vehicle is powered on, if you press the panoramic view

WARNING

start button or shift into reverse while the infotainment system is not fully activated, the output on the panoramic view screen will be delayed or the screen will flash. This is a normal part of the camera power-on process.

- When one or more cameras in the system are not working, the corresponding views go black.
- When no camera is available, a "No video signal detected" message is displayed.

Parking Assist System

- During vehicle parking, the parking assist system detects obstacles by sensors, and prompts the driver with the proximity of obstacles by an image on the infotainment touchscreen* and a speaker alarm.
- The parking assist system helps with reversing. Pay attention to the environment behind and around the vehicle during reversing.

WARNING

- With the vehicle in Drive, the operation of the parking assist system ceases when vehicle speed rises to about 7 mph (11 km/h) and resumes when vehicle speed drops to about 6 mph (10 km/h).
- Do not place any articles within the sensors' working range.
- To prevent sensor malfunction, do not wash the sensor area with water or steam.


Parking Sensor Switch

- Turn the parking radar system on or off in infotainment touchscreen 
→ **ADAS** → **Parking Assistance** → **Parking Sensors**.
- When the ignition is switched on and EPB is released, the parking assist system is enabled automatically.
- When enabled, the system raises an alarm if obstacles are found surrounding the vehicle; when disabled, it does not.

Sensor Type

- When the sensor detects an obstacle, an image is displayed on the infotainment touchscreen* according to the location of the obstacle and its distance from the vehicle.
- When the driver conducts parallel parking or reverse parking, the sensor measures the distance between the vehicle and the obstacle and communicates this information through the infotainment touchscreen and the speaker. Be aware of the surroundings when using this system.


- ① Front right corner sensor*
- ② Front left corner sensor*
- ③ Rear right corner sensor
- ④ Rear centre sensor
- ⑤ Rear left corner sensor

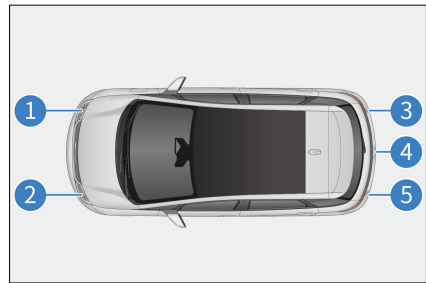

Distance Display Alarm

When the sensor detects an obstacle, the location of the obstacle and its approximate distance from the vehicle are displayed on the infotainment touchscreen, and the speaker beeps.

 Working example of centre sensors

Approximate Distance	Touchscreen Display Example	Alarm Sound
About 28-47 in (700-1200 mm)		Slow
About 12-28 in (300-700 mm)		Fast
About 0-12 in (0-300 mm)		Continuous

Working example of corner sensors

Approximate Distance	Touchscreen Display Example	Alarm Sound
About 12-24 in (300-600 mm)		Fast
About 0-12 in (0-300 mm)		Continuous


**CAUTION**

- The distance within 200 mm (7.87 in) is the blind spot range of the system. For the poor detection accuracy and inaccurate alarm information, the alarm prompts in this distance range are for reference only.

Working Sensors and Detection Range

All sensors are activated upon reversing.

The illustration shows the sensors' detection range. Sensors have a range limitation, so check the surroundings, then reverse slowly.

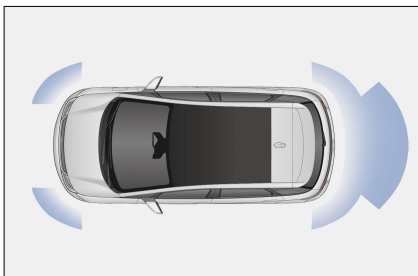**WARNING**

- The sensors may fail to detect obstacles that are very close to the vehicle.

**WARNING**

- The parking assist system is only for assistance, and is not a substitute for personal judgement. Be sure to operate the vehicle based on your observations.
- Sensors will not work properly if accessories or other objects are placed within their detection range.
- In some cases, the system cannot operate properly and will fail to detect certain objects as the vehicle approaches them. Therefore, be sure to observe the vehicle's surroundings at all times. Do not rely solely upon the system.
- Failure of the parking radar system is indicated by the message "P  Parking radar failed, please contact BYD service" on the instrument cluster and a beep. In that case, contact a BYD authorised dealer or service provider for inspection as soon as possible.

Sensor detection information

- Certain vehicle conditions and surroundings may affect the sensors'

ability to accurately detect obstacles.
Detection accuracy may be affected if:

- There is dirt, water or fog on the sensor.
- There is snow or frost on the sensor.
- The sensor is masked in any way.
- The vehicle leans significantly to one side or is overloaded.
- The vehicle is moving on particularly bumpy roads, slopes, gravel or grass.
- The sensor has been repainted.
- The vicinity is noisy due to honking of vehicles, motorcycle engines, air brakes of large vehicles, or other noises that produce ultrasonic waves.
- There's another vehicle with parking assist system nearby.
- The vehicle is fitted with a tow eye.
- The bumper or the sensor was hit hard.
- The vehicle is approaching a high or zigzag kerb.
- The vehicle is driving in the sun or in the cold.
- The vehicle is fitted with non-original, lower suspension.
- Except as described above, sensors may not be able to correctly determine the actual distance due to the shape of the object.
- The shape and material of obstacles may prevent sensors from detecting them, especially:
 - Electric wires, fences, and ropes
 - Cotton, snow, and other materials that absorb radio waves
 - Any object with sharp edges and corners

- Low obstacles
- High obstacles facing outwards towards the vehicle
- Any object under the bumper
- Any object close to the vehicle.
- Persons near the vehicle (depending on the type of clothing)
- If an image is displayed on the infotainment touchscreen* or there is a beep, it may be that the sensor detects an obstacle or is interfered. If the issue persists, go to a BYD authorised dealer or service provider for inspection.



CAUTION

- To prevent sensor malfunction, do not wash the sensor area with water or steam.

Driving Safety Systems

For better driving safety, the following driving safety systems works automatically based on driving conditions. However, these systems only provide assistance, and excessive reliance on them is not recommended.

Intelligent Power Braking System

The intelligent power braking system is an advanced decoupled electro-hydraulic braking system, incorporating vacuum booster, electronic vacuum pump, and ABS/ESC functionality. The system assists vehicle braking according to the driver's demands. It offers advanced control functions such as ABS, electronic brake force distribution (EBD), traction control system (TCS), vehicle dynamic control (VDC), comfort parking (CST), hill-start hold control (HHC), hydraulic brake assist (HBA), and controlled deceleration for parking brake (CDP) to improve vehicle

stability and comfort, and the recovery efficiency of brake energy.

Vehicle Dynamics Control (VDC)

When the vehicle turns suddenly while running, the VDC system determines the driver's intention based on such information as steering wheel's angle and vehicle speed, and continuously compares with the actual condition. If the vehicle swerves from the normal lane, the VDC corrects the situation by engaging brakes to the corresponding wheels to help the driver control skidding and maintain directional stability.

Traction Control System (TCS)

TCS prevents the drive wheels from skidding during acceleration by reducing the motor power, and, when necessary, applies braking forces to prevent drive wheels from spinning. It makes it easier for the vehicle to start, accelerate, and climb under adverse driving conditions.



WARNING

- TCS may not work effectively in the following situations:
 - On slippery roads, even if TCS is working properly, it may not be able to control the direction and meet power requirements.
 - Do not drive in conditions where the vehicle may lose its stability and power.

Hill Descent Control (HHC)

After you release the brake pedal, HHC maintains the brake pressure you imposed for 1.5 seconds to prevent backward sliding of the vehicle.

Hydraulic Brake Assist (HBA)

When you press the brake pedal quickly, HBA detects that the vehicle is in emergency condition. It quickly increases

the brake pressure to the maximum so that ABS can intervene more quickly and shorten the braking distance effectively.

Controlled Deceleration for Parking Brake (CDP)

When you engage the EPB, the CDP function starts working so that the vehicle brakes at a constant deceleration (0.4 g if EPB is engaged but the brake pedal is not pressed, and 0.8 g if EPB is engaged and the brake pedal is pressed) until the vehicle stops. The function stops working when the EPB is released.

Electronic Stability Controller (ESC) instructions

Intelligent power braking system has the following new functions compared with the original ESC system:

- Brake assist mode
 - The brake assist mode is used to adjust the brake pedal feel. The relation curve between the brake pedal depth and the vehicle deceleration varies across different modes for the driver to choose their preferred pedal feel.
 - Adjust the brake pedal feel in infotainment touchscreen → **Vehicle** → **Driving Control** → **Steering and Breaking**.
- Comfort Parking (CST)
 - Comfort parking function: When the vehicle decelerates to stop in a non-emergency situation, the integrated brake control system reduces the stop-instant suspension pitch and impact by controlling the brake pressure of the four brakes, providing a smooth stop feeling for the driver.
 - Enable or disable this function in infotainment touchscreen →  → **Vehicle** → **Driving Control**.

- After the function is triggered, the braking distance may increase by 0.8–2 in (2–5 cm). Increase the distance from the vehicle or obstacle ahead accordingly before stopping your vehicle.

- Brake disc wiping

- Water on the brake discs increases the braking response time. The brake disc wiping function removes moisture during driving in wet environments. This is achieved by actuating the brake at low pressure, keeping the brake pads in contact with the rotating brake discs. Moisture is thus wiped off the discs. When the system detects rain or wet roads, it repeatedly wipes the brake disc at certain intervals.

- ESC working


- If there is a risk of skidding or backsliding when the vehicle starts on a slope, or if either drive wheel is spinning, the ESC indicator flashes to indicate that ESC system is working.

- Disabling ESC

- If the vehicle gets stuck in snow or mud, ESC may reduce power output from the motor to the wheels, where the system should be turned off to get out of the jam.

- Turning off ESC

- Press the ESC OFF button or go to infotainment touchscreen → ⚙️ → **Vehicle** → **Driving Control**. ESC also checks its operating status in real time. If you turn off ESC while it is working, it completes the active intervention control rather than executes the "shutdown" command immediately. ESC is disabled only after the intervention control is complete.

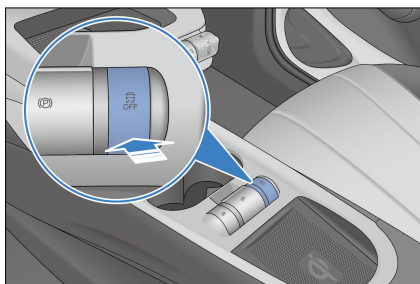

- Some functions of the ESC system may be re-enabled if you press the ESC OFF switch again or the vehicle speed exceeds the threshold (50 mph, or 80 km/h). In order to prevent ESC from being turned off suddenly, ESC can be activated again only when it is not in a vehicle dynamic intervention state.

- ESC OFF switch mis-operation

- ESC is considered to be mis-operated if the ESC OFF switch is pressed and held for more than 10 seconds. In that case, all ESC functions remain in normal operation.

- Restarting ESC after the vehicle is powered off

- When the ESC system has been turned off, restarting the vehicle automatically restarts the system.

- ESC start and speed linkage

- Although already turned off, the ESC system can start on its own if the vehicle becomes extremely unstable as the speed increases and exceeds the threshold of 50 mph (80 km/h).

- With ESC system activated

- If the ESC fault indicator  flashes, drive with extra care to avoid accidents. Exercise additional caution when the indicator is flashing.

- With ESC system disabled


- Be careful when ESC is disabled, and drive at speeds suitable for road conditions. The ESC system ensures vehicle stability and its driving force. Never turn it off unless necessary.
- Replacing tyres
 - Make sure all tyres are of the same size, brand, tread pattern, and total load. In addition, be sure to inflate tyres to the recommended pressure.
 - Neither ABS nor ESC will work properly if the vehicle is fitted with different tyres.
 - For details on tyre or wheel replacement, it is recommended to contact a BYD authorised dealer or service provider.
- Tyre and suspension handling
 - The use of any defective tyre or modified suspension affects the driving safety system and may cause the system to fail.

Multi-collision braking*

- If an accident requires airbags activation, the vehicle engages automatic braking.
- Speed reduction, along with intervention by additional driving systems (ESC and ABS), assists the vehicle to maintain stability and lane position.
- Hazard and brake lights also light up to alert oncoming traffic and prevent further collisions.
- To support emergency service rescue and vehicle recovery, brakes will release and brake lights will go off after the accident.
- The driver can interrupt the multi-collision braking* at any time by accelerating or braking.

Anti-lock Braking System (ABS)

- The Anti-lock Braking System (ABS) hydraulic system has two separate circuits, each running diagonally through the vehicle (left front wheel brake connected to the right rear wheel brake). If one circuit fails, two wheels can still be braked.
- ABS helps maintain the steering control by preventing the wheels from locking or skidding when brake is engaged suddenly or on slippery roads.

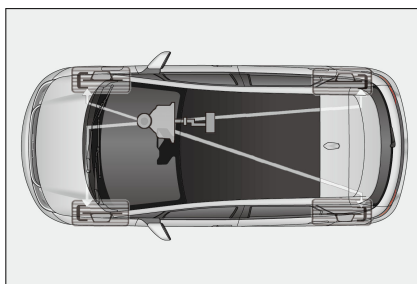

- When the front tyres skid, there is no steering control, which means that the vehicle still moves forward even though the steering wheel is turned. ABS helps prevent locking and maintain steering control since pulsating prompt brake is much faster than human reaction.
- Never pulsate the brake pedal; otherwise, ABS may malfunction. While steering away from danger, a firm and steady pressure should always be maintained on the brake pedal for the ABS to work.
- When the ABS is working, the brake pedal will vibrate, which may produce noise. This is normal because the ABS is pulsating the brake quickly.

Electronic Brakeforce Distribution (EBD)

- The EBD is an auxiliary function of ABS. Before ABS acts, if the skid rate of rear wheel is high, ABS adjusts the brake pressure of rear wheel for a smoother and more ideal brake force distribution.

WARNING

- ABS cannot work effectively under the following conditions:
 - Tyres with inadequate grip are used (for example, excessively worn tyres used on snow-covered roads).
 - The vehicle skids when driving at a high speed on slippery roads.
- ABS is not designed to reduce the braking distance of the vehicle. Always keep a safe distance from the vehicle ahead on:
 - Muddy, sandy, or snowy roads.
 - Roads with potholes or uneven roads.
 - Bumpy roads.

CAUTION

- If the ABS fault warning light is still on while the braking system warning light is on, immediately park the vehicle in a safe place. It is recommended to contact a BYD authorised dealer or service provider.
- In this case, if brakes are applied, the ABS will not work and the vehicle will become extremely unstable.
- ABS does not reduce the time and distance required to stop the vehicle. This device only helps you control steering when braking.

CAUTION

Please always keep a safe distance from other vehicles.

- ABS cannot prevent skidding caused by sudden direction change, such as trying to make a sharp turn or change lanes suddenly. Always drive carefully at a safe speed, regardless of road and weather conditions.
- ABS does not prevent decrease in stability either. When applying the brake in an emergency, the steering should be moderate. A large or sharp turn during the driving can cause the vehicle to swerve into oncoming traffic or run off the road.
- When running on soft or uneven surfaces (such as gravel or snow), a vehicle with ABS may require a longer braking distance than a vehicle without ABS. In such cases, slow down and keep a long distance from other vehicles.

05

IN-VEHICLE DEVICES


Infotainment System.....	144
A/C System.....	152
BYD App.....	157
Storage.....	158
Other Devices.....	161

Infotainment System

Infotainment Touchscreen

When the ignition is switched on, the initial screen is displayed for several seconds and the infotainment system starts to work. To better experience infotainment functions, such as apps and Internet calls, the system must be used after network connection.

- ① Infotainment Touchscreen
- ② Scroll button

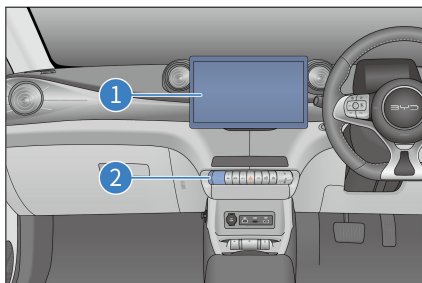

- Scroll up (toward the front of the vehicle) to turn volume up or down (toward the rear of the vehicle) to turn volume down. Volume ranges from 0 to 39. A mute icon is displayed when the volume is 0.
- Press the scroll button to mute the system and go to the screen saver interface or turn off the screen (set in the infotainment touchscreen → ⚙️ → **Audio Display** → **Screen**). Press the scroll button again to unmute and turn on the screen.
- Press and hold the scroll button for three seconds to restart the infotainment system.

Reset to factory settings

- Reset to factory settings on the infotainment system by tapping ⚙️ → **System** → **Version** → **Factory reset** → **Restore**.
- This action factory resets the infotainment system.
 - During the process, do not touch any infotainment button or turn off the power supply, or errors may occur.
 - The process takes two to five minutes.



WARNING

- Do not use a high-power inverter in the vehicle, as this may cause infotainment system malfunction.
- Do not format or root the device, as this may cause infotainment system or vehicle malfunction.
- For driving safety, it is recommended to use the infotainment system in landscape mode while driving.



CAUTION

- To prevent damage to the infotainment touchscreen:
 - Touch the screen gently. If there is no response, remove your finger from the screen, then touch it again.
 - Clean the screen with a soft cloth. Do not use any cleaning product.
- Using the infotainment touchscreen:
 - When the screen temperature is low, the image displayed may be darker or the system may work slightly slower than normal.

CAUTION

- The screen may be dark or difficult to see when you are wearing sunglasses. In that case, change the viewing angle or take off the sunglasses.
- Touchscreen buttons that are greyed out cannot be operated.
- The touchscreen interface shown here is for reference only.

Navigation Bar

 : returns to the previous screen or exits the program.

 : returns to the homepage.

 : goes to the vehicle settings screen.

 : splits screen if applications support.

 : enables screen saver.

 : shows recently opened applications.

 : switches between landscape and portrait touchscreen modes.

Gestures and Responses

Gestures and associated system responses are:

- Tapping: opens applications, selects functions, clicks icons on the touchscreen, or types characters.
- Dragging: touching and dragging an icon, thumbnail, or preview to the target position to change its location.
- Swiping: operational on homepage and app screens.
- Double-tapping: zooms in or out an image.

- Spreading/pinching: zooms in or out an image with two fingers.

OTA Updates

- The vehicle supports over-the-air (OTA) updates. You can update your software to the latest by tapping  → **System** → **Version** → **Version update** → **Upgrade**.
- When available, new updates are prompted on the infotainment touchscreen. You can update immediately or schedule an update according to your use of the vehicle.

CAUTION

- Do not move the vehicle during the upgrade.
- Before the update, ensure that the vehicle is parked safely in Park gear with a stable network connection.
- Ensure the vehicle has a high SOC before starting the update.
- Do not install any third-party devices in the on-board diagnostics port before or during the update.
- Make sure the vehicle has enough battery power before the update, as it cannot be charged or discharged during the process.
- During the update, vehicle functions are not available except the following: locking/unlocking with smart key or microswitch, interior lights, hazard warning light, and window controls.
- If the update fails, try again. If it continues to fail, contact a



CAUTION

BYD authorised dealer or service provider for assistance.

BYD Assistant

BYD Assistant is an intelligent voice assistant that responds to your voice commands, such as requesting navigation, playing music/radio, making a phone call, and controlling in-vehicle devices.

- Waking up BYD Assistant:
 - On the steering wheel, press the  button.
 - On the infotainment touchscreen, tap .
 - Say the wake-up word: "Hi, BYD."
- Your voice commands can be recognised after system wake-up.
- Give any instructions.
 - This may be "Go home" (shortcut locations set), "Play music", "Make a call" (contacts data and Bluetooth connection required), "Set the temperature to 23°C", or "Turn on the seat ventilation for the driver". BYD Assistant then performs the recognised instruction.

Bluetooth Call

Setting up the connection

1. On Bluetooth Call screen, tap **Connect**.
2. Tap **Available devices** to search.
3. Pair an available device, and make sure the pairing code displayed on your phone is consistent with the code on the touchscreen.

4. Set Bluetooth when connection is complete.

Making a Bluetooth call

Go to the dialing screen when Bluetooth is connected.

- Tap Contacts, Call log, or Missed calls, or use dial keypad to make a call.
- Tap  to zoom in or out the dialing screen.
- Tap  to display or hide the dial keypad.
- On AVM screen, calls are informed of by a small window popping up.

File Management

Creating a new folder

- Go to file manager screen to create a new folder. You can enter the folder name and tap **OK** or **Cancel** to create or stop creating the file.
- Tap the top of the file management screen to change file sources.

Searching a file

- Tap **Search** on the upper left corner and enter file names to search for target files.

Cutting or Copying a file

- Touch and hold any file to select it, select the command you prefer (copy, move, or delete), then tap **OK**.

Renaming a file

- Touch and hold any file, tap the icon on the upper right, and choose **Rename**.

Deleting a file

- Touch and hold any file, and then tap **Delete**.

Sorting files

- Files are sorted by name by default. You can also sort them by size, type, or time.

Checking file attributes

- Touch and hold any file, tap the icon on the upper right, and then choose **Details** to check its attributes.

Phone Projection*

Phone projection* allows you to connect a smartphone to the vehicle and interact with certain mobile apps on the infotainment touchscreen.



WARNING

- Drive safely. Avoid any possible distractions, or accidents could result.



REMINDER

- Make sure the vehicle is in Park with the infotainment system turned on, and allow time to set up the phone projection app before you start your drive.
- The initial setup process is to be completed on the phone or the infotainment touchscreen: check prompts on the phone for security information, accept privacy policies, and grant necessary permissions.
- Wired connections require a connection between a certified USB cable to the USB data transfer port on the vehicle.
- When connecting wirelessly, pair your phone and the vehicle via Bluetooth. It is better to keep your phone's Bluetooth, Wi-Fi,



REMINDER

- and Location Services turned on in this process.
- For the connection to be stable, it is better to change the vehicle hotspot name to avoid name-related issues.
- Ensure your phone is in range of your mobile data network and has an active data plan.
- Availability of services shown varies by country and language, and subscriptions for services may be required.

Apple CarPlay

Connecting with a cable

- To activate the connection**, plug an iPhone to a USB data transfer port on the vehicle with a certified USB cable. Apple CarPlay is then connected. The phone projected is shown on the device list.
- To deactivate the connection**, unplug the iPhone USB cable to stop Apple CarPlay. If you have chosen to enable wireless CarPlay, the phone and the vehicle pair automatically to allow for future wireless connections.

Connecting wirelessly

- To activate the connection**, do as follows.
 - On the infotainment touchscreen, tap the Apple CarPlay icon , and pair your iPhone to the vehicle as prompted.
 - After that, follow on-screen instructions to connect Apple CarPlay.
- To deactivate the connection**, choose any of the following ways.

- On the vehicle, turn off the vehicle hotspot.
- Turn on vehicle Wi-Fi to let the vehicle hotspot off.
- In the connected device list, tap **Delete** or **Disconnect** to disconnect the current device.
- In the Bluetooth list, delete the device projected.
- Connect the Bluetooth of the current device.
- Turn off the vehicle.
- On your phone, delete this CarPlay device.
- Turn off your phone Wi-Fi.

REMINDER

- Note that stopping the current connection will not have other CarPlay devices connected automatically.

Reconnecting Apple CarPlay

- Disconnected wired Apple CarPlay will not automatically restore. You have to unplug and replug the USB cable for this purpose.
- Wireless Apple CarPlay, if abnormally disconnected, automatically try to reconnect.

Switching between Apple CarPlay and built-in infotainment system

- To exit from Apple CarPlay, tap the BYD icon  on Apple CarPlay's home screen.
- To go back to Apple CarPlay, tap the Apple CarPlay icon  on the built-in infotainment system's application screen.

- When the connected device list has only one Apple CarPlay history, tapping the icon automatically activates the connection.
- When there are multiple device histories suitable for projection, tapping the Apple CarPlay icon navigates to the device list. Select the one you want to use.

Switching between devices

- Access the connected device list by tapping the connected device icon on the shortcut menu or by going to  → **Connection** → **Connected Devices**.
- By using the list, you can only switch to a wireless device. This means you get a prompt if selecting another wireless device, but you will need to unplug and replug the USB cable to switch to a wired device.
- Connecting the USB port of the phone being connected wirelessly—which starts charging only—will not trigger the switching prompt, but connecting that of another phone will.

Possible issues

- **Checking your phone**
 - Use a phone that is in proper conditions. Apple CarPlay may often freeze on older iPhone models or earlier iOS versions.
 - A smooth cellular network is necessary. Sluggish network connections could cause apps to lag.
 - Apple CarPlay may disconnect by signal interference in a complex network environment.
- **Checking connections with the vehicle**
 - For wired connections, be sure to use the data transfer port, and preferably

a MFi-certified or genuine iPhone cable.

- For wireless connections, verify your phone settings:

- Bluetooth has been turned on.
- Wi-Fi has been turned on and Auto-Join of the vehicle hotspot toggled on.
- Wireless Carplay has been selected at the very first Apple CarPlay connection. In case you do not know, navigate on your iPhone to **Settings** → **General** → **Carplay**, select the vehicle you want to reset, then tap **Forget This Car**. Delete your iPhone from the device list on the vehicle. Then reset Apple CarPlay.

- In the event of MFi authentication chip issue or reading error, delete histories and reconnect. If the issue persists, contact a BYD authorised dealer or service provider.

- The name of the vehicle's Bluetooth or hotspot must be unique.

- Search on your phone for nearby Bluetooth and hotspots. Make sure that no other devices have the same name as this vehicle to prevent interference.
- You can change the vehicle Bluetooth or personal hotspot name in the infotainment touchscreen →  → **System** → **Link**.

- Make sure Siri is on.

- Make sure Apple CarPlay is not restricted.

If your iPhone is not detected by Apple CarPlay, navigate on the phone to **Settings** → **Screen Time** → **Content & Privacy Restrictions**. If

Content & Privacy Restrictions is on, tap **Allowed Apps & Features** to make sure that Apple CarPlay is enabled.

- If Apple CarPlay is disconnected by turning the vehicle hotspot off, wireless reconnection cannot be performed within 10 minutes. Try after that.
- You can restart by forgetting history settings:

On your iPhone, navigate to **Settings** → **General** → **Carplay**, select the vehicle you want to reset, then tap **Forget This Car**. In the meantime, delete this phone from the vehicle's device list.

- If the wireless connection fails after you end a wired connection by unplugging the USB cable, clear CarPlay device information on your iPhone or restart the phone.
- For available regions of Apple CarPlay, visit <https://www.apple.com/ios/feature-availability/#apple-carplay>.

Android Auto

Connecting with a cable

- **To activate the connection**, plug an Android Auto-compatible phone to one of the vehicle's USB data transfer port with a certified USB cable and set up as prompted.
- **To deactivate the connection**, unplug the USB cable or. Alternatively, you can end the connection or delete the projected phone in **Connected Devices**.

1. Plug a smartphone to a USB data transfer port on the vehicle with a certified USB cable.

2. Follow the on-screen instructions to set up Android Auto.

Connecting wirelessly

- **To activate the connection**, do as follows.
 1. On the infotainment touchscreen, tap the Android Auto icon , and pair your smartphone to the vehicle as prompted.
 2. After that, follow on-screen instructions to connect Android Auto.
- **To deactivate the connection**, choose any of the following ways.
 - On the vehicle, turn off the vehicle hotspot.
 - Turn on vehicle Wi-Fi to let the vehicle hotspot off.
 - In the connected device list, tap **Delete** or **Disconnect** to disconnect the current device.
 - In the Bluetooth list, delete the device projected.
 - Turning Bluetooth on the vehicle or Wi-Fi on the phone off may stop projection.
 - Turn off the vehicle.
 - On your phone, delete this Android Auto device.

Reconnecting Android Auto

- Disconnected wired Android Auto will not automatically restore. You have to unplug and replug the USB cable for this purpose.
- Wireless Android Auto, if abnormally disconnected, automatically try to reconnect.

Switching between Android Auto and in-vehicle infotainment system

- To exit from Android Auto, tap  on Android Auto interface.

- To go back to Android Auto, tap the Android Auto icon  on the built-in infotainment system's application screen.
- When the connected device list has only one Android Auto history, tapping the icon automatically activates the connection. Connection prompts will be given if projection conditions are not met.
- When there are multiple device histories suitable for projection, tapping the Android Auto icon navigates to the device list. Select the one you want to use.

Switching between devices

- You can switch between wireless Android Auto devices in the connected device list and get a switching prompt after selecting another device.
- However, this step does not work for switching to a wired device, which requires unplugging and replugging the USB cable.
- Connecting the USB port of the phone being connected wirelessly—which starts charging only—will not trigger the switching prompt, but connecting that of another phone will.

Possible issues

- **Android Auto not working**
 - Make sure your phone supports Google service.
 - Check if the phone operation system supports Android Auto.
 - Common Android Auto compatible devices are Android phones running Android 11.0 or later versions. Consult your phone maker for compatibility.

- Android Auto is not supported on phones running Android (Go edition).
- Verify that your phone has the latest version of Android Auto app.
 - Search for Android Auto in phone Settings, then go to the Android Auto screen to view the version.
 - If Android Auto cannot be found, search for it in Google Play to download or update.
- Check if the connection between your phone and the vehicle is working normally.
 - For wired connections, use a good USB cable to connect the phone and the data transfer port.
 - For wireless connections, make sure Bluetooth and Wi-Fi are turned on on your phone and so do the vehicle Bluetooth and hotspot.
- **Unable to reconnect Android Auto**
Try the following steps:
 - If you are using a wired connection, change to a genuine USB cable of the phone.
 - For a wireless connection, change the vehicle hotspot name (⚙️ → **System** → **Link**) or turn off the Bluetooth and Wi-Fi on the phone and the vehicle, then turn them back on.
 - Restart your phone and the vehicle infotainment system.
 - Delete and reconnect your phone as follows:
 1. Forget previously connected devices on the phone: Go to your Android phone's settings, then navigate to or search for Android Auto settings (on Google phones for example, **Settings** → **Connected devices** → **Connection preferences** → **Android Auto**).
 2. Tap **Previously connected cars**, then the three-dot menu button, and select **Forget all cars**.
 3. On the vehicle infotainment touchscreen, go to ⚙️ → **System** → **Link** → **WLAN**, then delete the device you want to project from the **Connected Devices**.
 4. Delete your phone from **Bluetooth Settings**.
 5. Reactivate the connection between the phone and the vehicle.
- **Causes to unstable Android Auto connections**
 - For wired Android Auto, typical causes are:
 - Unstable data transmission due to low-quality USB cable
 - Data transmission failure of USB port on the side of the vehicle
 - Data transmission failure of USB port on the side of the phone
 - Unstable connections due to BC1.2 incompatibility of the vehicle USB port
 - Unstable connections due to an old version of Android Auto on the phone
 - High network jitter on rugged roads
 - For wireless Android Auto, they include:
 - Hotspot turned off on the vehicle or Wi-Fi off on the phone
 - complex network environments or weak signals (for example, vehicle hotspot having to compete for frequency resources)

if various Wi-Fi creators are working concurrently)

- Bad cellular reception (in a basement or forest, for example)
- Too old version of Android Auto on the phone (the latest version recommend)
- Many BYD vehicles nearby with identical hotspot names
- Faulty or malfunctioning Bluetooth or Wi-Fi module on the phone or the vehicle

• Apps not available on Android Auto

- Not all apps on your phone are compatible with Android Auto, so some of them may not be displayed on the user interface.
- Mobile network influences app presence or usage on Android Auto. Some apps cannot be opened without mobile network connections.
- Given the feature or permission differences of apps between Android Auto and the phone, please consult the app providers if you have questions on app usage.

! REMINDER

- Android Auto is integrated into phones with Android 10 and above. You do not need to download it.
- For wired or wireless connection, your phone might ask you to update Android Auto before you continue.
- Android Auto connections require the use of Bluetooth on both your phone and the vehicle, which could disconnect other already connected Bluetooth devices.

! REMINDER

- Wireless Android Auto connections rely on the use of Wi-Fi on your phone, which could interrupt Wi-Fi connections on your phone.
- Wireless Android Auto connections rely on the use of vehicle hotspot, which could interrupt Wi-Fi connections on the vehicle. If Wi-Fi remains needed, turn on Wi-Fi again and try to reconnect it. (Performance may vary across systems.)
- For Android Auto compatibility, visit Google website: <http://www.android.com/auto/>


Trademark statement

- Apple CarPlay is a trademark of Apple Inc.
- Android and Android Auto are trademarks of Google LLC.

A/C System

A/C Buttons

- ① A/C auto mode
- ② Front windscreen defroster
- ③ A/C ON/OFF

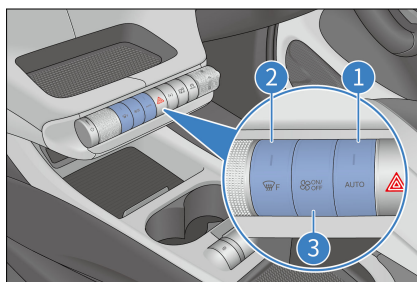



REMINDER

- Remote A/C activation:
 - You can turn on the A/C by using the smart key or from the BYD App to create a comfortable cabin environment in advance.

A/C Operation Interface



- | | | | |
|---|--|----|------------------------------|
| 1 | Front passenger's temperature control | 8 | Auto mode |
| 2 | Ventilator | 9 | A/C ON/OFF |
| 3 | Circulation mode | 10 | Air distribution |
| 4 | Defroster for rear windscreen & side mirrors | 11 | A/C operation interface |
| 5 | Front windscreen defroster | 12 | A/C settings |
| 6 | Max cooling | 13 | Driver's temperature control |
| 7 | Cooling | 14 | Fan speed control |

A/C Function Definitions

Auto mode

- Tap this button to automatically adjust compressor state, fan speed, and air outlet mode. The button indicator (on the gear shift control panel) lights up.
- When the fan speed, air outlet mode, or compressor state is set, the fully-

automatic control mode is deactivated, but functions other than those set remain in automatic mode.

A/C ON/OFF

- When the A/C is on, press this button to turn the A/C off.
- When the A/C is off, press this button to turn the A/C on.

Fan speed control

- Tap the chosen position. The more bars illuminated, the faster the fan speed.

Front windscreen defroster

- Tap this button to enter the front windscreen defrost mode, distributing air to the front windscreen and side windows. Tap this button again to exit this mode.
- Tapping this button activates windscreen defrosting and demisting and turns the A/C on.

Temperature control

- To increase/decrease the temperature, tap the upper/lower arrow on the screen, or touch the temperature display area and then swipe downwards/upwards.
- "Lo"/"Hi" is displayed when the temperature is set to the lowest/highest value.

Max cooling

- Tap this button to activate the max cooling control. The temperature is set to "Lo", the fan speed is set to the maximum, the recirculation mode is activated, and air blows in face level mode.
- Tap this button again to exit.

Cooling

- Tap this button to turn on the A/C. The icon lights up and cooling begins. Tap this button again to turn off the A/C. The icon goes out.

Circulation mode

- Tap this button to switch to recirculation/fresh air mode. Tap it again to switch to fresh air/recirculation mode.
- When the "automatic recirculation when parking" function is enabled, to ensure air quality in the vehicle

and prevent the vehicle exhaust from entering the vehicle, the recirculation mode is switched on automatically after you shift into "P".

Defroster for rear windscreen and side mirrors

- Tap this button to heat up and defrost the rear windscreen and side mirrors. The function is automatically deactivated after 15-minute inactivity of the associated button. Tap this button a second time to disable the function.
- This function is not for drying raindrops or melting snow.



WARNING

- Using the side mirror electric heating defrosting function for a long time may cause the mirror to wear out faster. Turn off the defrost button when it is not needed.
- Do not touch the side mirrors when the defroster is activated, because their surfaces will be hot.

Ventilator

- Tap this button to activate A/C ventilation control. The outlet air is natural air.
- Tap this button again to deactivate A/C ventilation control and enter AUTO mode.


Air distribution

- Tap an icon on the infotainment touchscreen to select the corresponding air distribution mode. You can turn on multiple modes (up to three) simultaneously by using the touchscreen.

➡ : Air flows to the face level

↓ : Air flows to the foot level

☂ : Air flows to the front windscreen and side windows

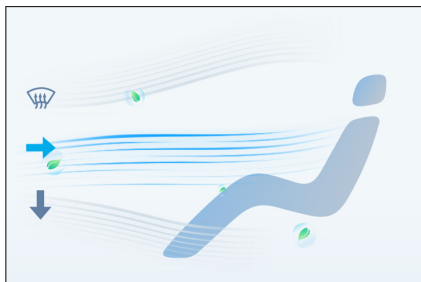

Usage Precautions

- To quickly cool down the interior after long exposure to sunlight, drive for a few minutes with the windows open to exhaust hot air and speed up A/C cooling.
- To speed up cooling, adjust the temperature to "Lo" and use the recirculation mode for a few minutes.
- Make sure that the air intake grille in front of the windscreen is not blocked (for example, by leaves or snow).
- Avoid blowing cool air onto the windscreen in humid weather. The inner and outer temperature difference can cause glass fogging.
- Keep the space under the front seats clear to improve air circulation.
- In cold weather, run the fan at high speed for one minute to remove snow or moisture from the intake passage and reduce fogging.
- Use recirculation mode for a few minutes for quick heating in cold weather, and switch to fresh air mode to prevent fogging after cabin is heated up.
- In dusty or windy driving conditions, close all windows,
- In heating mode, press the compressor control button to light up the button (turning on the compressor), which can reduce airflow moisture.
- In the ventilation mode, the system introduces the natural wind from outside, which is suitable for spring and autumn.



REMINDER


- A/C odours:
 - It is normal that there may be a damp and moldy smell just after the A/C is turned on. During A/C operation, condensation often remains in the evaporator, and the wet evaporator can easily absorb unfiltered body sweat and smokes inside the vehicle. Condensation not blown dry makes the dark and damp evaporator surface prone to mold, which is very likely to produce odours by long-term fermentation.
- How to prevent A/C odours:
 - Turn off the A/C and ventilate with natural air before parking to keep the air inside the vehicle relatively dry.
 - Check, clean, and replace the air filter regularly.
 - Try to keep the cabin clean and fresh.
 - If the odour persists after the prevention measures are used, it is recommended to contact a BYD authorised dealer or service provider for repair.

! REMINDER

- In order to reduce A/C odours, if the A/C is already turned on, the A/C blower may keep running for a while after the vehicle is powered off and locked. That is because the condensed water on the surface of the evaporator needs to be dried to prevent mold fermentation. It is normal for the A/C blower to start running automatically when you lock the vehicle. No need to worry about it.

Vents

Use the adjustment knob to adjust the fan speed or air outlet angle. Move the adjustment knob to their limits to close the air outlet.

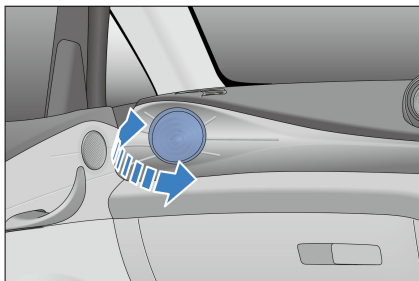

BYD App

About BYD App

- BYD app is a mobile application of Internet of Vehicle (IoV) developed by BYD independently. It allows you to control the vehicle remotely and check vehicle conditions, delivering cloud era experience of IoV.

- Search for "BYD" in Google Play or App Store to download and install the BYD app.

Account Registration

App guidance and the following steps give instructions on signing up and logging in after BYD app installation.

1. Open the app, then tap **Sign up** to go to the registration screen.
2. Enter email address registered in BYD authorised dealer, tap **Send email** to receive verification code, and then enter the code in app.
3. Set your password in password setting screen to complete the registration, and then the homepage is displayed.



CAUTION

- Provide the email address registered at the BYD authorised dealer, or registration will fail.
- In the app, select a country or region on upper right corner of the screen. The default setting depends on your phone setting. If it is not where you make the purchase, choose the right one, otherwise your data will not be accessible.

Vehicle Condition and Control

The BYD app homepage provides information and control items of the vehicle.

1. The homepage shows remaining driving range, SOC, vehicle error information, and status of vehicle driving, charging, A/C system, seat heater, and tyre pressure.

2. Tap lock, unlock, light flashing & honking, or light flashing button to activate the corresponding function.
3. Turn on or off A/C on the app homepage, or tap the A/C card to access other settings, such as temperature regulation. See **P154** for details.
4. At the bottom of the homepage, tap the icon of seats, doors and windows, or tyres to go to the associated screen and check their status.
5. If you have multiple vehicles on an account, tap the vehicle name in the upper left corner of the screen to switch between vehicles.

CAUTION

- The control function of the app is mainly for remote use. To use this function, ensure your phone and vehicle are connected to the Internet.

Individual Centre and Vehicle Management


In BYD App screen, tap **My Account** to go to the individual center.

- Tap the icon on the top right corner of the vehicle card to edit the vehicle name and license plate number.
- **Account and security:** gets back or changes password.
- **Settings:** sets message reception, automatic login, and other items.
- **About Us:** includes privacy policy and information to contact us and give feedback.

Storage


Door Bins

- There is a door bin on each door for storage of beverage bottles or small items.

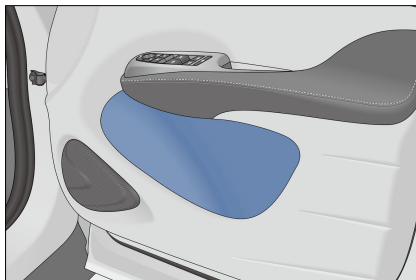


Bill Box

- It is located on the dashboard on the driver's side and used to place invoices, business cards, and similar objects.

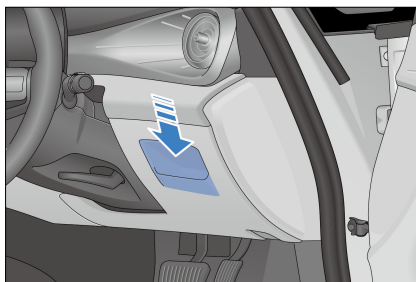


Dashboard Central Storage Compartment

- It is located in the middle of dashboard.

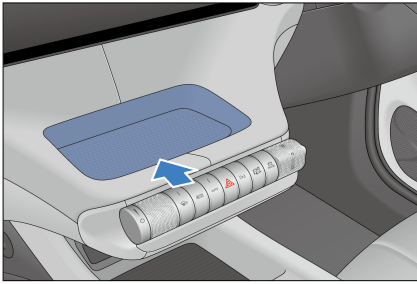

Glove Box

- Pull the handle to open the glove box.
- Push the lid up to close it.

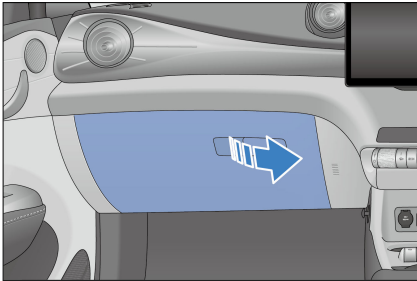


REMINDER


- To reduce risk of injury in the event of an accident or emergency braking, keep the glove box closed while driving.

Centre Console Storage Compartment


- Located below the dashboard and in front of the centre console. Open its cover to use the space.

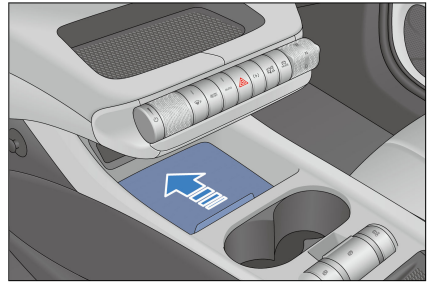

- Below the centre console.

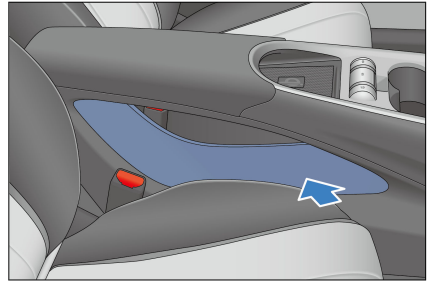


- Behind the centre console.

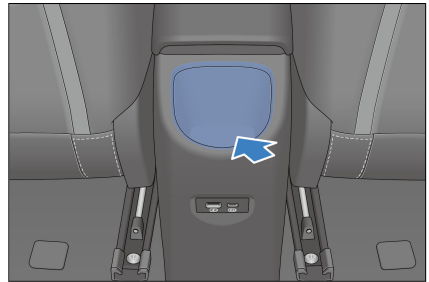

Cup Holder

Front Cup Holder

- The front cup holder is located in the centre console.

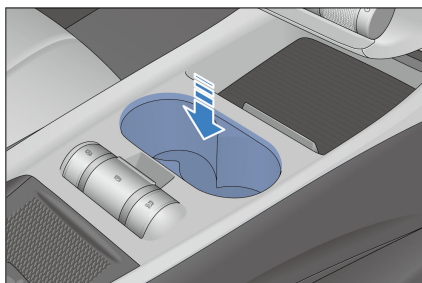

CAUTION

- Cups or bottles in a different size or shape may not fit in the cup holder.
- Cups or any items that may obstruct the driver's view must be taken away before driving.

Rear Cup Holder

- Flip the rear seat armrest to use the cup holder.



WARNING


- Be cautious with hot drinks to avoid scald, and do not start or brake the vehicle suddenly to prevent spills.
- Do not place an open cup or untightened beverage bottle in the cup holder, so as to avoid spills while you are driving, opening or closing a door.

WARNING

- Do not place glass or ceramic cups or other hard items, which may cause injury in the event of an accident or emergency braking.
- To ensure safety, the driver should not use cup holders while driving.


Glasses Case*

- Pull down the glasses case to store glasses.

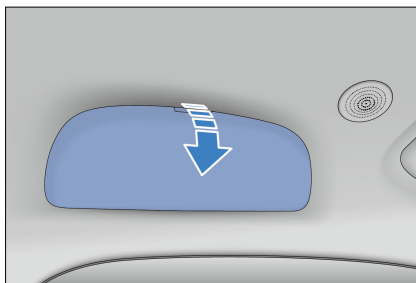

Seatback Pockets

- There are seatback pockets at the back of the front seats for storing magazines, newspapers, or similar objects.

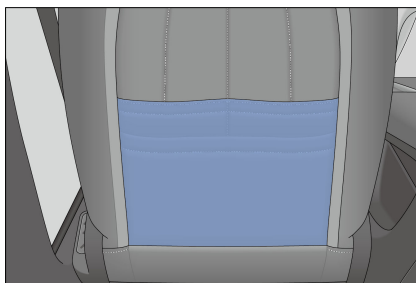


Other Devices

Sun Visor

① Sun visor

- To block sunlight from the front, pull the sun visor down.
- To block sunlight from a side, remove the swivel sleeve from the fixed support and turn the visor towards the side window.

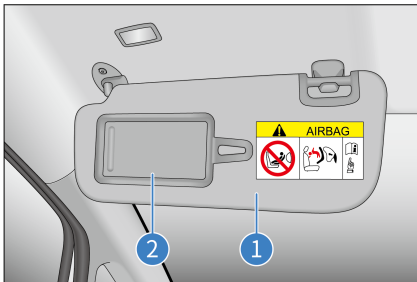

② Vanity mirror


- Vanity mirrors are installed on the driver's and front passenger's sun visors.
- To access the vanity mirror, pull the sun visor down and flip open the mirror cover. The vanity mirror indicator lights up. The indicator goes out when you close the mirror cover or fold up the sun visor.

! REMINDER

- Correct use of the sun visor improves driving safety and comfort.

Grab Handles

- Pull the grab handle down for use. The handle returns to its original position when released.

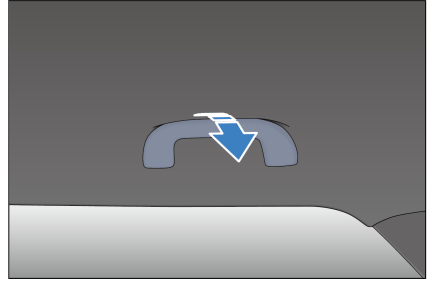

! CAUTION

- Do not hang any heavy objects from the grab handles.

USB Ports

- Front-Row USB Ports:

- ① USB charge port
- ② USB data transmission port




! CAUTION

- It is recommended to use a USB storage device with a partition format of FAT32 and a memory of 8~128G.

CAUTION

- Do not use special USB storage devices to avoid damaging the infotainment system or data in the USB device.

- USB Charge Port

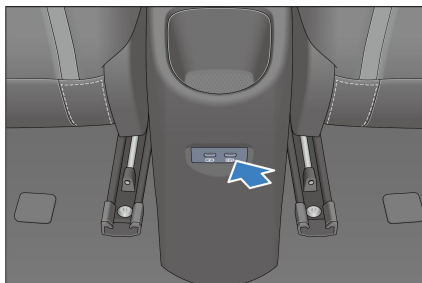

SD Card Slot*

- Above the centre console storage compartment



- The infotainment system supports TF card (also called Micro-SD card) ranging from 8 to 128GB with a Class 10 speed rating or higher.

CAUTION

- Insert the card horizontally.
- TF cards with a partition format other than FAT32 need to be formatted before using them for

CAUTION

- the first time, otherwise the system may not recognize them.
- Before removing the TF card, shut down the infotainment system, or video files may be damaged.

12V Auxiliary Power

- It is used for accessories with 12V DC working voltage and no more than 10A working current.
- The 12V auxiliary power is available only when the ignition has been switched on. Lift the cover to use it.



CAUTION


- To prevent fuses from blowing, the power consumption must not exceed 12V/120W of total vehicle load.
- To prevent draining the low-voltage battery, do not use the 12V auxiliary power supply for a long time when the drive motor is not running.
- When the 12V auxiliary power is not in use, close its cover. Do not insert any object other than a suitable plug into the 12V auxiliary power socket or let any liquid

! CAUTION

ingress the socket, as electrical failure may result.

Wireless Phone Charger*

- The charger charges phones without a cable connection through electromagnetic wave induction.
- On the infotainment touchscreen, slide down the shortcut menu to light up the wireless charger icon.
- After starting the vehicle, place a smartphone screen-up in the wireless charging area to activate the wireless charger.
- To disable the wireless charger: On the infotainment touchscreen, slide down shortcut menu and tap the wireless charging icon. The indicator turns off and the wireless charging function is disabled.

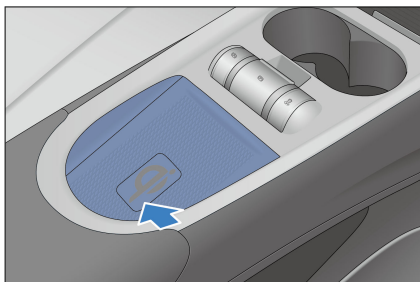

- The wireless charger only works with Qi-certified phones.
- To avoid burning bank cards or others with chips, do not place them between the charger area and the phone being charged.

! CAUTION

- Ensure your smart key is more than 10 in (25 cm) away from the charger area when the wireless charger system is working.
- To avoid wireless charger dysfunction or even accidents, do not place coins, metal keys, metal rings, or other articles containing metal in the wireless charger area together with the phone.
- To avoid damage to the charger area, do not place heavy objects on it. If the phone wireless charger system is faulty and does not work properly, it is recommended to contact a BYD authorised dealer or service provider.
- BYD will not assume any responsibility for any problems caused by improper use. If the product is disassembled or modified, the free warranty will be terminated.
- For safety reasons, do not leave an unattended phone being charged in the vehicle.
- For safety reasons, refrain from checking phone charging status while driving.
- If a metal item is found between the device and the charger rubber pad during charging, do not remove the metal item with bare hands to prevent burning.
- The centre of the phone coil must be aligned with the centre of wireless charger (indicated with text in the charger area), or charging may fail.
- Prevent any fluid from coming into contact with the charger area. The wireless charger will



CAUTION

malfunction if water enters the wireless charger via the gap around the rubber mat.

- Charging may stop at high temperatures, and will resume once the temperature drops. BYD makes no commitments for problems caused by external wireless charging coils. Please use with caution.



REMINDER

- Only one phone can be charged at a time.
- A phone case that is too thick may prevent charging.
- On bumpy roads, the wireless phone charging may intermittently stop and then resume.
- Try to ensure that the surface on which a mobile phone is placed is parallel to the charging module. If the phone moves from the wireless charger area and stops charging, move it back.
- If the phone cannot be charged properly, ensure that there are no foreign objects in the wireless charger area, or wait for the wireless charger area to cool down before trying again. If it is still impossible to charge the phone, contact a BYD authorised dealer or service provider.
- If the charger area remains occupied after the ignition is switched off, when the driver's door is opened, a tone sounds from the instrument cluster and a




REMINDER

warning text is displayed for five seconds.

Cargo Cover

- The cargo cover is used for privacy and direct sunlight protection.
- Snap the two grooved sides ① of the cargo cover into the lower C-pillar shield bosses on both sides, and then attach the cover drawstring ②.
- Do the reverse to remove the cover.

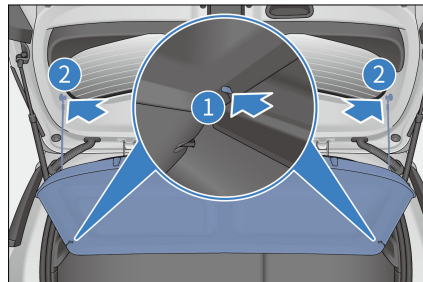


WARNING

- When installing the cargo cover, make sure that it is installed securely.
- Do not place any objects on the cargo cover.
- Never allow a child to climb onto the cargo cover, otherwise, damage to the cargo cover, or even injury/death to the child, can happen.

Hook

- The hook can be rotated through 180°.

- Only hang items weighing of less than 6.61 lb (3 kg) on the hook.

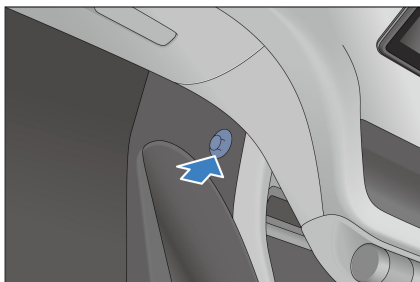


⚠ CAUTION

- Do not hang any heavy objects on the hook to avoid damage to the hook.

Window Breaker

A window breaker is installed near the storage compartment under the centre console cubby. As an auxiliary emergency evacuation tool, it is designed to break through a window glass for easier escape in an emergency such as fire or submersion.

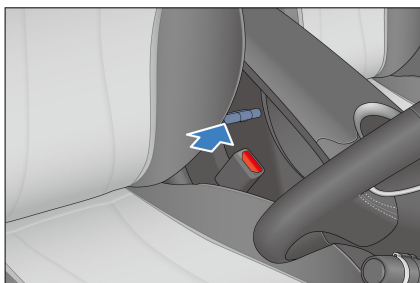

Breaking a Window

1. Decide where to smash.
 - Because there is a special shockproof layer on windscreens, choose a side window, which is easier to shatter.

- Choose the corner of the window to minimise the smashing time.

2. Smash the glass.

- Point the breaker to the corner of the window and press its bottom hard. If the glass is not damaged, keep pressing on the same spot until the glass is broken.

3. Remove the broken glass.


- The glass may not fall off completely after being smashed. Knock it by the breaker.
- If the glass is with a film, kick through it.

4. Escape from the vehicle.

- When a gap enough for escape is formed, exit the vehicle immediately and move to safety.

Using the Window Breaker

1. Remove the window breaker cap ①.
2. Align the top end ② of the window breaker with a corner of the side window.
3. Press on the end ③ of the window breaker.

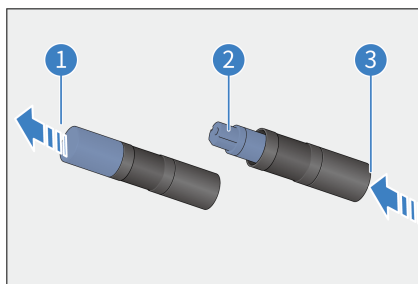

⚠ REMINDER

- The window breaker is for emergency use only. Do not



REMINDER

remove it frequently in other cases to avoid loss or bracket breaks.

- Be careful to avoid glass cuts while breaking the window.

06

MAINTENANCE

Maintenance Precautions.....	168
Regular Maintenance.....	170
Self-Maintenance.....	175

Maintenance Precautions

Maintenance Cycle and Items

Maintenance Plan

- The maintenance plan is designed to ensure stable driving, failure reduction, safe and economical driving.
- The maintenance schedule lists all the necessary items to keep the vehicle in optimum condition at all times. and are to be performed according to the specified time intervals.
- Hoses with any degradation or damage should be replaced immediately. Rubber hoses (for systems such as A/C, heating, and braking systems) must be checked by professional technicians according to the maintenance schedule.

Maintenance Plan Requirements

The vehicle must be maintained according to the regular maintenance schedule.

If the vehicle is operated primarily under one or more of the following special conditions, some maintenance items need to be performed more frequently.

- Road conditions
 - Muddy, sandy, or snowy roads
 - Dusty roads
- Driving conditions
 - Within 5 miles (8 km), repeated short distances are driven and the outside temperature is below freezing.
 - Long idling and/or long distance driving at low speed, for example, using the vehicle as a police car, taxis or using it for transporting goods.

Maintenance Schedule

Vehicle maintenance is performed based on the mileages or months, whichever comes first.

Maintenance Item	Interval
Brake friction block and brake discs	Check every 24 months or 20,000 miles (30,000 km).
Brake piping and hoses	Check every 24 months or 20,000 miles (30,000 km).
Steering wheel and tie rod	Check every 24 months or 20,000 miles (30,000 km).
Drive shaft boot	Check every 24 months or 20,000 miles (30,000 km).
Ball pin and dust boot	Check every 24 months or 20,000 miles (30,000 km).
Front and rear suspensions	Check every 24 months or 20,000 miles (30,000 km).
Tyre condition and pressure, including TPMS	Check every 24 months or 20,000 miles (30,000 km).

Maintenance Item	Interval
Tyre wear (check front and rear wheel alignment when uneven tyre wear is greater than 2 mm or 0.08 in)	Check during maintenance and rotate when necessary. In severe driving conditions, check more frequently and rotate when necessary.
EPS corrosion and foreign materials on or ablation of connectors, including wiring harness GND point	Check every 24 months or 20,000 miles (30,000 km).
Coolant level in expansion tank	Check every 24 months or 20,000 miles (30,000 km).
Brake fluid check	Check every 24 months or 20,000 miles (30,000 km).
Bumps or deformation of the high-voltage battery tray, impact bar, shield, and explosion-proof valve, and powertrain leaks	Check every 24 months or 20,000 miles (30,000 km).
A/C filters*	Check every 24 months or 20,000 miles (30,000 km). In severe driving conditions, check every six months and replace it if necessary.
Drive motor coolant	Replace the long-acting organic acid coolant every six years or 60,000 miles (90,000 km).
Brake fluid replacement	Check during maintenance and replace every 24 months or 20,000 miles (30,000 km).
Gear oil in the transmission	Replace at 24 months or 20,000 miles (30,000 km) for the first time, and every 24 months or 30,000 miles (48,000 km) afterwards.
Note: When checking Item 1, replace chassis parts in a timely manner if any abnormal damage is found.	

**CAUTION**

- Brake friction pads and discs need to be checked more frequently in severe weather conditions, such as extremely cold regions like Norway, Finland, and Iceland.

**REMINDER**

- To keep the high-voltage battery in optimal condition, please fully charge and discharge the vehicle

**REMINDER**

regularly, at least every six months or 44,739 miles (72,000 km), whichever comes first) for battery self-calibration. You can also contact a BYD authorised dealer or service provider for capacity testing and calibration.

Severe driving conditions refer to:

- Frequent driving in dusty areas or frequent exposure to salt-laden air

- Frequent driving on bumpy, puddled, or mountain roads
- Driving in cold weather
- Frequent or sudden braking
- Frequent use of a towed trailer
- Use as a taxi
- Driving in congested urban areas at temperatures above 90°F (32°C) for more than 50% of total travel time
- Driving at speeds over 75 mph (120 km/h) at temperatures above 86°F (30°C) for more than 50% of total travel time
- Frequent driving with maximum load

Regular Maintenance

Regular Maintenance

- Be sure to maintain the vehicle as per the maintenance schedule to allow it serve in the best working efficiency and reduce fault occurrence.
- Drivers can refer to the maintenance schedule for planned maintenance intervals, depending on the odometer reading or time interval, whichever comes first.
- For overdue maintenance items, the same time interval should be used for maintenance.
- It is recommended that the maintenance be performed in accordance with the standards and specifications of BYD Auto Industry Co., Ltd., and by a local BYD authorised dealer or service provider.
- The maintenance schedule lists the maintenance items and travel time or

distance based on the assumption that the vehicle is used as a normal means of transportation to carry passengers and goods that do not exceed the vehicle load limit.



CAUTION

- Please maintain the vehicle regularly according to the requirements in the Warranty and Maintenance Service Manual of BYD.

Vehicle Servicing

- Pay attention to vehicle performance, sound changes, and visual evidence that indicates service is required. Under any of the following circumstances, the vehicle may need to be adjusted or repaired. Therefore, you are recommended to send the vehicle to a BYD authorised dealer or service provider as soon as possible:
 - Motor start produces unusual noises.
 - Coolant remains overheated, is stagnated or leaks.
 - Motor jams and produces unexpected noise.
 - The motor runs with excessive vibration.
 - The motor fails to get started.
 - Electric assembly leaks oil.
 - Electric assembly emits odours.
 - Power declines significantly.
 - Water leaks from under the vehicle (A/C condensate is normal).
 - Tyre deflates; tyres make excessive noises at turns; tyre wear is uneven.
 - Vehicle leads to one side when driving straight on a flat surface.

- Suspension unit movement leads to unusual noises.
- Loss of braking effect; sponge feeling on the brake pedal or clutch pedal; pedal almost contacts the floor; vehicle leads to one side when braking.
- Motor coolant temperature remains high.
- Battery capacity decreases significantly.
- High battery temperature or overheat protection persists, or there is no power output.



REMINDER

- Do not continue driving a vehicle that has not been inspected, as this may result in serious vehicle damage and personal injuries.

Corrosion Prevention

The most common causes of vehicle corrosion are:

- The underbody of the vehicle is covered in salt, dust or moisture.
- The vehicle or some of its parts are exposed to high humidity and high temperature for a long time.
- The paint layer or underlayer is scratched by minor collision or by stones and gravel.

The following rules should be observed to prevent vehicle corrosion:

- Wash the vehicle frequently.
- If driving on saline roads in winter or living in coastal areas, wash the landing area of the vehicle at least once a month, and clean the chassis and hubcap with a

high-pressure water jet or steam to reduce corrosion. Wash the chassis thoroughly after winter.

- Check vehicle paint and trims.
 - Any chip or crack found on the paint must be repaired immediately to prevent corrosion. If fragments or cracks peel off from the metal surface, it is recommended to go to a BYD authorised dealer or service provider for repair.
- Check interior vehicle.
 - Moisture and dust buildup under the carpet can cause corrosion. Check the undersides of carpets frequently to make sure these areas are dry.
 - Special care should be taken when the vehicle is transporting chemicals, detergents, fertilisers, salt, and other substances. Such substances should be kept in appropriate containers for transportation. If spillage or leakage is found, clean immediately and keep dry.
- Use fenders.
 - Fenders protect vehicles in saline areas or on gravel roads. The bigger and closer to the ground the fender, the better.
- Park in a well-ventilated and dry area.

Paint Maintenance Tips

- Clean the vehicle in time.
- Do not perform secondary painting if there are no obvious scratches on the finish, so as to prevent mismatch or colour incompatibility.
- When the vehicle is not used for a long period, it should be parked in a garage or a well-ventilated place, and special body cover should be used

in winter. Choose a shady place for parking temporarily.

- Prevent strong impacts, knocks, or scratches on the paint. If the paint is scratched, dented or if it peels, it should be repaired in time, preferably by professional auto beauty provider.
- Do not touch the paint with a greasy hand or cloth. Do not place greasy tools or rub with organic solvents on the vehicle body so as to avoid chemical reactions.
- The vehicle must be waxed once a month or whenever water resistance performance of the vehicle degrades and be taken to an auto beauty provider for maintenance once every three months.
- High quality polish and wax must be used. If body finish is severely weathered, use a car cleaning polish in addition to the wax. Carefully follow the manufacturer's instructions and precautions. Chrome finish should be polished and waxed as well as painted finish.



CAUTION

- Remove the plastic bumper if the vehicle is to be repainted and parked in a high temperature painting and waxing workshop, as high temperatures will damage the bumper.

Exterior Cleaning

- The vehicle must be cleaned in time under the following circumstances, which can cause peeling of paint layer or corrosion of the vehicle body and parts:
 - Driving along the coast.
 - Driving on a road with antifreeze.

- Driving on roads covered with coal tar.
- Resin, bird droppings, or insect carcasses are stuck on the vehicle.
- Driving in areas with a large amount of smoke, soot, dust, iron filings, or chemicals.
- The vehicle is visibly soiled by dust or mud.
- After raining.

Manual Vehicle Washing

Before washing the vehicle, park it in the shade, and wait for the vehicle to cool down sufficiently.

1. Hose off loose dirt, including all mud or road salts at the bottom of the vehicle and on wheel pits.
2. Wash the vehicle with neutral agents, the mixing of which should be carried out according to the manufacturer's instructions. Soak a soft cloth with cleaning solution and gently wipe it down along the direction of the water flow. Do not wipe in a circular motion or horizontally.
3. Rinse well—Dried washing agent forms markings. After washing the vehicle in hot weather, rinse all parts properly.
4. Dry the vehicle with a clean soft towel to prevent stay water marks. In order to prevent scratching, do not rub or apply excessive force on the paint.



REMINDER

- Do not use any alkaline washing powder, soapy water, detergents, de-waxing detergents or volatile substance (gasoline, kerosene, or solvent).

! REMINDER

- When cleaning the lights, avoid using alcohol-based products (like alcohol and windscreen washer fluid), ketones (such as lacquer thinner and insect remover), or other chemical solvents (including gasoline, thinner, and carbon tetrachloride), as these can cause the light casings to crack.
- It is recommended that vehicles travelling in coastal or heavily polluted areas be washed once a day.
- When washing the vehicle, make sure that the high-pressure water jets are at a sufficient distance from the vehicle, and do not aim them directly at the sealing strips, to prevent high pressure from distorting and even damaging the strips and water from leaking into the vehicle.
- Do not use blades or gasoline to remove hard dirt from the vehicle body. The plastic wheel trim is easily damaged by organic matter. If any organic matter splashes on the vehicle trim, remove it with water and check whether the trim is damaged. Replace any seriously damaged plastic wheel trim in a timely manner. Otherwise, the trim may fall from the wheel during vehicle movement and cause an accident.
- Do not use abrasive cleaning agents to scrub the bumper or lights.
- Clean polished metal parts with carbon cleaner and wax them regularly for protection.
- Be careful when cleaning the chassis to avoid cutting hands.

Automatic Vehicle Washing

When choosing an automated vehicle wash service, be aware of certain types of brushes, unfiltered rinsing water, or machine-specific rinsing procedures that may scratch the paint and affect its gloss and durability, especially darker colours. Before washing the vehicle, it is best to consult the staff of the car wash service provider to understand which washing procedures are the safest for the paint finish.

Interior Cleaning

! REMINDER

- Prevent direct water splash onto the dashboard or floor when washing the vehicle, as these may cause electrical faults.
- Do not wash the vehicle's floor.

Carpet

- Clean carpets with a good foam detergent.
- Use a vacuum cleaner to remove as much dust as possible. Several types of foam detergents can be used. Some are in spray cans, and the others are powders or liquids, which produce foam when mixed with water. Clean the carpets with foam soaked sponge or a brush, scrubbing in a circular motion.
- Do not use plain water, and keep the carpets as dry as possible.

Seat Belts

- The seat belts can be cleaned with neutral soapy water or lukewarm water.

- Scrub the seat belts with a sponge or soft cloth. Check the seat belts for excessive wear, tear, or cut marks.

CAUTION

- Do not clean the seat belt with colourant or bleach. These substances may decrease the seat belt's strength.
- Do not use any seat belt that is not dry.

Doors and Windows

- Doors and windows can be cleaned with any ordinary detergent.
- Check the door brakes regularly. If a door brake lever is found with visible dust accumulation, wipe it with a wet soft cloth.

CAUTION

- When cleaning the inside of the rear windows, take care not to scratch or damage electric heating wires or junctions.

A/C Control Panel, Speakers, Dashboard, Control Panels, and Switches

- Clean the A/C panel, speakers, dashboard, control panels, and switches with a wet soft cloth.
- Wipe dust off gently with a clean soft cloth soaked in lukewarm water.

CAUTION

- Do not use organic substances (for example, solvents, kerosene, alcohol, and gasoline) or acid or alkali solutions. These chemicals can cause discolouration, staining, or flaking.

CAUTION

- Please confirm that the detergent or polishing agent to be used does not contain the above substances.
- If a new liquid washing agent is used, do not splash it onto the interior surface of the vehicle, because it may contain the above substances. If there is any spillage, immediately clean it thoroughly.

Leather

- Leather trimmings can be cleaned with a neutral detergent for woolen.
- Use a soft cloth with a neutral detergent solution to wipe off the dust, and then use a clean, wet cloth to wipe the remaining detergent thoroughly.
- If leather gets wet, wipe it with a clean soft cloth and air dry it in a cool, ventilated place.
- For any questions about vehicle cleaning, please consult a local BYD authorised dealer or service provider.

CAUTION

- If dirt cannot be cleaned off using a neutral detergent, clean it with a detergent that does not contain organic solvents.
- Do not clean leather with any organic material such as volatile oil, alcohol, gasoline, acid or alkali, as these will cause discolouration.
- Do not clean leather with a nylon brush or synthetic fiber cloth, as these may scratch the fine patterns on the leather surface.
- Mold may grow on dirty leather trimmings. Special care must be



CAUTION

taken to avoid oil stains and trimmings must always be kept clean.

- Prolonged exposure to sunlight will cause leather to harden or shrink, so the vehicle should be parked in a shady and cool place, especially in the summer.
- In hot weather, avoid placing vinyl or waxy items on the trimmings, as these may stick to leather in high temperatures.
- Improper cleaning of leather trimmings may cause discoloration or spots.



CAUTION

- Beware of short circuits, as some circuits and vehicle components carry high current or voltage.
- If coolant overflows, wipe it with a dry cloth or tissue to prevent damage to components or vehicle paint.
- If brake fluid overflows, rinse it with water to prevent damage to components or vehicle paint.
- When replacing wiper blades, do not allow the wipers to scratch the glass surface.
- Before closing the bonnet, check whether any tool or wipe cloth is left in the engine compartment.
- When working inside or under the vehicle, always wear goggles to protect your eyes against flying or falling objects or splashing liquid.
- As brake fluid may damage the skin or eyes, be careful when filling it. If your skin or eyes are exposed to brake fluid, immediately flush with clean water. Seek medical attention immediately if discomfort persists.

Self-Maintenance

Self-Maintenance

Self-Maintenance Precautions

- If maintenance is to be carried out by the owner, be sure to follow the correct steps specified in this section.
- Note that improper and incomplete maintenance will affect the good use of the vehicle.
- This section only lists instructions on simple maintenance items that can be done by the owner. However, there are many items that must be done by qualified technicians with special tools.
- Special care must be taken in maintaining vehicles to prevent accidental injuries. Make sure to obey the followings:

Checks

The following items should be checked according to usage or specified mileage:

- Coolant level - Expansion tank coolant level should be checked at each charge.
- Windscreen washer fluid - The residual amount of washer liquid in the tank should be checked monthly. When washer liquid is frequently used, the residual amount of liquid should be checked at each charge.

- Windscreen wiper - Check wiper conditions monthly. If the wiper does not work, check it for wear, cracking, or other damage.
- Brake fluid level - Check the level monthly.
- Brake pedal - Check whether the brake pedal is operating properly.
- EPB switch - Check whether the switch is functional.
- Low-voltage battery - Check battery conditions and check for terminal corrosion monthly.
- A/C system - Check the operation of A/C units weekly.
- Tyres - Check tyre pressure monthly. Check tread wear and whether there are foreign bodies embedded.
- Windscreen defrosters - Check the defroster vent monthly.
- Lights - Check the condition of headlights, position lights, tail lights, high mount brake light, turn signals, rear fog lights, brake lights and license plate light monthly.
- Doors - Check whether the boot lid and all other doors (including rear doors) can be opened freely and locked securely.
- Horn - Check whether the horn is functioning properly.



REMINDER

- Do not continue driving a vehicle that has not been inspected, as this may result in serious vehicle damage and personal injury.

- Headlights are aligned before vehicle delivery. If the vehicle carries heavy load frequently, headlights may need to be realigned. It is recommended to have the headlights aligned by a BYD authorised dealer or service provider.

Fogging of lights

- Combination lights, tail lights, and turn signals on the side mirrors may become foggy after heavy rain or cleaning. This is similar to condensation on the side window during rain. It does not mean any problem with your vehicle.
- The lights are a relatively enclosed and narrow space. The temperature is very high when they light up (the mask and reflector could be burned and deformed easily), so they need heat dissipation. There are heat dissipation holes on the lamp housing for convection. The greater the temperature difference is, the more active the convection is. During the convection, the moisture in the air inevitably enters a lamp. Factors such as exposure to sunlight, convection, and bulb heating can cause the moisture in the air to condense into fog or water beads easily on the lamp surface at low temperatures. This is called fogging of lights.



WARNING

- The headlight bulb becomes very hot when illuminated. Grease, sweat, or scratches on the surface of the bulb glass cause the bulb to overheat and break.
- Do not wax the light casings to prevent damage.

Lights

Headlight adjustment

REMINDER

- If fog presents inside the headlight and inside the turn signals on side mirrors, it may be due to high air humidity or significant temperature difference between the vehicle and its surroundings. In that case, turn on the headlight or turn signal while driving. The fog will evaporate after a short period of driving.
- If there is a noticeable amount of water inside the lights, it is recommended to drive the vehicle to a BYD authorised dealer or service provider for maintenance.

Glass Roof Maintenance*

- Wipe off dust or sand on the injection molding of the front glass and the outer sealing strips of the glass roof with a damp cloth to avoid scratches, which may reduce sealing performance.
- Clean the rails on both sides and the front channels frequently to avoid the accumulation of foreign materials like dust, sand, and leaves, and prevent such debris from blocking drainage holes, which could result in poor drainage of the glass roof.
- When washing the vehicle, make sure that the high-pressure water jet are at a sufficient distance from the vehicle and do not aim it directly at the sealing strips, or the high pressure could distort or damage the strips and let water leak into the vehicle.

Vehicle Storage

- If the vehicle needs to be parked for a long time (more than a month),


the following preparations should be made. Proper preparation helps prevent degradation and ensure easy use of the vehicle. If possible, park the vehicle indoors.

- Charge the vehicle on time.
- Thoroughly clean and dry the body surface.
- Clean the interior of the vehicle to ensure that carpets and mats are completely dry.
- Release the parking brake and set the gearshift lever in parking gear.
- Open one window slightly (if the vehicle is stored indoors).
- Disconnect the negative terminal of the low-voltage battery.
- Pad the front wiper arm with a folded towel or cloth to keep it out of contact with the windscreen.
- To reduce adhesion, apply silicone lubricant to all door seals and body wax to the painted surface where the door seals meet.
- Cover the vehicle body with a breathable covering made of a "porous material", such as cotton. Non-porous materials, such as plastic sheeting, can build up moisture and damage the paint.
- If possible, start the vehicle regularly (preferably once every month). If the vehicle has been parked for a year or more, go to a BYD authorised dealer or service provider for comprehensive maintenance.


Bonnet

Opening the Hood

1. Pull the handle on the right under the dashboard twice. The bonnet unlocks and opens slightly.

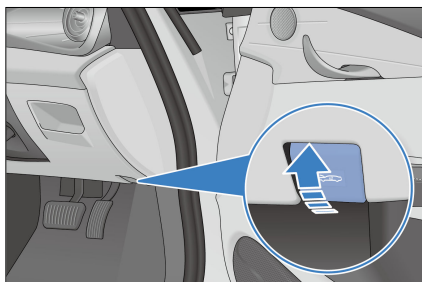

2. To open the bonnet: Lift up the bonnet and support it with the with a stay bar.

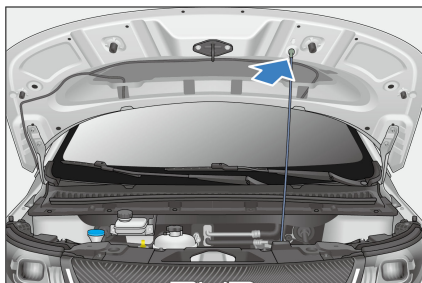

Closing the Bonnet

1. To close the bonnet: Remove the stay bar, lower the bonnet to about 30 centimeters above the front grille and release it, so that the fall locks it.
2. After closing the bonnet, check whether the latch is securely locked.



REMINDER

- Ensure that the bonnet is closed and locked firmly. Otherwise, the bonnet may suddenly open during driving, resulting in an accident.



REMINDER

- Do not force down the bonnet or release it from a high position.
- If the hood is not closed, do not press it with force, unlock the hood and close it again.

Coolant System

- It is required that the liquid level should be between the Maximum (MAX) and Minimum (MIN) marker lines of the expansion tank.
- The coolant must always be of the same specification as the original, without adding any mixture. Different brands and types of coolant should not be mixed.



- Refill coolant to the MAX line if the level is below the MIN line. Check the cooling system for leakage.



CAUTION

- Do not add any rust inhibitor or other additives to the cooling system for they may be incompatible with the coolant or the motor components.
- Before opening the reservoir cap, make sure that the motor, high-voltage electronic control

CAUTION

assembly, refrigerant reservoir and radiator are all cooled down.

- It is recommended to go to a BYD authorised dealer or service provider for adding the special type of coolant.


REMINDER

- Opening the coolant expansion tank when the motor has not yet fully cooled down may cause coolant to squirt out, resulting in severe burns.
- Coolant may fade in colour when exposed to high ultraviolet rays such as sunlight. If the bonnet needs to be opened in the process of vehicle use and maintenance, direct sunlight should be avoided. The performance parameters of coolant do not change after it fades, and normal use is not affected.

Braking System


- Check the level in the fluid tank monthly, and change the brake fluid according to the travel time and mileage specified in Maintenance Schedule.
- Be sure to use the brake fluid of the same specifications as the original brake fluid, and different types of brake fluid must not be mixed.
- It is required that the level in the fluid tank should be between "MAX" (maximum level) and "MIN" (minimum level) marks.

- If the level is below the MIN mark, check if the braking system leaks and the brake friction blocks are worn.

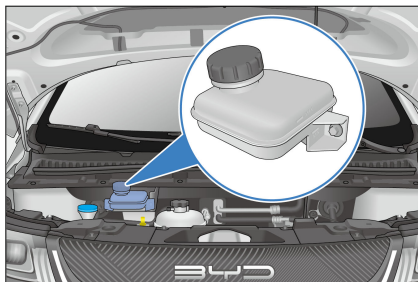

Windscreen Washer

- During normal use, check the liquid level of the windscreen washer reservoir at least monthly.
- If the windscreen washer is used frequently, the level of the washer reservoir should be checked more frequently.
- High quality windscreen washer fluid should be added to improve stain removal and prevent freezing in cold weather.

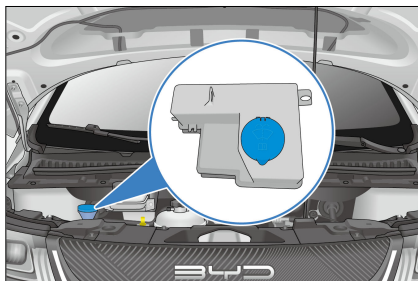

- When refilling the washer fluid, use a clean cloth dipped in the windscreen washer fluid to clean the windscreen wiper blade. This helps keep the wiper blade in good condition.

CAUTION

- Do not inject vinegar-water solution or acid solution into the windscreen washer fluid reservoir.
- It is recommended to use certified windscreen washing fluid having a pH value from 6.5 to 10.

A/C System

- The A/C system is a closed system, and any important maintenance work should be performed by professionals from a BYD authorised dealer or service provider.
- The following practices help ensure that the A/C system works effectively.
 - Check the radiator and A/C condenser regularly.
 - Remove leaves, insects, and dust from the front surface of the A/C system. These deposits hinder the air flow and reduce the cooling effect.
 - In cold months, turn the A/C on once a week for at least 10 minutes to circulate the lubricating oil in the refrigerant unit.
- If A/C cooling efficiency decreases, go to a BYD authorised dealer or service provider for maintenance.

CAUTION

- Whenever the A/C system is maintained, the maintenance station should use a refrigerant recycling system. The system can recycle refrigerant to avoid environmental pollution caused by directly discharging refrigerant.

Wiper Blades

The blade strip, made of synthetic rubber, is a vulnerable part. Various service environment of the vehicle and usage habits of drivers can damage the blades. Therefore, please observe the following to ensure the service life of blades and driving safety:

- Do not use a blade to remove ice from the windscreen surface. Use a customised ice scraper.
- Do not scrape the windscreen surface if it is dirty, greasy or waxy.
- Keep the windscreen surface clean. Do not scrape dust, sand, insects, or foreign bodies on the windscreen surface.
- Do not wax the windshield when washing the vehicle and maintaining the body paint, as the wax layer reflects light in poor light, consequently affecting the sight and driving safety. After washing the vehicle, rinse the blade with plain water, and use special windscreen wax cleaner to remove the wax layer on the windshield.
- To prevent excessive water pressure from damaging the blades, do not wash the blades directly with a water jet.

Maintenance Rules

- Clean windscreen and blade regularly (preferably once a week or once every two weeks).
- Wipe the wiper regularly (preferably once a day or once every two days). When using a blade to wipe the windscreen, keep the windscreen fully wet. (When there is no rain, the washer liquid must be sprayed in advance).

- Clean the windscreen with a special windscreen washer fluid.
- Promptly clean mud and insect carcasses stuck to the windscreen with a rag.
- When there are marks on the windscreen caused by gravel, maintenance must be carried out timely. (It is recommended that windscreen repair resin products should be used and the windscreen should be replaced if marks are too large or too many.)
- Replace the wiper blades regularly, preferably once every six months.
- When cleaning the windscreen, raise the wiper arm in advance. The specific operation method is as follows:
 1. Go to infotainment touchscreen →  → **Service** → **Overhaul** to enable Front wiper check. The wiper is then rotated down.
 2. Grasp the upper end of the wiper arm and carefully lift the wiper arm and blade assembly.

Tyres

- For safe driving, tyres must be made and sized to fit the vehicle, with good tread and standard tyre pressure.



WARNING

- Using tyres with excessive wear or insufficient/excessive pressure can result in accidents, severe injury, or death.
- Please follow all instructions in this manual regarding tyre inflation and maintenance.

Tyre Inflation

- Keep tyres properly inflated to provide the best combination of maneuverability, tread life, and driving comfort.
- Under-inflated tyres can cause uneven tyre wear, affect steerability and energy consumption, and are prone to leakage due to overheating.
- Over-inflated tyres reduce riding comfort and are prone to damage from uneven roads. In severe cases, the risk of tyre bursting poses severe threats to the safety of the entire vehicle. Over-inflation will also cause uneven wear and tear of tyres, affecting tyre service life.
- When tyres are cold, you can decide whether to replenish tyre pressure according to the tyre pressure values displayed on the instrument cluster.
- Measure tyre pressure while tyres are at ambient temperatures, which means that this should be done at least three hours after vehicle travel. If driving before the measurement is absolutely necessary, tyres can still be considered at ambient temperatures as long as the travelled distance is within 1 mile (1.6 km).
- It is normal that tyre pressure reading measured while tyres are hot (after travel of several kilometers) is 0.3–0.4 bar (30–40 kPa/4.35–5.8 psi) higher than when tyres are cold. In that case, do not deflate tyres in order to achieve the specified cold tyre pressure reading; otherwise, the tyre pressure will be insufficient.



REMINDER

- The recommended cold tyre pressure is indicated on the label affixed to the driver's door frame.

! REMINDER

- Tubeless tyres have a self-sealing function when they are punctured. However, as the leak is usually very slow, as soon as the tyre begins to depressurise, carefully look for the leak location.

Tyre Inspection

- Whenever checking tyre inflation, check tyres for damage, foreign body piercing and wear. Replace the tyre if
 - Bumps, or tread or side damage are found. Tyres must be replaced if any of the cases happens.
 - There are cracks on the side of the tyre. Tyre fabric or cord can be seen.
 - Tyre treads are severely worn.
- Tyre treads are cast with wear bars. When the tread is even with the wear bar, its thickness is less than 0.06 in (1.6 mm). The adhesion of tyres worn to this extent is very small on wet roads.
- Tyres with exposed wear bars are experiencing serious performance loss and therefore must be replaced.



Maintenance

- In addition to proper inflation, proper wheel alignment also helps reduce tread wear.
- If uneven tyre wear is found, go to a BYD authorised dealer or service provider and check the wheel alignment.
- Although the vehicle has been balanced in the factory, it needs to be re-balanced after running for a period of time.
- If there is some kind of continuous vibration at high vehicle speeds (above 50 mph, or 80 km/h), but not at low vehicle speeds, go to a BYD authorised dealer or service provider for tyre checks.
- If a tyre has been repaired, be sure to re-balance it.
- After installing a new tyre or replacing a new wheel, always perform tyre balancing.

! CAUTION

- Improper wheel balancers can become loose and fall off, which damages the vehicle or surrounding objects during vehicle travel.
- Improper wheel balancers damage the aluminium rims of the vehicle. Therefore, it is recommended to use original wheel balancers.

Tyre Rotation

- In order to make tyres wear the same and prolong their service life, it is recommended to check the wheel tread wear inside and outside regularly (at intervals not exceeding 10,000 km)

and rotate tyres and conduct four-wheel alignment if necessary.


- Do not rotate tyres when a spare tyre* is used for the vehicle.
- After tyre replacement, go to a BYD authorised dealer or service provider for tyre pressure matching.

Directional tyres and wheels

- When purchasing replacement tyres, you may find that some tyres are "directional", which can only be rotated in one direction. If directional tyres are used, only the front and rear wheels can be swapped when rotating tyres.
- Tyre rotation for four-wheel drive vehicles is as shown:

① Non-directional tyres and wheels.

② Directional tyres and wheels.

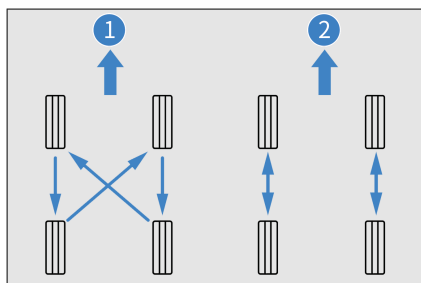

WARNING

- Since rear-wheel drive vehicles have wider rear tyres, wheels can only be switched from side to side. If directional tyres are used on rear-wheel drive vehicles, tyre rotation is not accessible.

Replacing Tyres and Wheels

- Original tyres maximise performance, while providing the best combination

of maneuverability, driving comfort and service life.

- It is recommended to go to a BYD authorised dealer or service provider for replacement of original tyres.
- Replacement of tyres with different sizes, road ranges, rated speeds and maximum cold pressures (marked on the tyre side) or mixed use of radial tyres and diagonal tyres can reduce braking ability, driving force (ground adhesion) and steering accuracy.
- Unsuitable tyres affect the maneuverability and stability of the vehicle, and may lead to accidents.
- Do not replace only one tyre, otherwise it will seriously affect the maneuverability of the vehicle.
- ABS works by comparing wheel speed. When replacing a tyre, use a tyre of the same size as the original tyre. The size and structure of the tyre affect wheel speed and may lead to uncoordinated system operation.
- If the wheel needs to be replaced, ensure that the specifications of the new wheel match those of the original wheel. New wheels are available for purchase at BYD authorised dealer or service provider. Please consult a BYD authorised dealer or service provider before replacing the wheels.

WARNING

- Please observe the following precautions to ensure proper vehicle maneuverability and control.
- Do not mix radial tyres, bias belted tyres, or diagonal ply tyres on the vehicle.
- Do not use tyres with dimensions other than


WARNING

those recommended by the manufacturer.

Fuses

All vehicle circuits are provided with fuses to prevent short circuit or overloading. These fuses are mounted in the under-bonnet power distribution box (PDB) and dashboard PDBs, respectively, which include fuse labels showing the correspondence of fuses with electrical components.

- The fuses under the bonnet are located at the left rear part in the engine compartment. To open it, remove the trim first, and press the latch.

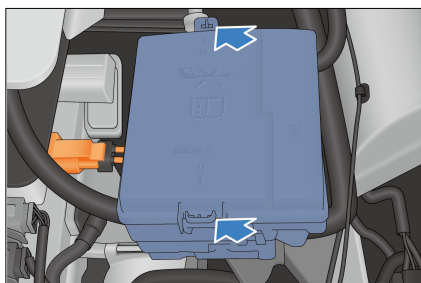

- The dashboard fuse under the driver's side is located on the right side of the dashboard. Take apart the lower body of the dashboard to check the fuse.
- Replacement of blown fuses with ones of higher amperage can significantly increase the likelihood of damage to the electrical system.
- If there is no spare fuse of the same amperage, use a fuse with lower amperage instead.



REMINDER

- Do not use fuses with amperage higher than the rated ampere value or any other solution to replace the fuses, as this can cause serious damage or even a fire.
- If a fuse blows, it is recommended to check or replace the fuse at a BYD authorised dealer or service provider.

07

WHEN FAULTS OCCUR

When Faults Occur.....186

When Faults Occur

Reflective Vest

The reflective vest is in the tool kit. In case of emergency, always wear the reflective vest properly before you check for faults or handle accidents to ensure your safety.

If Smart Key Battery Is Exhausted

If the smart key indicator does not flash and the vehicle cannot be started using the start function, the smart key battery may be exhausted. It is recommended to contact a BYD authorised dealer or service provider for battery change as soon as possible. In this case, you may start the vehicle in no power mode.




CAUTION

- Do not expose the smart key to high temperatures.
- Do not hit or slam the key with hard objects.
- Check for nearby radio stations, transformer substations or airport radio transmitters that interfere with the normal operation of electronic smart keys.
- After locking the vehicle and arming its anti-theft alarm system, keep the key away from the vehicle; otherwise the automatic card finding of the vehicle will consume the low-voltage battery and the smart key.

1. Use the mechanical key to unlock the vehicle.

2. Put the smart key on the no-power sign on the auxiliary dashboard.
3. Press the START/STOP button while pressing the brake pedal to start the vehicle normally.

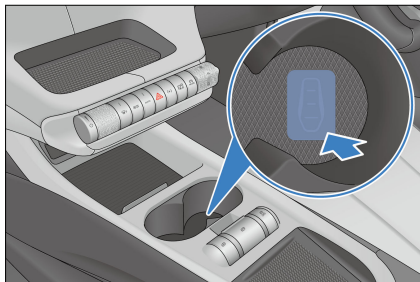

Emergency Shutdown System

- The emergency shutdown system is activated and the high-voltage system is automatically shut down when the following conditions are met:
 - The airbags do not deploy after a frontal collision.
 - There is a rear collision.
 - The vehicle system is faulty.
- The OK indicator goes off if any of the above situations occurs.
- Activating the emergency shutdown system in the noted types of collision minimises the risk of injuries or accidents.
- The vehicle system cannot be switched into the OK status once the emergency shutdown system is activated. In that case, it is recommended to contact a BYD authorised dealer or service provider for help. Even if the ignition switch is set to the OK position, the system will be turned off immediately. Contact a BYD authorised dealer or service provider as soon as possible.

Vehicle Fire Rescue

In case of fire, stop the vehicle and proceed as follows according to the actual situation:

1. Switch the ignition off, and leave the vehicle.
2. On the precondition that personal safety is ensured, if the fire is small and slow, use a dry powder fire extinguisher to put it out fire, and call for help immediately.
3. If the fire is large and growing quickly, stay away from the vehicle and call the fire brigade, informing them that the vehicle is equipped with a high-voltage battery pack, and wait for rescue.



CAUTION

- Wear insulated gloves during vehicle disassembly. Use fire extinguishers of designated type. Water or incorrect fire extinguishers may cause electric shock.
- In the event of other special conditions that cause flying projectiles (such as interior trims and glass), stay away from the vehicle and promptly ask a BYD authorised dealer or service provider to come to the site for handling.

Collision Rescue

If a Collision Occurs

In case of collision, operate the vehicle as follows according to the actual situation:

1. Switch the ignition off, and disconnect the low-voltage battery if conditions permit.

2. Call immediately a BYD authorised dealer or service provider for rescue.
3. Carry out a simple inspection, if conditions permit: Check whether any edge of the high-voltage battery tray is cracked and whether any obvious liquid flows out.
 - Damage to high-voltage components is not identifiable in all cases. Do not handle damaged components or touch them with jewellery or other metal objects.
 - If skin comes in contact with leaked fluid, wash it immediately with plenty of water for 10-15 minutes. If there is still any discomfort, apply 2.5% calcium gluconate ointment, or soak in 2% to 2.5% calcium gluconate solution. If the condition does not get better or discomfort persists, seek medical help immediately.
 - Do not touch the orange high-voltage cables or other high-voltage components. Only authorised repair personnel is allowed to work on high-voltage systems.
 - Do not damage, modify, disassemble, or disconnect the orange high-voltage cables from the high-voltage grid.
 - Inform the firemen and rescue personnel that the vehicle is equipped with a high-voltage battery pack.



WARNING

- Do not touch any spilled liquid, and stay away from a leaking vehicle or high-voltage battery.
- Do not dispose of the leaked fluid into the water or soil or other environment.

WARNING

- The vehicle system operates with high-voltage DC power. It generates a lot of heat before and after vehicle start-up and when the vehicle is powered off. Watch out for high pressures and high temperatures.
- Do not disassemble, move, or alter high-voltage battery components and connecting cables as their connectors can cause serious burns or electric shock and may result in personal injury or death. The orange cables are part of high-voltage wiring harness. Users must not repair the vehicle's high-voltage system by themselves. If any repair is required, it is recommended to go to a BYD authorised dealer or service provider.
- The remote control key and high-voltage components of the vehicle may affect and harm people carrying medical devices.

If the High-Voltage Battery Leaks

After a collision, if there is battery leakage, an acrid smell inside the vehicle, visible acid flow outside the vehicle, or any smoke with the battery pack:

1. Switch the ignition off, and disconnect the low-voltage battery if conditions permit.
2. Call a BYD authorised dealer or service provider and the fire brigade, informing them that the vehicle is equipped with a high-voltage battery pack, and wait for rescue.

If the Vehicle Needs Towing


If the vehicle needs towing, it is recommended to contact a BYD authorised dealer or service provider, a professional towing service, or the organisation you joined for roadside assistance.

WARNING

- The vehicle must not be towed by other vehicles using only ropes or chains.

Common towing methods include:

- Flatbed device
 - If the vehicle fails and needs towing, a flatbed is recommended. When moving a vehicle on a flat trailer, keep all wheels off the ground. Towing the vehicle on front or rear wheels alone may damage high-voltage components.

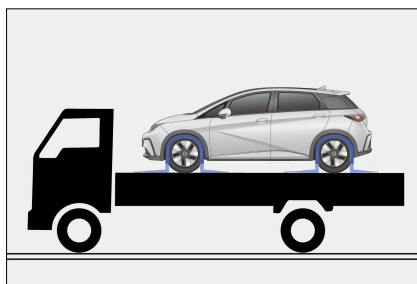

CAUTION

- When moving a vehicle on a flat trailer, make sure that the vehicle being moved is properly secured to prevent it from sliding back.
- It is recommended to use professional tie-down straps and tensioners, and employ the

CAUTION

overthe-wheel method to secure the vehicle.

- When fixing the vehicle, do not pass the fixtures such as straps and ropes through the wheels or tie them on the chassis, suspension and other body parts to prevent damaging the vehicle.
- When using a flatbed device, make sure the vehicle is securely fastened to prevent it from sliding.

Tow Eye

The tow eye opening is at the upper right corner of the front grille, as shown.

1. Press to open the tow eye cover.
2. Install the tow eye in the tow eye opening.



- If the vehicle needs rescue, contact a professional rescue or the customer service number.
- In emergency situations where the vehicle needs to be towed for rescue, follow the precautions below. If these precautions conflict with applicable regulations, always adhere to applicable regulations to prevent vehicle damage or personal injury.
- The towing vehicle must be in good conditions and the towed vehicle in

Neutral; the tow speed must be no more than 3 mph (5 km/h).

- Never use jerking actions to pull the vehicle.
- The towed vehicle must not carry any person except for the driver.
- Both towing and towed vehicles must have their hazard warning lights on.
- To avoid damages to the vehicle, only the in-vehicle tow eye can be used.
- The distance between the towing and towed vehicles must be more than 4.4 yd (4 m) but less than 10.9 yd (10 m).
- The width and weight of the towed vehicle must not be greater than those of the towing vehicle.
- When the vehicle is being towed, ensure its surroundings are unobstructed and have enough space and no person is close to the towing device.
- When freeing the vehicle, control to make it travel in the direction of tow force. Dragging the vehicle from the side or vertically is prohibited.
- The towed vehicle must be controlled by a driver inside the cabin, with the steering and braking systems in normal conditions.

WARNING

- Never rescue a stuck or high-centred vehicle with tow eyes. Call a professional rescue or the customer service number.
- If the steering or braking system of the towed vehicle fails, contact a professional rescue or call the customer service number. Do not tow the vehicle directly.

If a Tyre Goes Flat

1. In case of a flat tyre, slow down, keep straight and drive off the busy road to a safe place.
2. Park on solid, flat ground and avoid motorway forks.
3. Engage the EPB and press the "P" button.
4. Power off the vehicle and turn on the hazard warning light.



5. Be sure to have all passengers get off the vehicle and ask them to go to a safe place away from crowded traffic.
6. To prevent slipping, secure the vehicle by wedging the tyre diagonally against the flat tyre.




CAUTION

- Do not continue driving with a flat tyre. Driving even a short distance can cause too severe damage for the tyre to be repaired.

In-Vehicle Tools

These include: a warning triangle, a reflective vest, a lug nut cap removal clamp, a tyre repair kit, a tow eye, and an anti-theft lug nut socket. The reflective vest is in passenger's glove box, and other tools are stored in the tool box under the boot cover flap.

- ① Warning triangle
- ② Lug nut cover removal clamp
- ③ Tyre repair kit
- ④ Tow eye
- ⑤ Reflective vest
- ⑥ Anti-theft lug nut socket

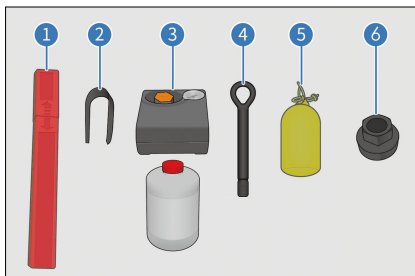

Placing the warning triangle



REMINDER

- When parking for repair, place the warning triangle correctly as per local regulations. Ensure the red side is facing oncoming traffic to warn other drivers.
- After using the warning triangle, put it back for future use.

How to use the warning triangle:

1. Take the warning triangle out of its box.
2. Attach the ends to form a triangle.
3. Mount the supports as shown.



Using Tyre Repair Kit

- The tyre repair kit is used to seal small cuts, especially cuts in tread pattern. It is just an emergency solution for you to drive to the nearest service centre, and only for short emergency stretches, even if the tyre is not deflated.

WARNING

- The tyre repair kit is only suitable for minor damages of tyres. If a wheel is damaged, do not use the tyre repair kit.
- Tyre sealant is highly flammable and harmful to health. Take necessary precautions to prevent fire and avoid contact with skin, eyes, and clothing; keep away from children; and do not inhale its vapour.

In case of contact with tyre sealant:

- If tyre sealant comes into contact with the skin or gets into the eyes, thoroughly flush the affected body part immediately with plenty of clean water.
- Change contaminated clothing immediately.
- In case of an allergic reaction, seek medical attention immediately.

WARNING


- If tyre sealant is ingested by accident, rinse mouth thoroughly and drink plenty of water immediately. Do not induce vomiting, but seek medical attention immediately.

Using the tyre repair kit


- Refer to the labels on the inflator and tyre sealant for usage of the kit.
- If the inflator needs to be connected to a power source, plug the inflator into the vehicle's 12V socket, start the vehicle, and turn on the inflator. The tyre sealant is then filled through the inflator hose into the tyre along with air.

REMINDER

- Make sure the inflator switch is off when you plugging the power supply into the 12V socket in the vehicle.
- Do not use the inflator continuously for more than 10 minutes at a time.
- Observe the tyre pressure reading on the inflator.
 - If the tyre pressure does not reach 1.8 bar (180 kPa/26.11 psi) within 10 minutes (red area shown in the illustration), turn off the inflator and contact a BYD authorised dealer or service provider.

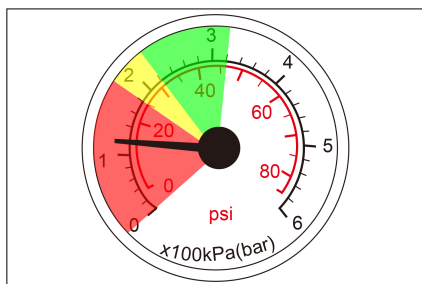

- If the tyre pressure reaches between 1.8 bar (180 kPa/26.11 psi) and 3.2 bar (320 kPa/46.41 psi) (green and yellow areas shown in the illustration), remove the kit as soon as possible and drive at a speed below 80 km/h within one minute, with the furthest driving distance not exceeding 10 km, so that the tyre sealant is evenly distributed within the tyre.

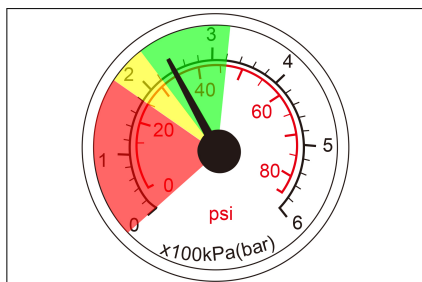

- Stop to check the repaired tyre and the tyre pressure reading on the inflator.
- If the tyre pressure is greater than 2.2 bar (220 kPa/31.91 psi), drive to the nearest service centre at a speed below 80 km/h.
- If the tyre pressure is between 1.3 bar (130 kPa/18.85 psi) and 2.2 bar (220 kPa/31.91 psi), repeat the process to fill the tyre sealant into the tyre and observe the tyre pressure gauge reading on the inflator.

- If the tyre pressure does not reach 1.3 bar (130 kPa/18.85 psi), contact a BYD authorised dealer or service provider.

! REMINDER

- Using tyre repair kit on damaged tyres is only an emergency solution. Please change the tyres at a professional repair centre as soon as possible. It is recommended that you contact a BYD authorised dealer or service provider and inform the maintenance technician that tyre sealant has been used.
- Avoid hard acceleration and high-speed turns.
- Do not exceed the 50 mph (80 km/h) speed limit and replace flat tyres as soon as possible. Do not drive further if the vehicle experiences strong vibration, unstable performance, or noise.
- When the tyre sealant is about to expire (see the label on the canister for exact date), replace it with a new one.
- After repairing a tyre with the tyre repair device, it is recommended that you purchase new tyre sealant and inflation hoses at a BYD authorised dealer or service provider.


Removing the Anti-theft Wheel Nut

Each wheel is fitted with an anti-theft wheel nut, and you need a special adapter in the tool box to remove it.

How to remove:

1. Take out the lug nut cover removal clamp, and remove the cap.
2. Take out the adapter①, and slide it all the way onto the anti-theft wheel

nut②. After loosening the adapter, the anti-theft wheel nut can be removed.

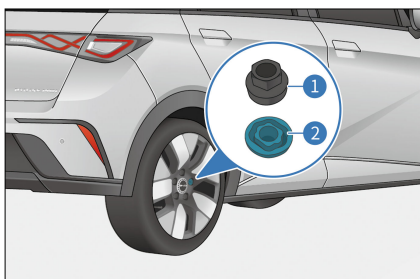

08

SPECIFICATIONS

Vehicle Data.....	196
Other Information.....	201
Declarations of Conformity.....	204

Vehicle Data

Vehicle Data

Dimensions

Item	Parameter
Length	169 in
	4,290 mm
Width (excluding side mirrors)	70 in
	1,770 mm
Height	62 in
	1,570 mm
Wheelbase	106 in
	2,700 mm
Front track	60 in
	1,530 mm
Rear track	60 in
	1,530 mm
Front overhang	33 in
	830 mm
Rear overhang	30 in
	760 mm
Approach angle	16°
Departure angle	23°

Vehicle mass

Item	Parameter		
Product Version	A	B	C
Curb weight	3,655 lb	3,457 lb	3,320 lb
	1,658 kg	1,568 kg	1,506 kg

Item	Parameter		
Product Version	A	B	C
Front axle load	1,971 lb	1,936 lb	1,885 lb
	894 kg	879 kg	855 kg
Rear axle load	1,684 lb	1,519 lb	1,435 lb
	764 kg	689 kg	651 kg
Maximum allowable total mass	4,559 lb	4,361 lb	4,224 lb
	2,068 kg	1,978 kg	1,916 kg
Front axle load at maximum allowable total mass	2,251 lb	2,189 lb	2,154 lb
	1,021 kg	993 kg	977 kg
Rear axle load at maximum allowable total mass	2,308 lb	2,169 lb	2,070 lb
	1,047 kg	984 kg	939 kg
Number of occupants		5 persons	

Drive motor

Item	Parameter		
Product Version	A	B	C
Model	TZ200XSQ	TZ200XSW	TZ180XSF
Type	Permanent magnet synchronous motor		
Drive type	Front-wheel drive		
Rated power/speed/torque	65/4,433/103 (kW/rpm/ft.lbf)		35/4,775/52 (kW/rpm/ft.lbf)
	65/4,433/140 (kW/rpm/Nm)		35/4,775/70 (kW/rpm/Nm)
Peak power/speed/torque	150/16,000/229 (kW/rpm/ft.lbf)	130/16,000/192 (kW/rpm/ft.lbf)	70/15,000/133 (kW/rpm/ft.lbf)
	150/16,000/310 (kW/rpm/Nm)	130/16,000/260 (kW/rpm/Nm)	70/15,000/180 (kW/rpm/Nm)

Vehicle power performance and economic efficiency

Item	Parameter			
Product Version	A	B	C	D
Power consumption per 100 km under comprehensive working conditions	15.9 kW.h/100 km (WLTC)	15.8 kW.h/100 km (WLTC)	15.4 kW.h/100 km (WLTC)	15.2 kW.h/100 km (WLTC)
Maximum design speed	99 mph		93 mph	
	160 km/h		150 km/h	
Maximum gradeability	30%			

Wheels and tyres

Item	Parameter	
Product Version	A	B
Tyre specification	205/50 R17	195/60 R16
Tyre pressure	2.5 bar	
	250 kPa	
	36.26 bar	
Wheel dynamic balance requirement	≤ 0.022 lb	
	≤ 10 g	

Wheel alignment values (at curb weight)

Item	Parameter	
Product Version	A	B
Front camber (°)	-0.82±0.75	
Total front toe-in (°)	0.12±0.16	
Kingpin inclination angle (°)	11.3±0.75	
Kingpin caster angle (°)	3.16±0.75	

Item	Parameter	
Product Version	A	B
Rear camber (°)	-1.07±0.5 (four-bar linkage)	-1.38±0.5 (twist beam)
Total rear toe-in (°)	0.14±0.24 (four-bar linkage)	0.1±0.24 (twist beam)

Braking system

Item	Parameter	
Product Version	A	B
Free stroke of brake pedal	0.039~0.197 in	
	1-5 mm	
Front brake disc thickness	0.906~0.984 in	
	23~25 mm	
Standard thickness of rear brake disc	0.472 in (four-bar linkage)	0.433 in (twist beam)
	12 mm (four-bar linkage)	11 mm (twist beam)
Minimum thickness of rear brake disc	0.394 in (four-bar linkage)	0.354 in (twist beam)
	10 mm (four-bar linkage)	9 mm (twist beam)
Standard thickness of front friction plate	0.315 in	
	8 mm	
Minimum thickness of front friction plate	0.098 in	
	2.5 mm	
Standard thickness of rear friction plate	0.256 in	
	6.5 mm	
Minimum thickness of rear friction plate	0.079 in	
	2 mm	

High-voltage battery

Item	Parameter	
Product Version	A	B
Type	Lithium iron phosphate battery	

Item	Parameter	
Product Version	A	B
Rated capacity of high-voltage battery	150 Ah	135 Ah

Seats

Item	Parameter	
Front seats	Fore and aft positions (cushion depth measured)	2.76 in (70 mm) forward from the farthest slide rail stroke
	Seatback angle (cushion depth measured)	25°
	Normal service conditions of seatbacks	Design position: 24° forward and 50° backward; slide rail: 7.48 in (190 mm) forward and 2.76 in (70 mm) backward; slide rail inclination: 4.5°
Rear Seats	Fore and aft positions (cushion depth measured)	No slide rail
	Seatback angle (cushion depth measured)	27°
	Normal service conditions of seatbacks	27°, fixed and non-adjustable

Recommended oil/fluid types and amount


Item	Parameter	
Product Version	A	B
Transmission oil	BOT 384/ EV2.0	
Transmission oil amount	0.132±0.011 ukgal	0.099±0.011 ukgal
	600±50 mL	450±50 mL
Brake Fluid	HZY6	
Brake fluid amount	0.242±0.022 ukgal	
	1,100±100 mL	

Item	Parameter	
Product Version	A	B
Motor coolant type	Glycol organic acid coolant: Antifreeze freezing point: -40°F (-40°C)	
Motor coolant amount	0.726±0.044 ukgal	0.682±0.044 ukgal
	3.3±0.2 L	3.1±0.2 L

CAUTION

- The recommended oil/fluid types have been tested and approved by BYD. Using other types may compromise vehicle performance and could cause malfunctions or damage to components.

- ⑤ On the rear right wheel housing
- ⑥ On the right part of the tailgate inner panel
- ⑦ On the inner side of right rear door sill
- ⑧ On the lower right corner of front right door's inner panel

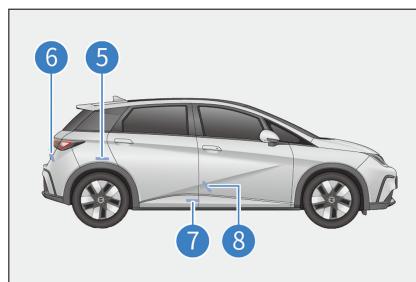


Other Information

Vehicle Identification

Vehicle Identification Number (VIN)


Positions of VIN stickers:

- ① On the front of the motor
- ② On the left part of the front windscreen cross sill
- ③ On the right of the bonnet latch
- ④ On the right part of the upper surface of the front bumper beam

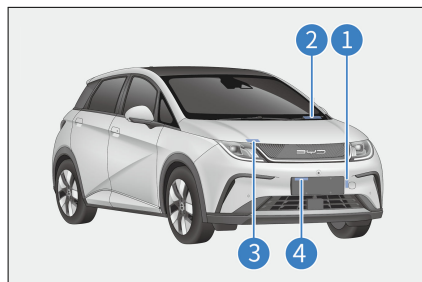


Position of VIN engravement:

VIN is engraved on the beam underneath the driver seat. By connecting the vehicle diagnostic system, it can also be found in the upper right corner of the screen for the corresponding model. For details, refer to the operation manual of the system.

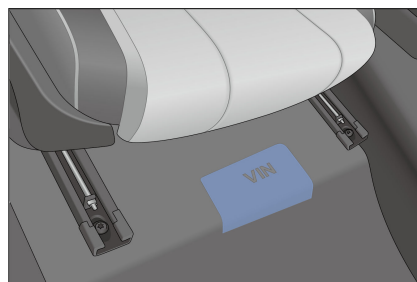


Vehicle Nameplate

The vehicle nameplate is attached on the lower part of the right B-pillar.

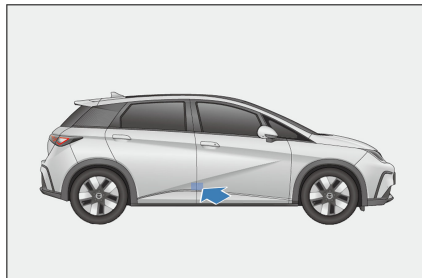


Model and Serial Number of Drive Motor

① Engraved on the underside of drive motor housing.

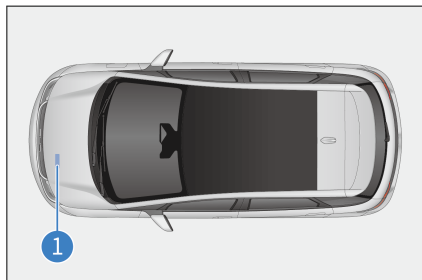

Warning Labels

- ① A/C system and cooling fan label
- ② Battery position label

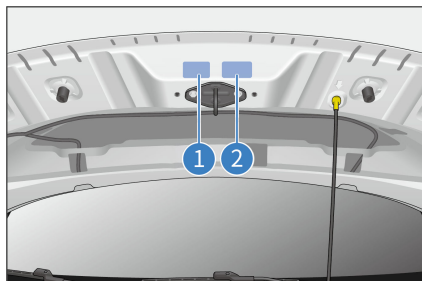

Side airbag warning labels are attached below the left and right B-pillar lock rings.




The airbag warning label is printed on the front passenger's sun visor.



The tyre pressure label is attached below the lock ring on the driver's side B-pillar.



The label showing charging connector removal precautions is attached to the inner surface of the AC charge port door.

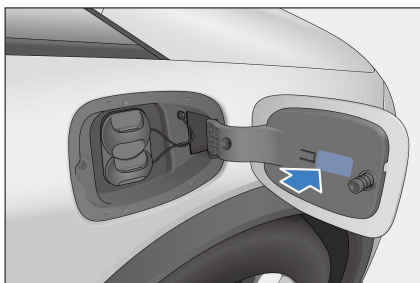

The child protection lock label is engraved on the metal sheet surface on the left and right rear doors.



Transponder Mounting Position

The transponder mounting position is located in the upper left of the front windscreen.



CAUTION

- Do not overlap the sticker transponder with the glass frame or other objects.

Declarations of Conformity

Smart Key Certification



Uzbekistan
Model: D0-92



EU countries
Model: D0-92



Brazil
Model: D0-92
This equipment is not entitled to protection against harmful interference and may not cause interference to duly authorised systems.

FCC ID: 2A5DH-DAEA-92

The United States
Model: D0-315



R 214-118832

Japan
Model: D0-315



South Korea
Model: D0-92

Radio Frequency



The vehicle has different types of radio equipment. The manufacturers of the radio equipment declare that the RF Modules are in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at <https://cn-prod.byd.com/eu/eu-doc>.

Component Name	Frequency	Maximum Power
Interior detection antenna	125 KHz	0.0129 mW @ 1 m
Smart Key	434 MHz	0.000002 mW @ 1 m
Left body control module	434 MHz	/
Tyre pressure sensor	433.62 MHz	3.8 * E-5m W @ 1 m
Tyre pressure monitoring module	433.62 MHz	/
Wireless charger module	127±30 KHz	/
Child presence detection radar	60 GHz	2.5 W
Keyless entry (NFC)	13.56 MHz	2.5 W
DAB receiver	174–240 MHz	/
Infotainment system CPU	GSM900: 880–915 MHz	33 dBm (conducted)
	DCS1800: 1,710–1,785 MHz	30.38 dBm (conducted)
	WCDMA Band 1: 1,920–1,980 MHz	24.7 dBm (conducted)
	WCDMA Band 8: 880–915 MHz	24.78 dBm (conducted)
	FDD LTE Band 1: 1,920–1,980 MHz	22.83 dBm (conducted)
	FDD LTE Band 3: 1,710–1,785 MHz	23.51 dBm (conducted)
	FDD LTE Band 7: 2,500–2,570 MHz	23.99 dBm (conducted)
	FDD LTE Band 8: 880–915 MHz	23.21 dBm (conducted)
	FDD LTE Band 20: 832 - 862 MHz	23.21 dBm (conducted)
	FDD LTE Band 28: 703–803 MHz	23.6 dBm (conducted)
	FDD LTE Band 38: 2,570–2,620 MHz	23.69 dBm (conducted)
	FDD LTE Band40: 2300 - 2400 MHz	24.87 dBm (conducted)
	Bluetooth: 2402 - 2480 MHz	10 dBm (EIRP)

Component Name	Frequency	Maximum Power
E-call	E-GSM900/GPRS 900/EGPRS900UL/DL: 880/925 MHz–915/960 MHz	2.0417 W (conducted)
	GSM1800/GPRS 1800/EGPRS1800UL/DL: 1,710/1,805 MHz–1,785/1,880 MHz	1.1885 W (conducted)
	UTRA band 1 UL/DL: 1,920/2,110 MHz–1,980/2,170 MHz	0.2773 W (conducted)
	UTRA Band 8 UL/DL: 880/925 MHz–915/960 MHz	0.2965 W (conducted)
	LTE Band 1 UL/DL: 1,920/2,110 MHz–1,980/2,170 MHz	0.2547 W (conducted)
	LTE Band 3 UL/DL: 1,710/1,805 MHz–1,785/1,880 MHz	0.2624 W (conducted)
	LTE Band 7 UL/DL: 2,500/2,620 MHz–2,570/2,690 MHz	0.2183 W (conducted)
	LTE Band 8 UL/DL: 880/925 MHz–915/960 MHz	0.2636 W (conducted)
	LTE Band 20 UL/DL: 832/791 MHz–2,620/2,620 MHz	0.2399 W (conducted)
	LTE Band 38 UL/DL: 2,570/2,570 MHz–2,620/2,620 MHz	0.2239 W (conducted)
	LTE Band 40 UL/DL: 2,300/2,300 MHz–2,400/2,400 MHz	0.1954 W (conducted)
MmWave Radars	76–79 GHz	79 GHz
Front mmWave radars	76–79 GHz	79 GHz

Numerics

12V Auxiliary Power.....	162
--------------------------	-----

A

A/C Buttons.....	152
A/C Control Panel, Speakers, Dashboard, Control Panels, and Switches.....	174
A/C Function Definitions.....	154
A/C Operation Interface.....	154
A/C System Maintenance.....	180
A/C Vents.....	157
About BYD App.....	157
Access.....	52
Account Registration.....	157
Acoustic Vehicle Alerting System (AVAS).....	133
Adaptive Cruise Control (ACC).....	111
Adjusting Front Seats.....	55
Adjusting Headlight Height.....	67
Adjusting the Rearview Mirror Manually.....	64
Adjusting the Steering Wheel Manually.....	60
Airbag Overview.....	15
Airbag Triggering Conditions and Precautions.....	18
Anti-lock Braking System (ABS)...	141
Anti-theft Alarm System*.....	27
Anti-theft Indicator*.....	27
Around View Monitor (AVM).....	134
Auto Power On/Off*.....	102
Automatic EPB Release upon Vehicle Start.....	105
Automatic Vehicle Washing.....	173
AVH Switch.....	106

B

Battery Leakage Rescue.....	188
Battery Properties.....	91
Battery Usage Tips.....	92
Bill Box.....	158

Blind Spot Assist (BSA).....	127
Bluetooth Call.....	146
Bluetooth Digital Key*.....	46
Brake Fluid.....	179
Break-in Period.....	96
BYD Assistant.....	146

C

Cargo Cover.....	164
Carpet.....	173
Carrying Luggage.....	98
Carrying Luggage in the Passenger Area.....	98
Central Locking.....	69
Centre Console Storage Compartment.....	159
Charge Port Immobiliser System...	90
Charging.....	82
Charging Precautions.....	79
Charging Safety Warnings.....	78
Child Presence Detection (CPD)...	130
Child Protection Lock.....	54
Child Restraint Systems.....	21
Closing the Bonnet.....	178
Coolant.....	178
Curtain Airbags.....	17

D

Dashboard Central Storage Compartment.....	158
Data Collection and Processing.....	28
Declarations of Conformity.....	204
Direct Tyre Pressure Monitoring..	131
Discharging Instructions.....	89
Disclosure of Personal Data to Authorities.....	30
Door Bins.....	158
Doors and Windows.....	174
Driver Attention Warning*.....	130
Driver Monitoring System (DMS)*	129
Driving Instructions.....	108
Driving Safety Systems.....	138

E

Electronic Parking Brake (EPB) Switch.....	104
Emergency Boot Releasing from the Inside.....	51
Emergency Call (E-Call).....	72
Emergency Lane Keeping Assist (ELKA).....	126
Emergency Locking Retractor Function*.....	12
Emergency Shutdown System.....	186
Emergency Unlocking of the Charge Port.....	91
Emergency Vehicle Locking with Mechanical Key.....	52
Engaging EPB Automatically.....	105
Engaging EPB Manually.....	104
EPB Operating Sound.....	106
EPB System Indicator.....	106
Exterior Cleaning.....	172
External Discharging Method.....	90

F

File Management.....	146
Fire Prevention.....	100
Folding Rear Seats.....	56
Folding Side Mirrors.....	65
Forward Collision Warning (FCW) and Automatic Emergency Braking (AEB).....	117
Front Cross Traffic Alert (FCTA) and Front Cross Traffic Brake (FCTB).....	120
Front Cup Holder.....	159
Fuses.....	184

G

Gear Shift Controls.....	104
General Charging Troubleshooting.....	81
Gestures and Responses.....	145
Glass Roof Maintenance*.....	177
Glasses Case*.....	160
Glove Box.....	159

Grab Handles.....	161
-------------------	-----

H

Hazard Warning Light Switch.....	73
High-Voltage Battery.....	91
Hook.....	164

I

If a Tyre Goes Flat.....	190
If Smart Key Battery Is Exhausted.....	186
If the Vehicle Needs Towing.....	188
Indicators/Warning Lights.....	35
Individual Centre and Vehicle Management.....	158
Infotainment Touchscreen.....	144
Initialisation.....	74
Installing Child Restraint Systems.....	23
Instrument Cluster.....	34
Intelligent Charging.....	86
Intelligent Cruise Control (ICC).....	115
Intelligent High Beam Control (IHBC).....	123
Intelligent Power Braking System.....	138
Intelligent Speed Limit Control (ISLC).....	122
Interior Cleaning.....	173
Interior Light Switches.....	74

K

Keeping the Vehicle Safe for Driving.....	97
---	----

L

Lane Departure Assist (LDA).....	124
Leather.....	174
Light Switches.....	65
Loading the Boot.....	99
Locking/Unlocking with Central Locking.....	52

Locking/Unlocking with Mechanical Key.....	48
Locking/Unlocking with Microswitch.....	50
Locking/Unlocking with NFC Key Card.....	51
Locking/Unlocking/Finding the Vehicle with Smart Key.....	49
Low-Voltage Battery.....	94

M

Maintenance Plan.....	168
Maintenance Plan Requirements.....	168
Manual Anti-glare Function.....	64
Manual Vehicle Washing.....	172
Mechanical Key.....	45
Mode Switches.....	70

N

Navigation Bar.....	145
NFC Key Card.....	47
No Drunk Driving.....	97
No Speeding.....	97

O

Odometer Switch.....	70
Opening the Hood.....	178
Opening with Interior Door Handle.....	48
OTA Updates.....	145
Other Instrument Cluster Fault Prompts.....	41

P

Paint Maintenance Tips.....	171
Parking Assist System.....	135
Passengers' Window Switches.....	70
Permanent Vehicle Transfer to Third Parties and Offline Mode.....	30

Phone Projection*	147
PIN to Drive*	27
Power Window Switches*	68
Preparations Before Driving.....	103
Pretensioner and Force Limiter Function*	12

R

Raising/Lowering Windows with Smart Key.....	50
Rear Cup Holder.....	160
Rear Seat Head Supports.....	56
Recycling the High-voltage Battery.....	94
Reflective Vest.....	186
Regular Maintenance.....	170
Releasing EPB manually.....	105
Remote Start*	102
Replacing Wiper Blades.....	63

S

Safety Check Before Driving.....	103
Saving Energy and Extending Vehicle Service Life.....	110
SD Card Slot*	162
Seat Belt Cleaning.....	173
Seat Belt Overview.....	12
Seat Belt Reminders.....	14
Seat Precautions.....	54
Seatback Pockets.....	160
Self-Maintenance.....	175
Sensor Type.....	136
Side Mirror Adjustment.....	65
Smart Charging.....	87
Smart Key.....	44
Snow Chains.....	109
Start-up.....	52
Starting Inside the Vehicle.....	101
Steering Assist Mode Settings.....	61
Steering Wheel Switches.....	58
Sun Visor and Vanity Mirror.....	161
Sunshade Switch*	73

T

Tow Eye.....	189
Traffic Sign Recognition (TSR).....	121
Trailer Towing.....	96
Transponder Mounting Position..	203
Tyres.....	181

U

Unlocking the Boot with Microswitch	51
USB Ports.....	161
Using AC Charging Piles.....	84
Using DC Charging Piles*.....	85
Using Mode 2 Charging Cable*.....	82
Using Seat Belts.....	12
Using Tyre Repair Kit.....	191

V

Vehicle Corrosion Prevention.....	171
Vehicle Data Processing.....	28
Vehicle Fire Rescue.....	187
Vehicle Identification Number (VIN)	201
Vehicle Nameplate.....	202
Vehicle Servicing.....	170
Vehicle Storage Precautions.....	177
Vehicle Use Suggestions.....	97

W

Wading into Water.....	99
Warning Labels.....	202
Washer.....	179
When EPB Release Fails.....	105
Window Lock Switch.....	69
Winter Driving Precautions.....	108
Wiper Blades.....	180
Wiper Switches.....	61
Wireless Phone Charger*.....	163

Y

Your Data Protection Rights.....	31
----------------------------------	----

Abbreviations

Abbreviations

Terminology	Full Name	Terminology	Full Name
ECU	Electronic Control Unit	NFC	Near Field Communication
EDR	Event Data Recorder	ELKA	Emergent Lane Keeping Assist
ECO	Ecology, Conservation, Optimization	NORMAL	Normal
SPORT	Sport	SOC	State of Charge
VTOL	Vehicle to Load	AEB	Automatic Emergency Braking
EPB	Electronic Parking Brake	FCW	Forward Collision Warning
AVH	Auto Vehicle Hold	ACC	Adaptive Cruise Control
ISLC	Intelligent Speed Limit Control	TSR	Traffic Sign Recognition
BSD	Blind Spot Detection	RCTA	Rear Collision Traffic Alert
RCTB	Rear Cross Traffic Braking	RCW	Rear Collision Warning
DOW	Door Open Warning	BSA	Blind Spot Assist
LDA	Lane Departure Assist	LDW	Lane Departure Warning
LDP	Lane Departure Prevention	DMS	Driver Monitoring System
AVAS	Acoustic Vehicle Alerting System	IHBC	Intelligent High Beam Control
AVM	Automatic Vehicle Monitoring	VDC	Vehicle Dynamics Control
TCS	Traction Control System	HHC	Hill Descent Control
HBA	Hydraulic Brake Assist	CDP	Controlled Deceleration for Parking Brake
ESC	Electronic Stability Controller	CST	Comfort Parking
ABS	Anti-lock Braking System	EBD	Electronic Brakeforce Distribution
MAX	Maximum	MIN	Minimum
VIN	Vehicle Identification Number		

BUILD YOUR DREAMS